



 
by WHALEN

LOT NUMBER: _____

DATE PURCHASED: __/__/__

Leet Corner Gaming Desk

Model # SPLS-LTCGD

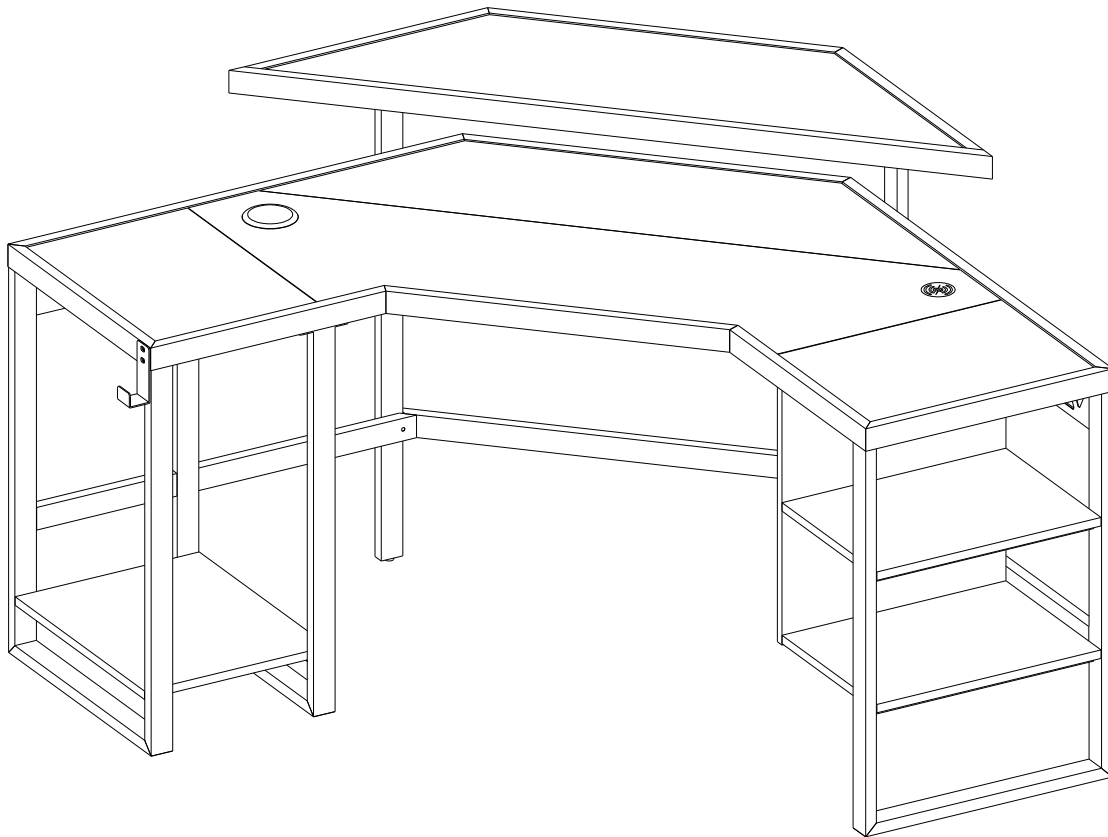

ADULT ASSEMBLY REQUIRED DUE TO THE PRESENCE OF SMALL PARTS, SHARP POINTS, SHARP EDGES AS RECEIVED

If you have any questions regarding assembly or if parts are missing, DO NOT return this item to the store where it was purchased. Please call our toll-free customer service number and have your instructions and parts list ready to provide the model name, part name or factory number:

1-866-942-5362

Pacific Standard Time: 8:30 a.m. - 4:30 p.m., Monday - Friday

Or visit our web site 24 hours a day, 7 days a week for product assistance at

www.whalenfurniture.com

Or e-mail your request to **parts@whalenfurniture.com**


**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**

Date 2021-03-02

Rev. 0001-A

MAXIMUM RECOMMENDED WEIGHT LOADS

 
MANUFACTURER: Whalen Furniture Manufacturing
CATALOG: Leet Corner Gaming Desk
MODEL # SPLS-LTCGD

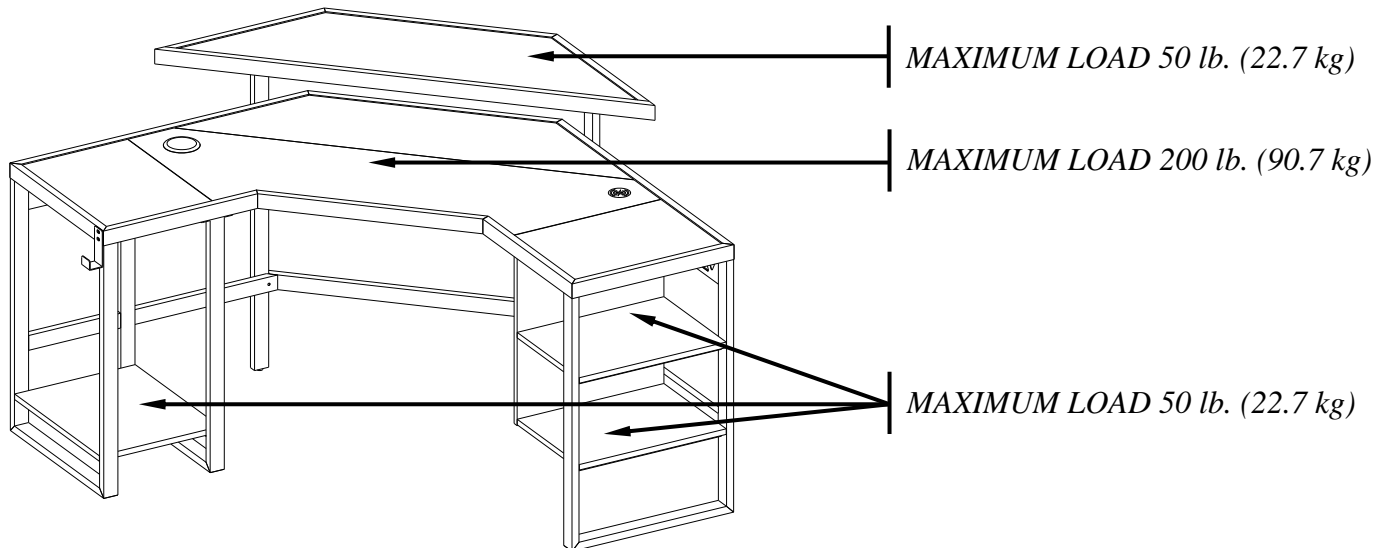

⚠ WARNING

THIS UNIT IS INTENDED ONLY FOR USE WITHIN THE MAXIMUM WEIGHTS INDICATED. USE WITH LOAD HEAVIER THAN THE MAXIMUM WEIGHTS INDICATED MAY RESULT IN INSTABILITY, CAUSING POSSIBLE INJURY.

 CAM LOCK SYSTEM OPERATION

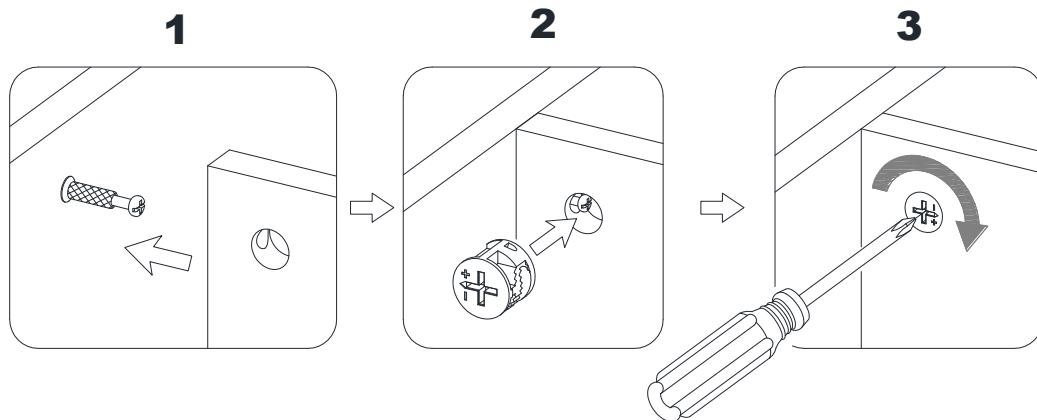

HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

 
1. Screw the Cam Bolt into the pre-drilled small holes on the panel. Connect both panels together; making sure the Cam Bolt goes into the pre-drilled hole at the end of the panel with the Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole in the panel. Make sure the arrow on the Cam Lock is pointed towards the Cam Bolt.
3. Once the Cam Bolt is connected inside the Cam Lock, take a Phillips screwdriver (not included) and tighten the Cam Lock clockwise.

You are now ready to assemble the KD unit.

Low Voltage Lighting Systems User Guide

Please read this user guide before installing and using your Low Voltage Lighting Systems

1. THE COMPONENTS LIST

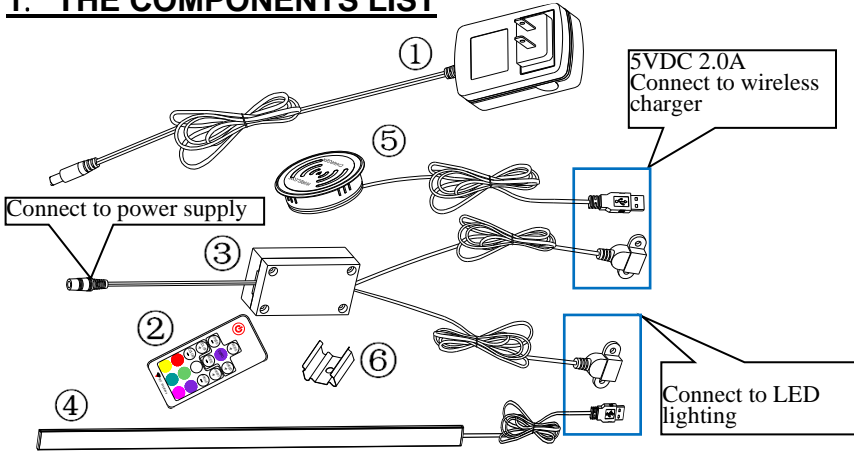

- 1> Class 2 power supply----1pc;
- 2> RF control---1pc;
- 3> LED control box---1pc;
- 4> LED lighting---1pc;
- 5> Wireless Charger---1pc;
- 6> Buckle---2pcs;

2. INSTALLATION

- 1>Screw the buckles onto the top of furniture;
- 2>Clip the LED light bar into the buckles;
- 3>Screw the LED controller on furniture, the controller can't be installed in closed metal parts;
- 4>Connect the connecting line between the parts;
- 5>Insert the Power supply plug to the socket;
- 6>Operate the Remote control to control the light bar (pull out the battery insulation before use).

3. SPECIFICATIONS

- Power supply: Input: 100-240VAC 50/60HZ Output:12V, 2A
- LED lighting: Input: DC 12V Power: Max. 8W
- Wireless Charger: Input:5V Power:5W

4. RF wireless Remote RGB LED Controller Instructions

22 Dynamic Modes	Card Type RF Remote
20 Static Colors	Ultra Slim Design
Very Smooth Effects	Dynamic Demo Mode
Speed Adjustable	Easy Remote Pairing
Brightness Adjustable	Direct Color Selecting

Functions

1.Turn On/Standby

Press this key to turn on unit or switch to standby mode. At power on. Unit will automatically turn on and restore to previous status.

2/9.Dynamic Mode Adjust

Switch to dynamic mode from static color, or switch between dynamic modes.

3/10.Dynamic Speed Adjust

Adjust dynamic playing speed. Press SPEED+ to increase speed and press SPEED- to decrease. The unit will switch to dynamic mode if press this key at static color mode.

4/5.Static Color Adjust

Switch to static color mode from dynamic mode, or switch between static colors.

6.Direct Color Select

 
Shortcut key to static colors. When press the specific color key, LED will play the same static color. The direct colors are included in 'COLOR+' and 'COLOR-' operation.

7/8.Brightness Adjust

Adjust static color brightness, press BRIGHT+ to increase brightness and press BRIGHT- to decrease.

11.Demo Mode

Press this key will switch to Demo mode. At demo mode, it plays red green and blue color dynamic modes in loop.

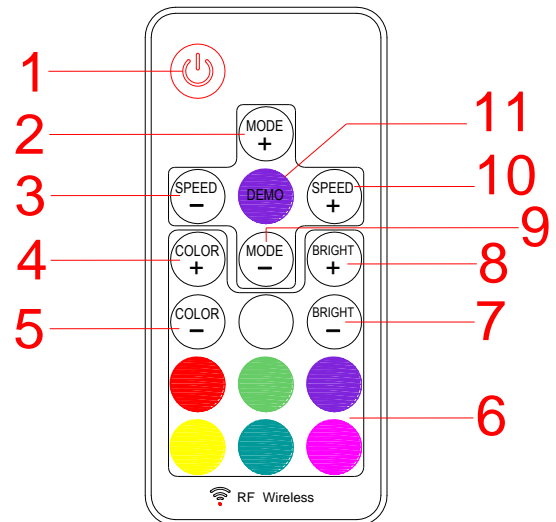


Operation

1. Using Remote Controller

Please pull out the battery insulate tape before using. The RF wireless remote signal can pass through barrier, so it's not necessary to aim at the main unit when operating.

 For proper receiving remote signal, please do not install the main unit in closed metal parts.

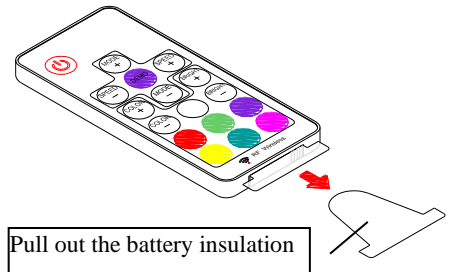

2. Pairing New Remote

The remote and main unit is 1 to 1 paired as default. Further more, main unit can be paired to 3 remote controllers and each remote controller can be paired to any main unit.

Please do the following steps to pair new remote controller:

- 1) Plug off the power of main unit and plug in after 5 seconds.
- 2) Press 'SPEED-' and 'SPEED+' key together in 5 seconds after power on.

After this operation, the main unit will recognize the new remote controller.

Warning: This action cannot be undone!

3. Free Remote Pairing Mode

In some specific cases; the main unit may need to be paired to any remote controllers, please do following steps for free Remote pairing mode:

- 1) Plug off the power of main unit and plug in after 5 seconds.
- 2) Press 'ON/OFF' and 'MODE+' key together in 5 seconds after this operation, the main unit will recognize any remote controller, to pair the main unit back to specific remote, please repeat the 'Pairing New Remote' operation.

4. Switch Output Color Sequence

The controller's default output signal sequence is Common-Green-Red-Blue. If the LED application is in different cable sequence, the direct color keys will not match the LED color. In this case, user can adjust the output signal sequence With following steps;

- 1) Plug off the power of main unit and plug in after 5 seconds,
- 2) Press 'RED' and 'BLUE' color key together in 5 seconds after power on.

With this operation, the output sequence will switch between 6 possible combinations, the sequence will be memorized and it won't change before next same operation.

Specification

Dynamic mode	22 modes
Static Color	20 colors
PWM Grade	256 levels
Brightness Grade	5 levels
Speed Grade	10 levels
Demo mode	Yes
Direct Color Switchable	Yes
Output Color Switchable	Yes, 6 options
Working Voltage	DC 5-24V
Output Current	3×4A peak, 3×2A constant
Remote frequency	433.92MHz
Remote distance	<=6m at open area

5. WARNINGS

- 1> Don't connect to non-original power supply;
- 2> Please install follow installation instruction to avoid damage;
- 3> Indoor use only, working ambient temperature 4°C to 36°C;
- 4> Dry location use only;
- 5> Prevent children or animals from chewing or swallowing parts;
- 6> Return to the dealer for repair service if abnormal, instead of dismantle;
- 7> Do not install the LED controller in closed metal parts;

Wireless charger operation manual

First of all, thanks sincerely for buying this product.

For your safety, please read this manual carefully before using this product.

The first: To protect people from harm and property loss, we make a clear explanation on what you do should obey:

A. Warning! There are concerning the possibilities of death and severe wound: People who use heart-birth-maker should consult your doctor before you use this product; And please leave it at a distance of 50cm from the place where you install your heart-birth-maker, the electromagnetic wave have influence on heart- birth-maker's work.

B. Attention! It may led to heat, fire and electric shock:

- 1) Do not put it into water or any other liquid, Do not make it wet;
- 2) Do not pull the AC adapter out with wet hands, ensure the safety and integrity of the adapter;
- 3) Do not let the dust or other things accumulate on the product and the AC adapter;
- 4) Do not use the product outside the temperature-20 °C to 40 °C;
- 5) Do not charge in places where the sunshine directly or with high temperature;
- 6) Do not use this product in places that are easy to fall, so as not break;
- 7) Do not lay the magnetic card, magnetic record media and precise machine too close to the protect;
- 8) Do not decompose and remold;
- 9) Do not lay anything between the non-connection charging pad and the charging machine;
- 10) Can not bring cell phone case / shell charge;
- 11) Do not surpass the rated value when using the plug and other wiring layout;
- 12) Do not make any breakage on the AC adapter, please make sure you connect the AC adapter fully and take the AC adapter off the plug when it's not used;
- 13) Do not use travel converter;
- 14) Please teach your children, the let them use.

The second: Product advantages

- 1) The product is of high sensitivity, intelligent recognition, put a charge;
After charging, automatically enter standby mode of the product;
- 2) Charge for all Qi compliant product;
- 3) Efficiency can reach more than 70%, less heat;
- 4) In the process of charging can be free to pick up, answer the phone, freeing discharge or charge;

The third wireless charger's charging method

- 1) Please connect the product to the AC adapter, red light is on, enters the standby status;
- 2) Please lay the charge device directly on this product label indicating area (without direction), green light is on, enters the charging status;
- 3) When the charging equipment complete, can be taken away; red light is on again, enters the standby status.

The fourth: product features

 
- 1> Main functions: wireless charging transmitter;
- 2>Standard version: WPC-1.2.3;
- 3>Products applicable: all wireless charging equipment accorded with Qi standard;
- 4>Charging type: one-on-one charge corresponding area;
- 5>The input voltage: DC:5V/2A;
- 6>Output: DC 5V 1000MA;
- 7>Launch distance:4 to 6 mm;
- 8>Conversion efficiency: $\geq 70\%$;
- 9>Charging methods: induction model;
- 10>Working frequency:110-205 KHz;
- 11>Accessories/components name: Wireless charging pad, AC adapter.

This device complies with part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Installing the battery

The battery is supplied with the remote control. The first thing to do with the remote control is to remove the plastic sheet insulated the battery. For replacement battery, use lithium-based CR2025 battery. Please follow the sequence below to replace the battery.


- Take out the battery bracket.

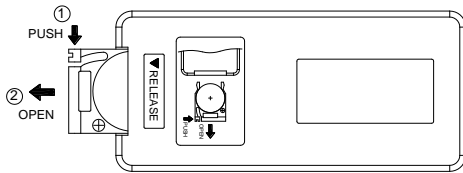

 - Insert the battery with the button side into the battery bracket, making sure the battery is firmly seated.

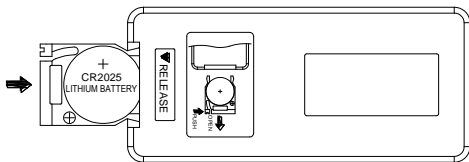

 - Press the battery bracket into the remote control, making sure it snaps into position.

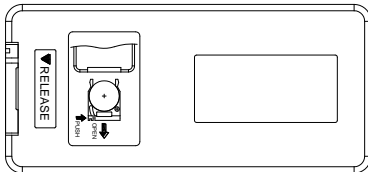


- Turn the remote over and aim it towards the lighting systems unit.
- If nothing appears to happen, check to make sure the battery is installed correctly, and try again.

⚠ WARNING: Do not ingest batteries.


1. Non-rechargeable batteries are not to be recharged.
2. Batteries are to be inserted with the correct polarity.
3. Exhausted batteries are to be removed from the product.
4. Always purchase the correct size and grade of battery most suitable for the intended use.
5. Replace all batteries of a set at the same time.
6. Clean the battery contacts and also those of the device prior to battery installation.
7. Remove batteries from equipment which is not to be used for an extended period of time.

 NOTE:
Battery disposal
Please always dispose
of batteries at a
suitable recycling
point.




Parts and Hardware List

 
Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

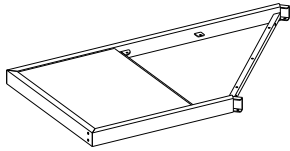


A- Left Top Frame (Qty. 1)

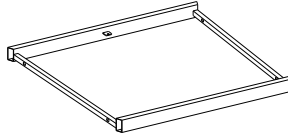 


B- Corner Top Frame (Qty. 1)

 


C- Right Top Frame (Qty. 1)

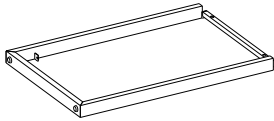 


D- Left Outer Frame (Qty. 1)

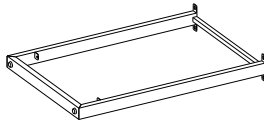 


E- Left Middle Frame (Qty. 1)

 


F- Right Side Frame (Qty. 1)

 


G- Hutch Top (Qty. 1)

 


H- Left Back Short Stretcher (Qty. 1)

 


I- Left Back Long Stretcher (Qty. 1)

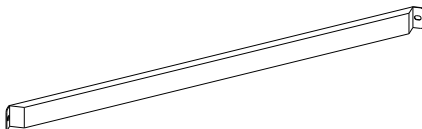 


J- Middle Back Stretcher (Qty. 1)

 


K- Right Back Stretcher (Qty. 1)

 


L- Corner Left Post (Qty. 1)

 


M- Corner Right Post (Qty. 1)

 

N- Left Cord Management (Qty. 1)

 

O- Right Cord Management (Qty. 1)

 

P- Middle Cord Management (Qty. 1)



 
Q- Light Support (Qty. 1)




R- Accessory Hook (Qty. 1)




S- Corner Mouse Pad (Qty. 1)

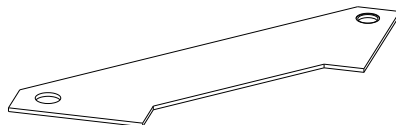


T- Corner Front Top Panel (Qty. 1)

 


U- Corner Back Top Panel (Qty. 1)

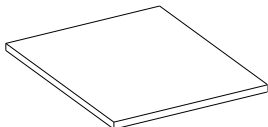 

V- Left Bottom Panel (Qty. 1)

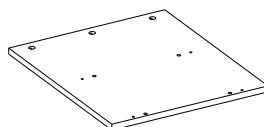 


W- Right Inner Panel (Qty. 1)

 


X- Right Shelf (Qty. 2)

Parts and Hardware List

 
Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

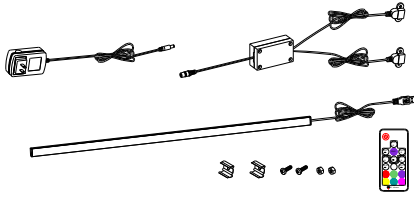

 
Y- Plug of Light Fixture with Remote Control and Battery (Qty. 1)




Z- Wireless Charger (Qty. 1)

 

 (1) 1/4" x 12 mm Bolt
(Qty. 36+1 extra)



 
(2) 1/4" x 25 mm Bolt
(Qty. 4+1 extra)




(3) 1/4" x 32 mm Bolt
(Qty. 10+1 extra)



 
(4) Lock Washer
(Qty. 28+1 extra)



 
(5) Flat Washer
(Qty. 28+1 extra)



 
(6) Hex Nut
(Qty. 2+1 extra)



 
(7) Cam Lock
(Qty. 7+1 extra)



 
(8) Cam Tapping Bolt
(Qty. 4+1 extra)



 
(9) Cam Bolt
(Qty. 3+1 extra)



 (10) M8 x 30 mm Wood Dowel
(Qty. 4+1 extra)



 (11) M3.5 x 12 mm Screw
(Qty. 18+1 extra)



(12) M4 x 25 mm Screw
(Qty. 10+1 extra)



(13) Metal Bracket (Qty. 1)



(14) Cord Clip (Qty. 2)



 
(15) Cup Holder (Qty. 1)



Allen Wrench (Qty. 2)


Tools required: Allen wrench (provided) and Phillips screwdriver (not provided).

Left Side Desk Assembling

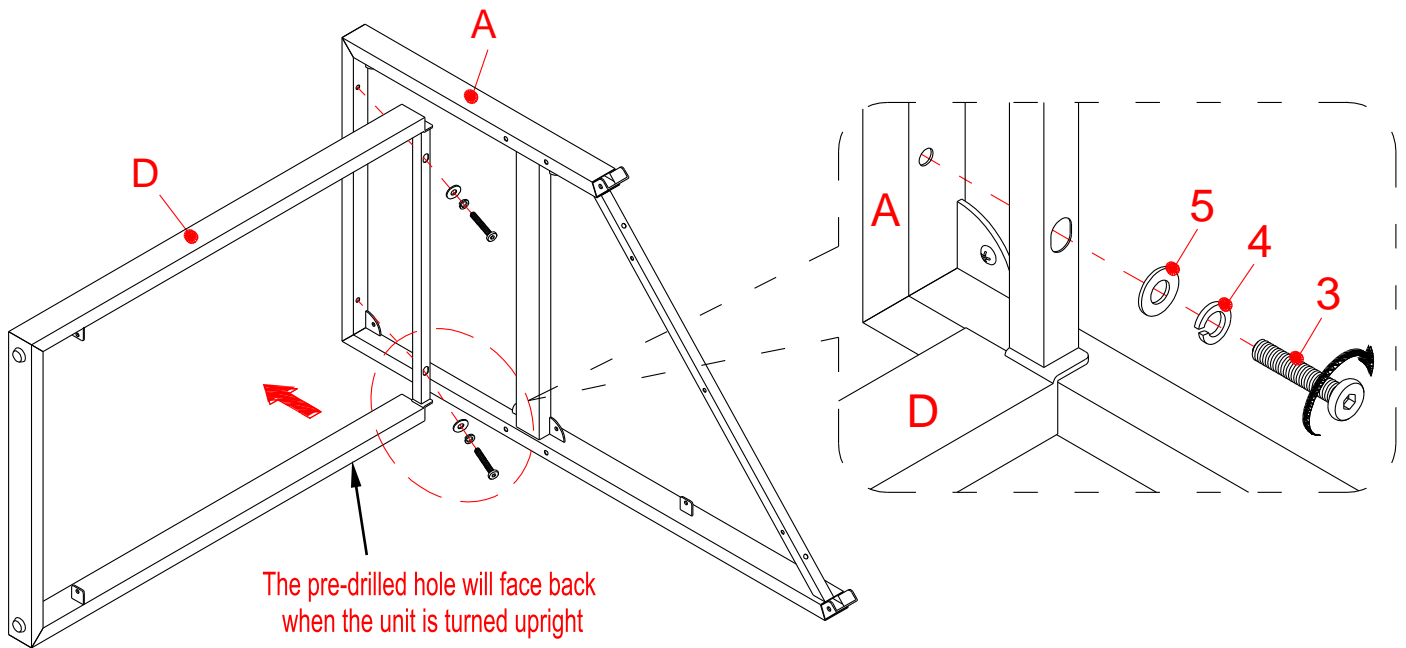


NOTE: Please do not fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

 1. Unpack the unit and confirm that you have all the hardware and required parts. Assemble the unit on a carpeted floor or the empty carton to avoid any scratch.
2. Attach the Left Outer Frame (D) to the Left Top Frame (A) with two 32 mm Bolts (3) and two Washers (4 and 5).

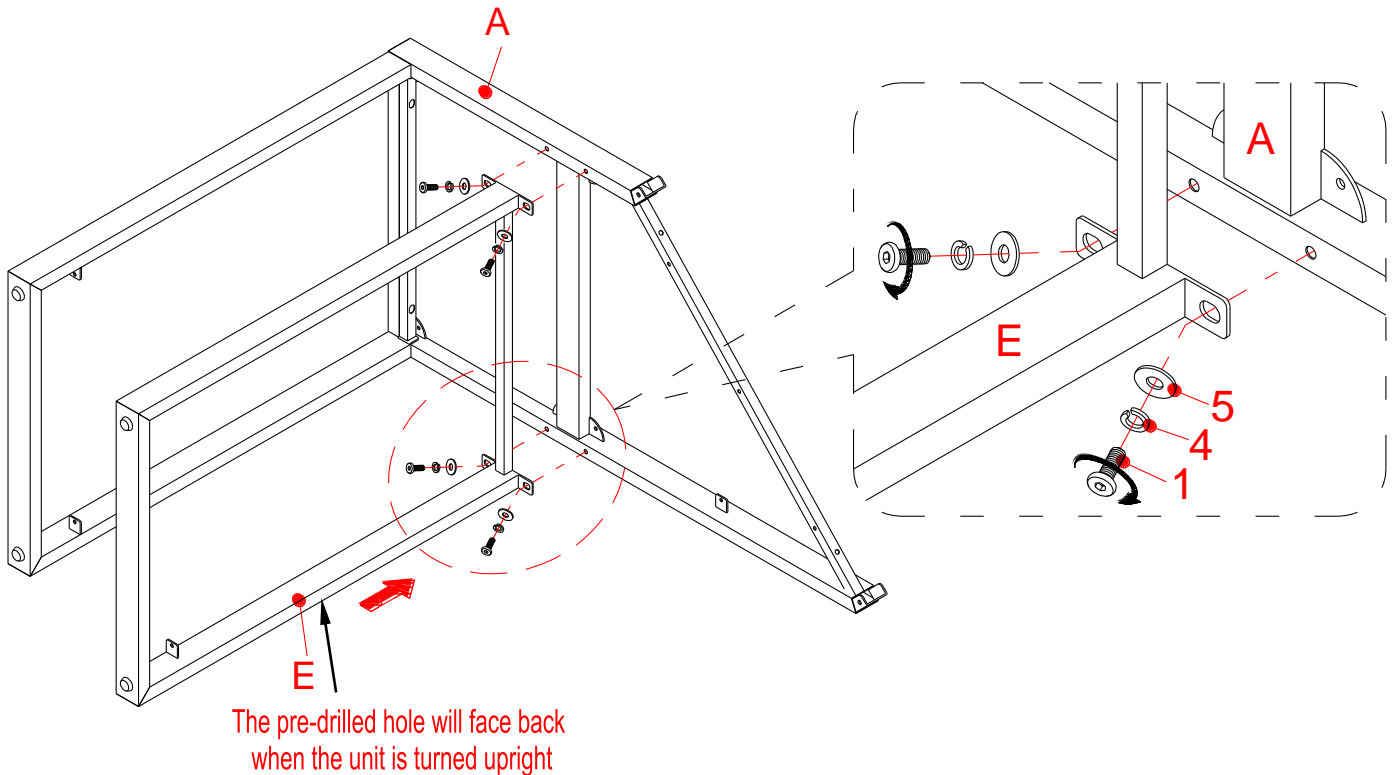


3. Attach the Left Middle Frame (E) to the Left Top Frame (A) with four 12 mm Bolts (1) and four Washers (4 and 5).

 Left Side Desk Assembling

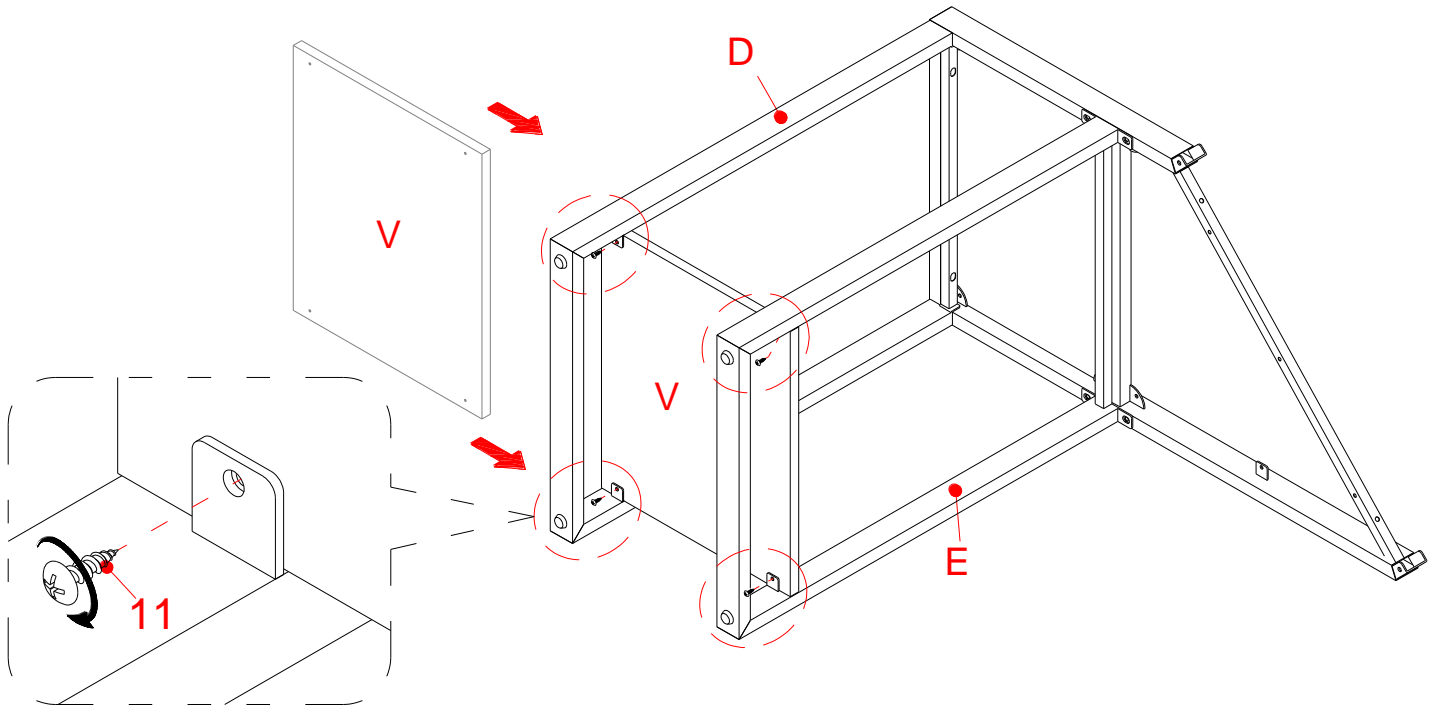


 - Using the pilot holes as a guide, fasten the Left Bottom Panel (V) to the Left Frames (D and E) with four 12 mm Screws (11).

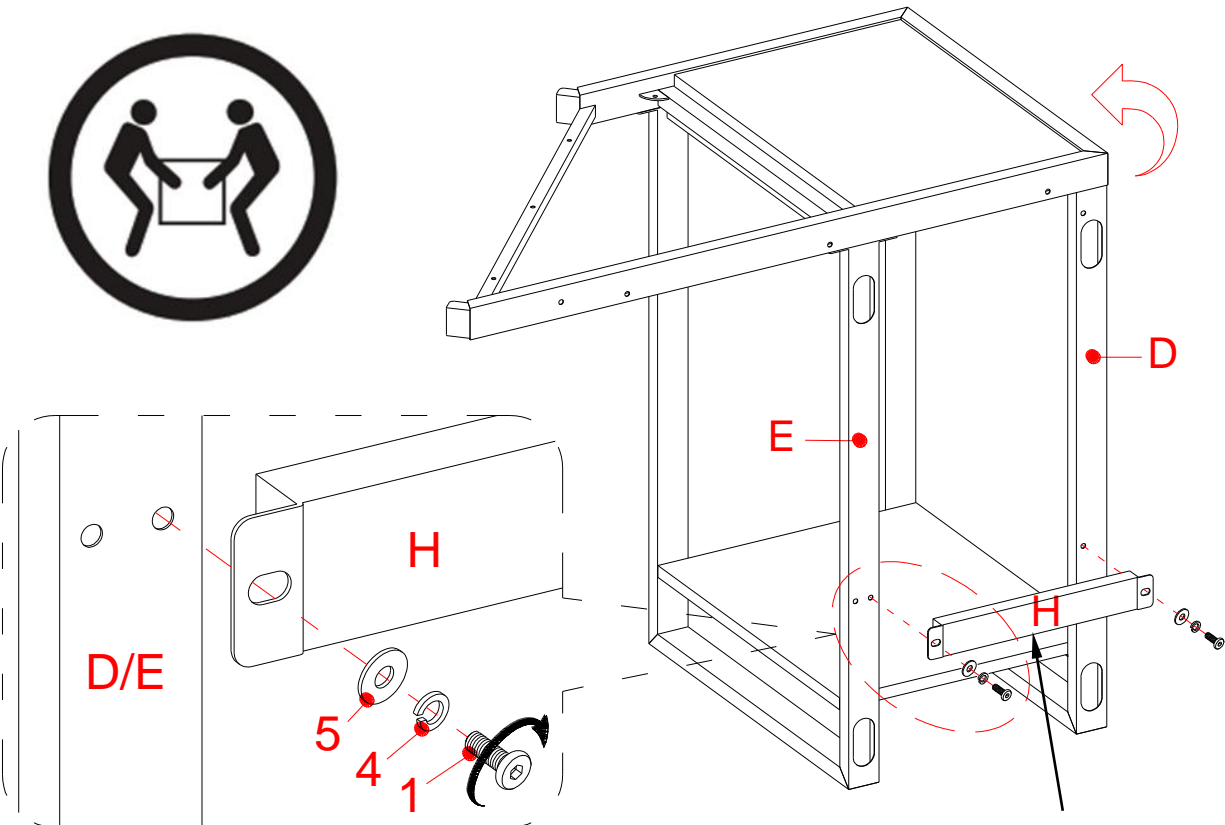


- Stand the assembled unit upright.
- Attach the Left Back Short Stretcher (H) to the Left Frames (D and E) with two 12 mm Bolts (1) and two Washers (4 and 5).

 Left Side Desk Assembling

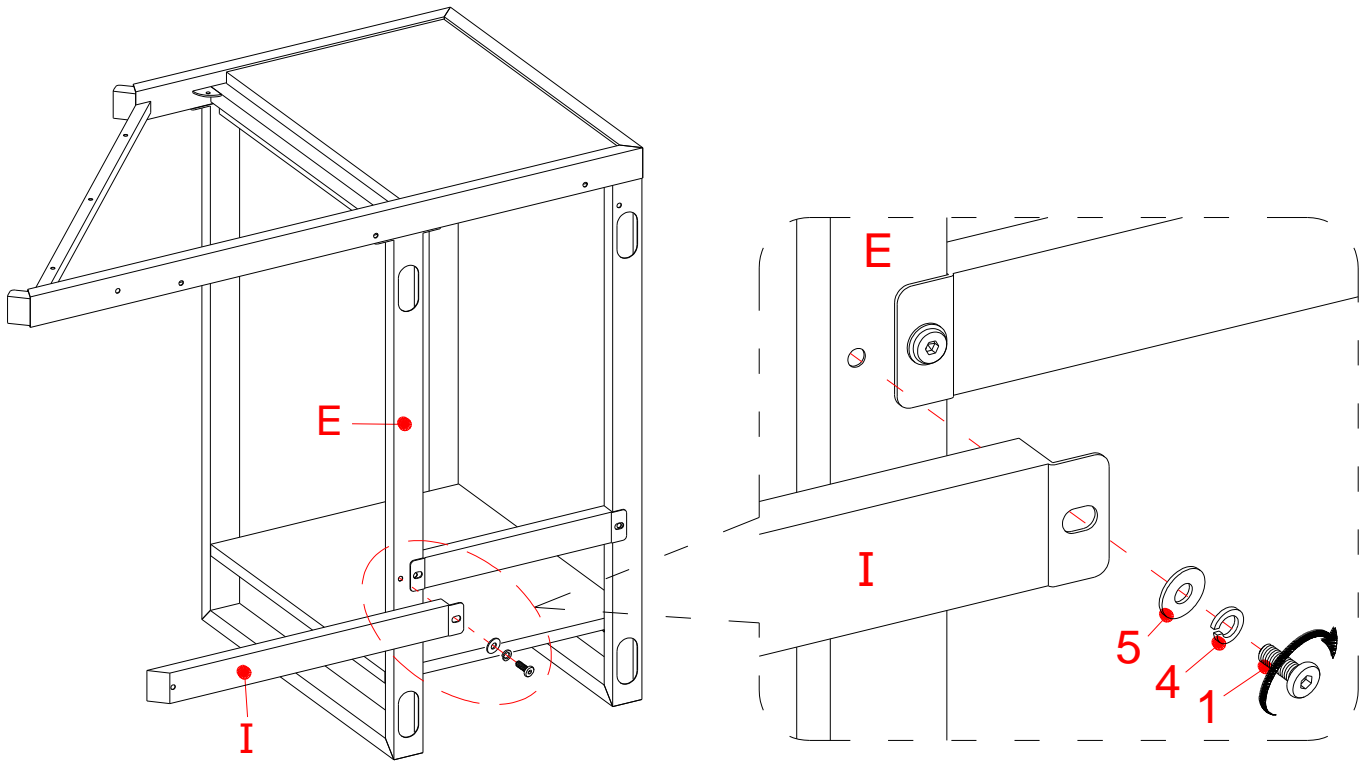


7. Attach the Left Back Long Stretcher (I) to the Left Middle Frame (E) with one 12 mm Bolt (1) and the Washers (4 and 5).

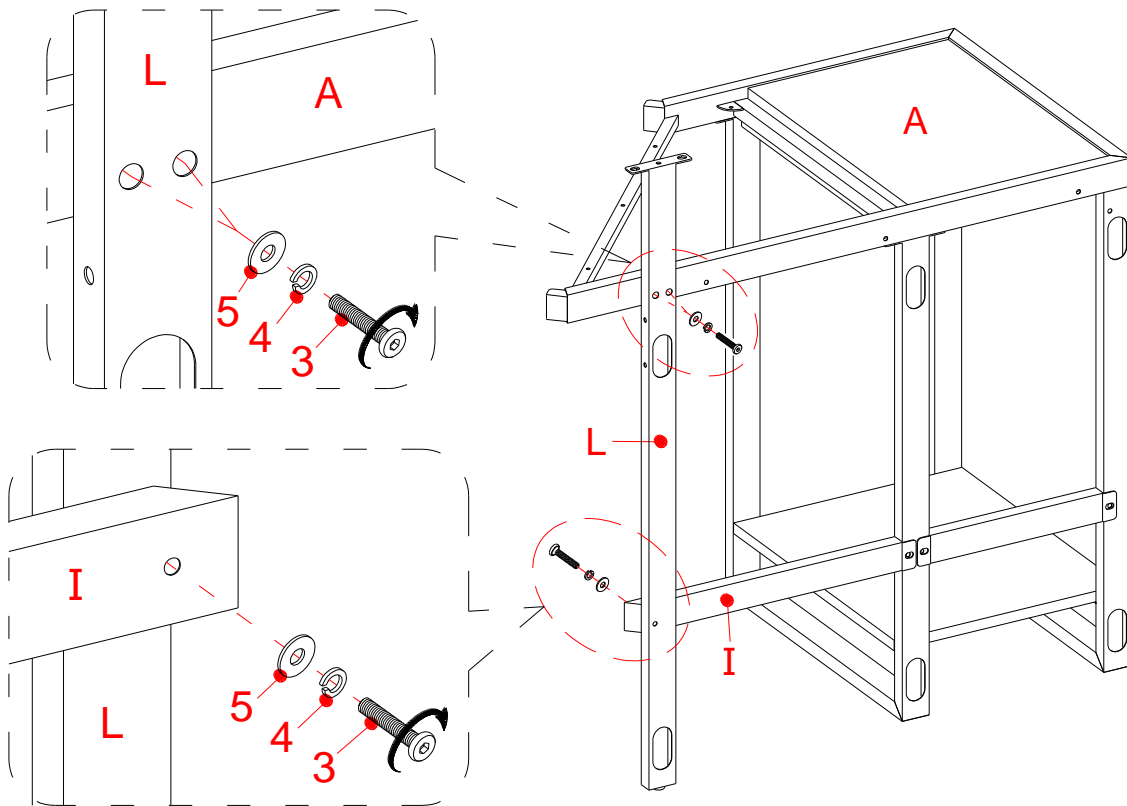 



8. Attach the Corner Left Post (L) to the Left Top Frame (A) and the Left Back Long Stretcher (I) with three 32 mm Bolts (3) and three Washers (4 and 5).

 Right Side Desk Assembling

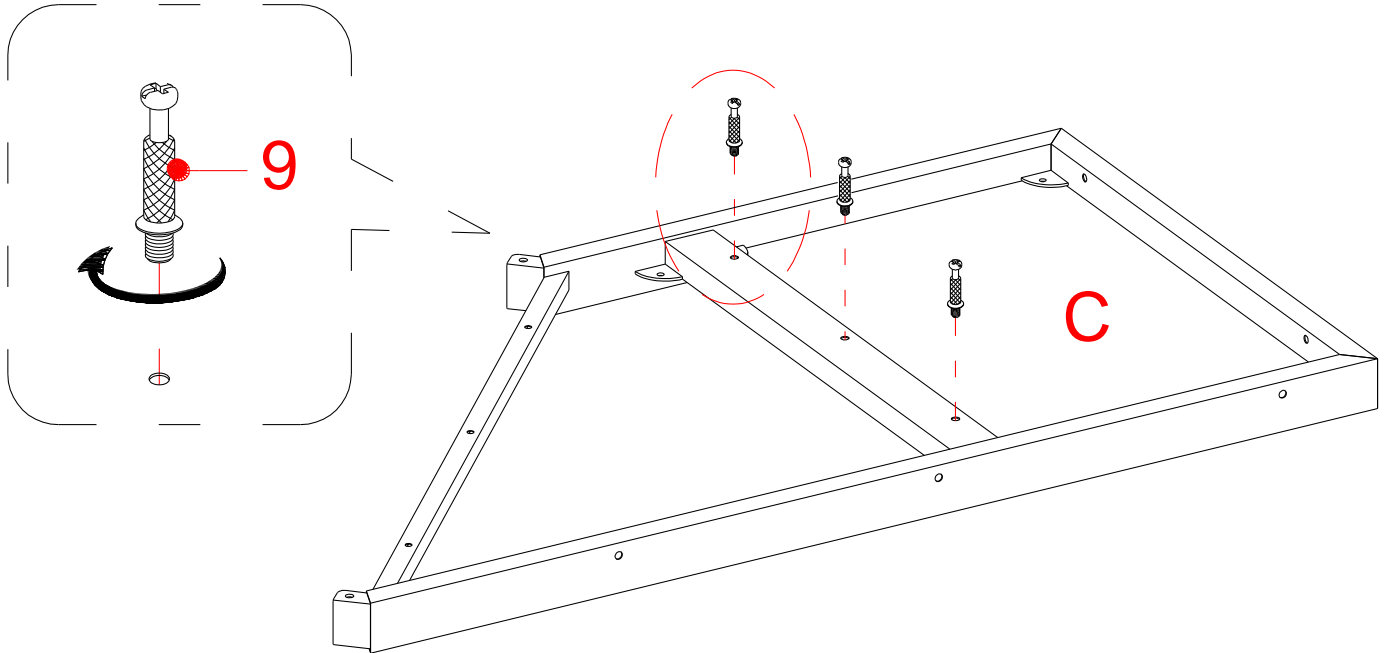

9. Securely screw the Cam Bolts (9) into the designated small holes on the Right Top Frame (C) with a Phillips screwdriver. DO NOT overtighten the Cam Bolts.

  
NOTE: Screw-in cam bolts must be screwed down flush.

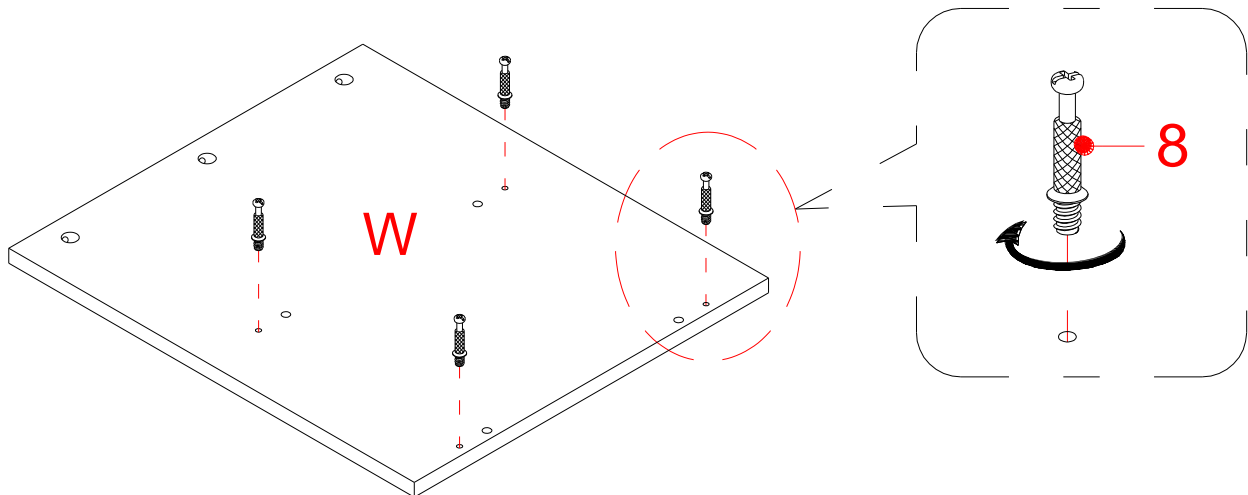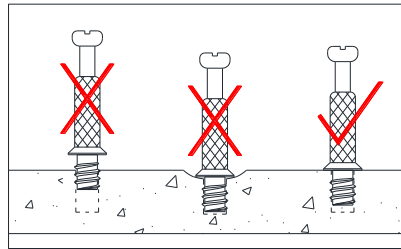


10. Securely screw the Cam Tapping Bolts (8) into the designated small holes on the Right Inner Panel (W) with a Phillips screwdriver. DO NOT overtighten the Cam Bolts.

NOTE: Screw-in cam bolts must be screwed down flush.

 Right Side Desk Assembling

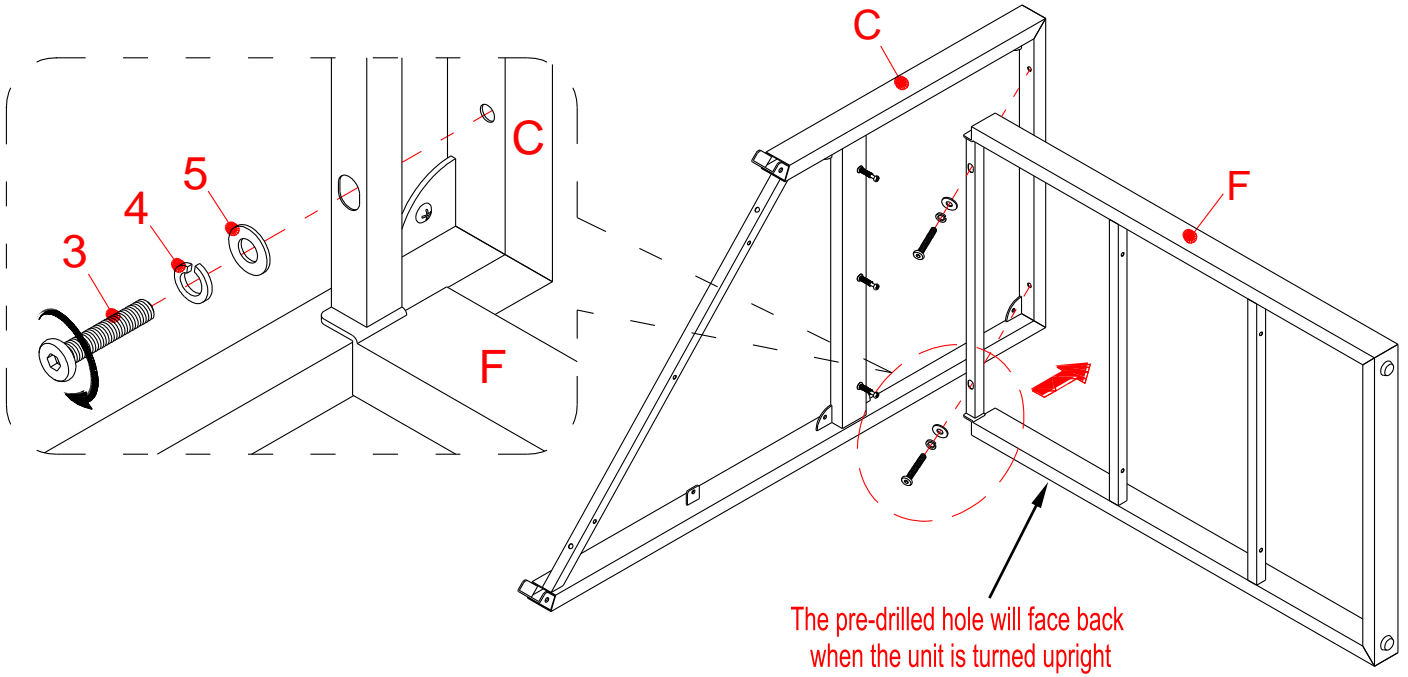


11. Attach the Right Side Frame (F) to the Right Top Frame (C) with two 32 mm Bolts (3) and two Washers (4 and 5).

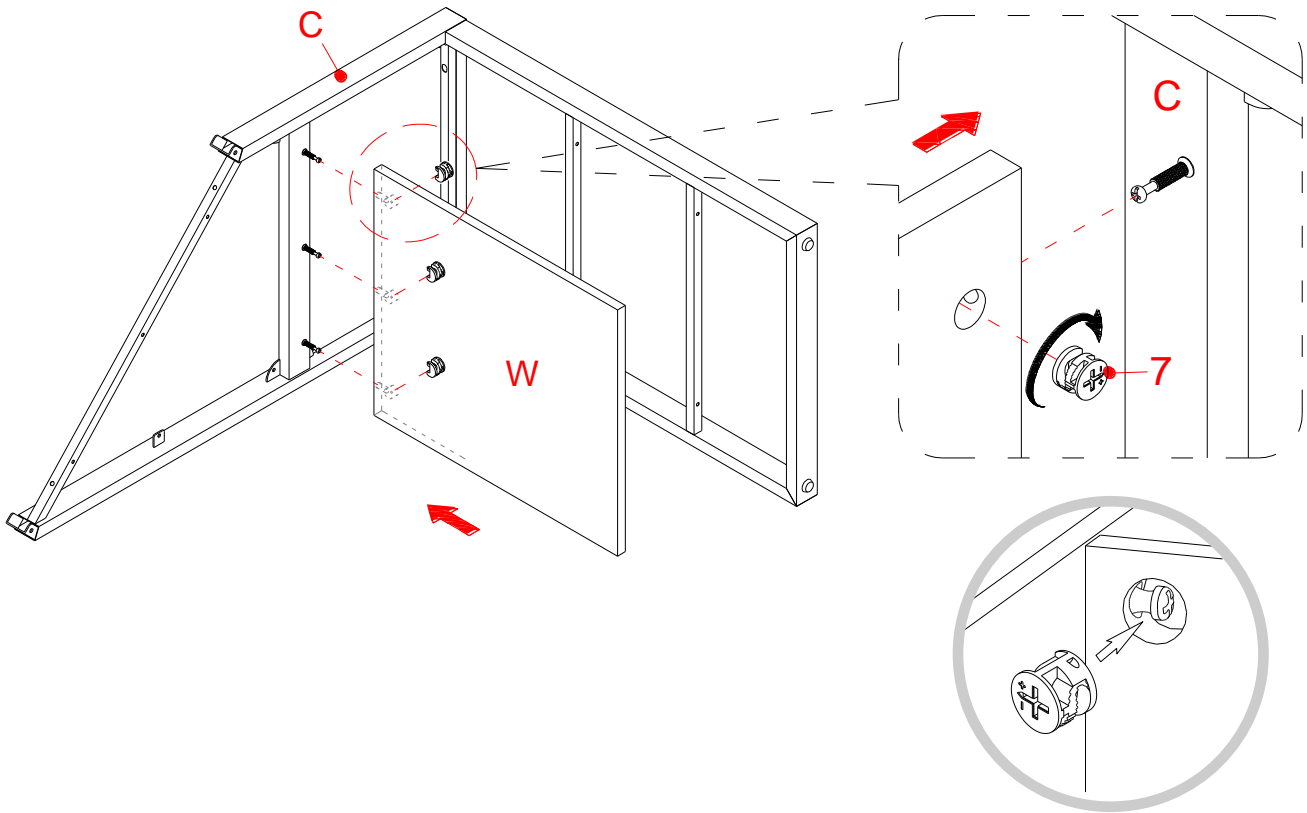 


12. Attach the Right Inner Panel (W) to the Right Top Frame (C) by engaging the Cam Locks (7). (Refer to page 3 on Cam Lock system operation supplement).

 Right Side Desk Assembling

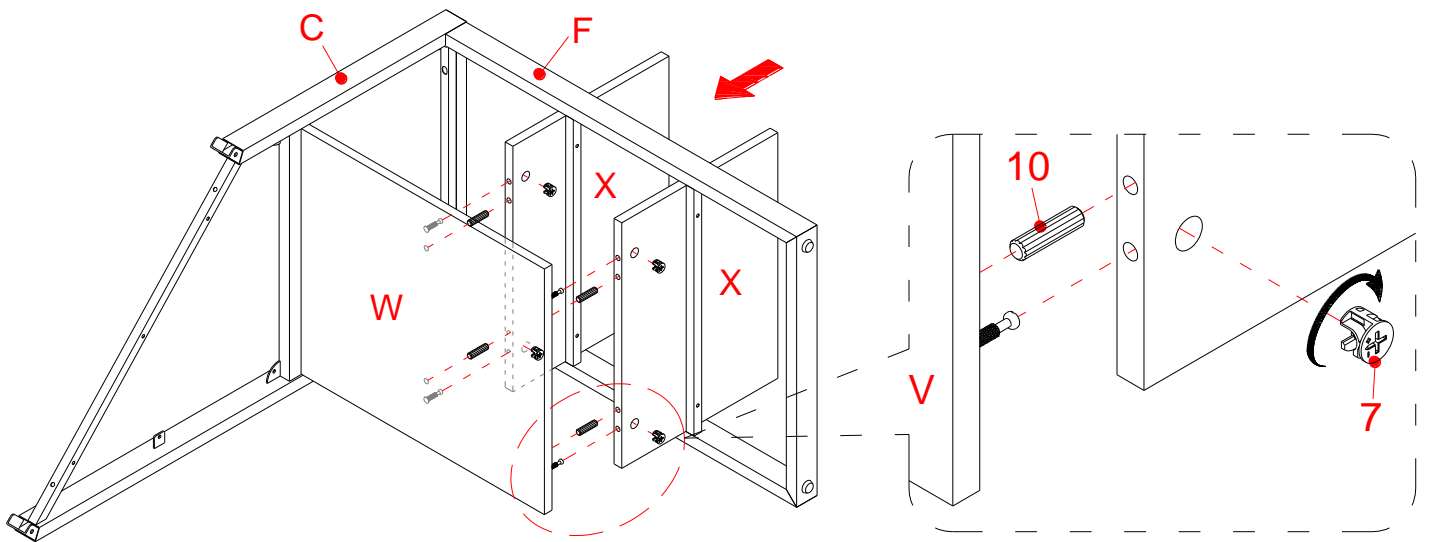


13. Attach two Right Shelves (X) to the Right Inner Panel (W) by engaging four Cam Locks (7) and four 30 mm Wood Dowels (10). (Refer to page 3 on Cam Lock system operation supplement).

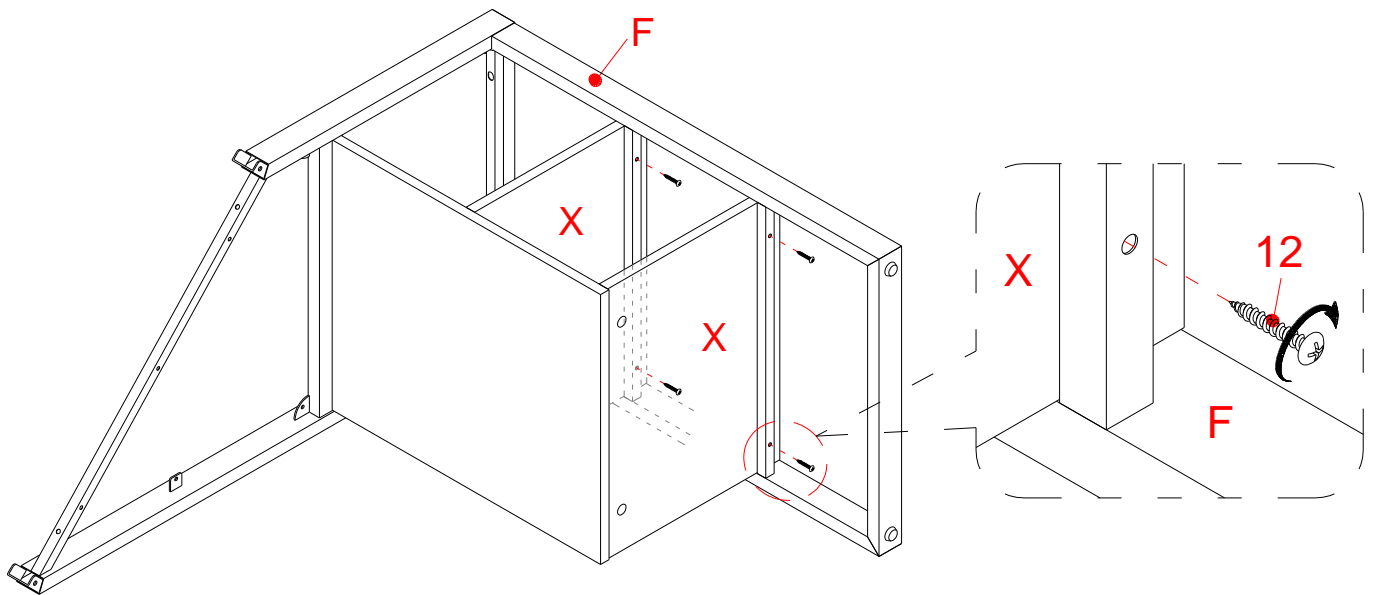 


14. Secure the Right Shelves (X) to the rails of the Right Side Frame (F) with four 25 mm Screws (12).

 Right Side Desk Assembling

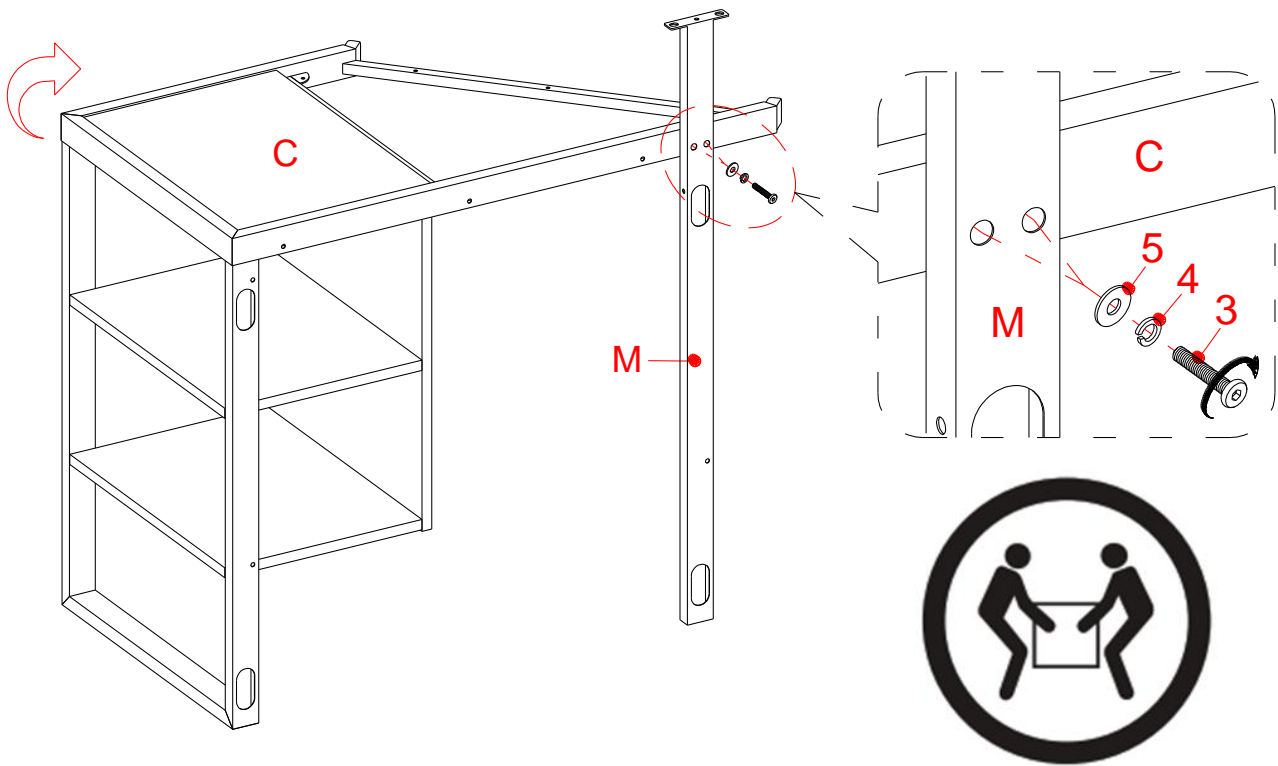

15. Stand the assembled unit upright.

 
16. Attach the Corner Right Post (M) to the Right Top Frame (C) with two 32 mm Bolts (3) and two Washers (4 and 5).

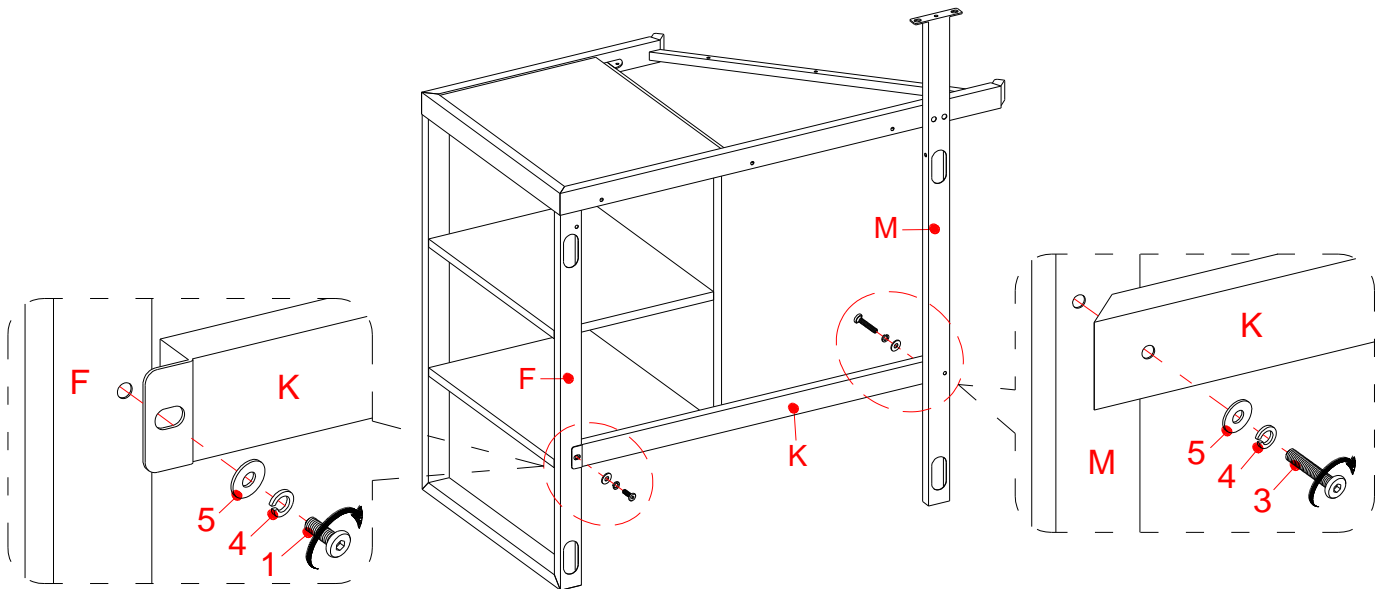


17. Fasten the Right Back Stretcher (K) to the Corner Right Post (M) with the 32 mm Bolt (3) and the Washers (4 and 5).

18. Secure the Right Back Stretcher (K) to the Right Side Frame (F) with the 12 mm Bolt (1) and the Washers (4 and 5).

 Corner Assembling

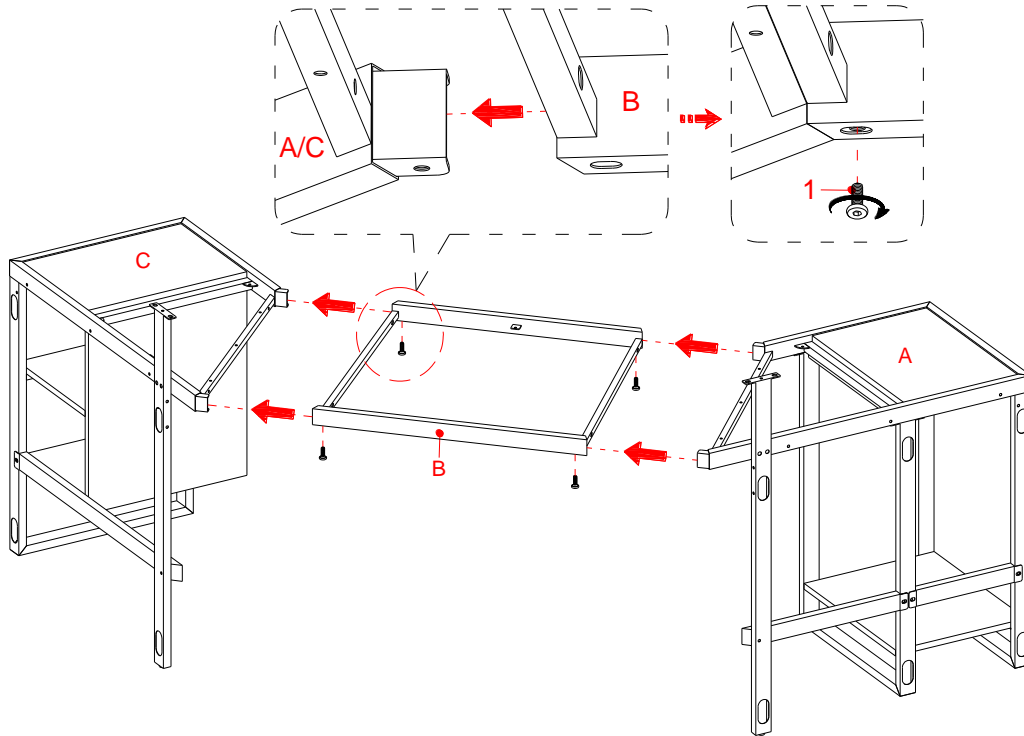


 19. Fit the Corner Top Frame (B) onto the U-shaped brackets on the Top Frames (A and C) and fasten them into place with four 12 mm Bolts (1).

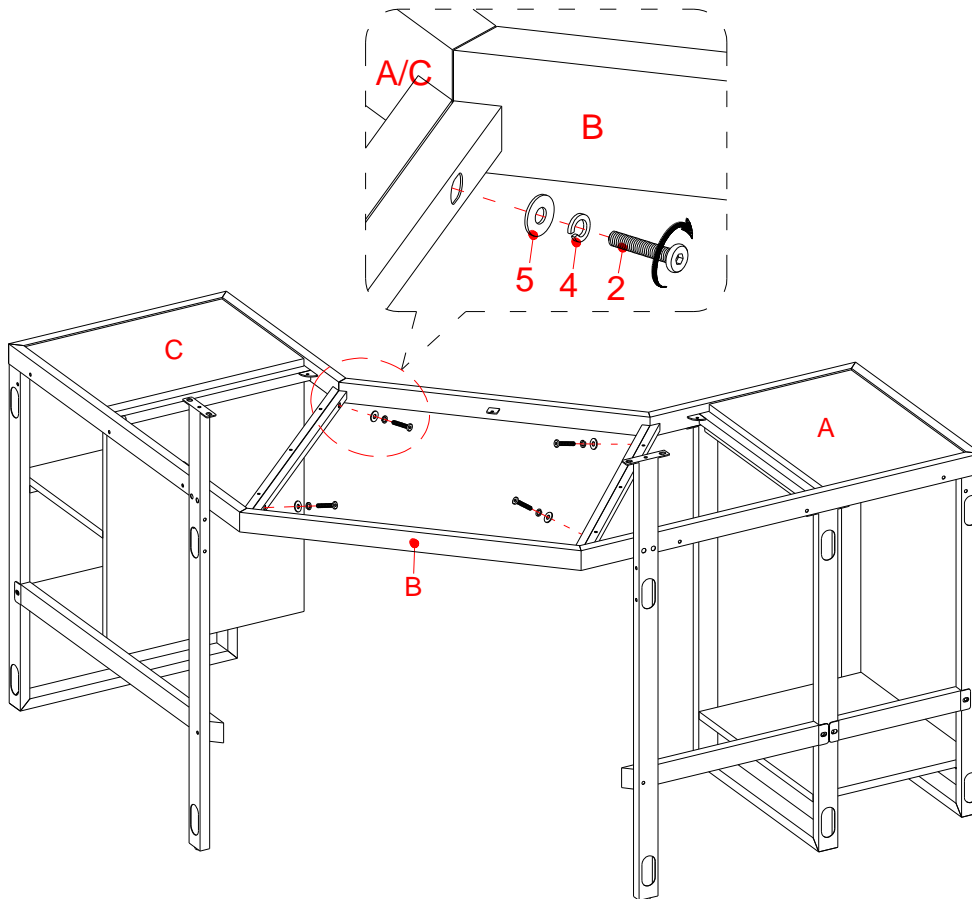


20. Fasten the Corner Top Frame (B) to the Top Frames (A and C) with four 25 mm Bolts (2) and four Washers (4 and 5).

 Corner Assembling

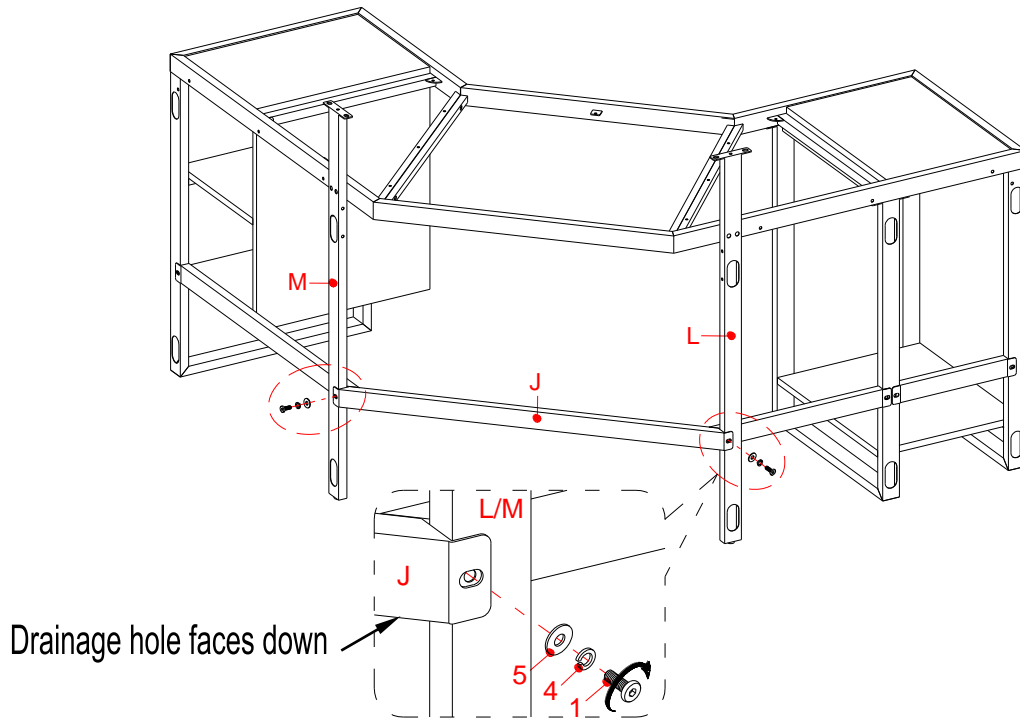


21. Attach the Middle Back Stretcher (J) to the Left and Right Posts (L and M) with two 12 mm Bolts (1) and two Washers (4 and 5).

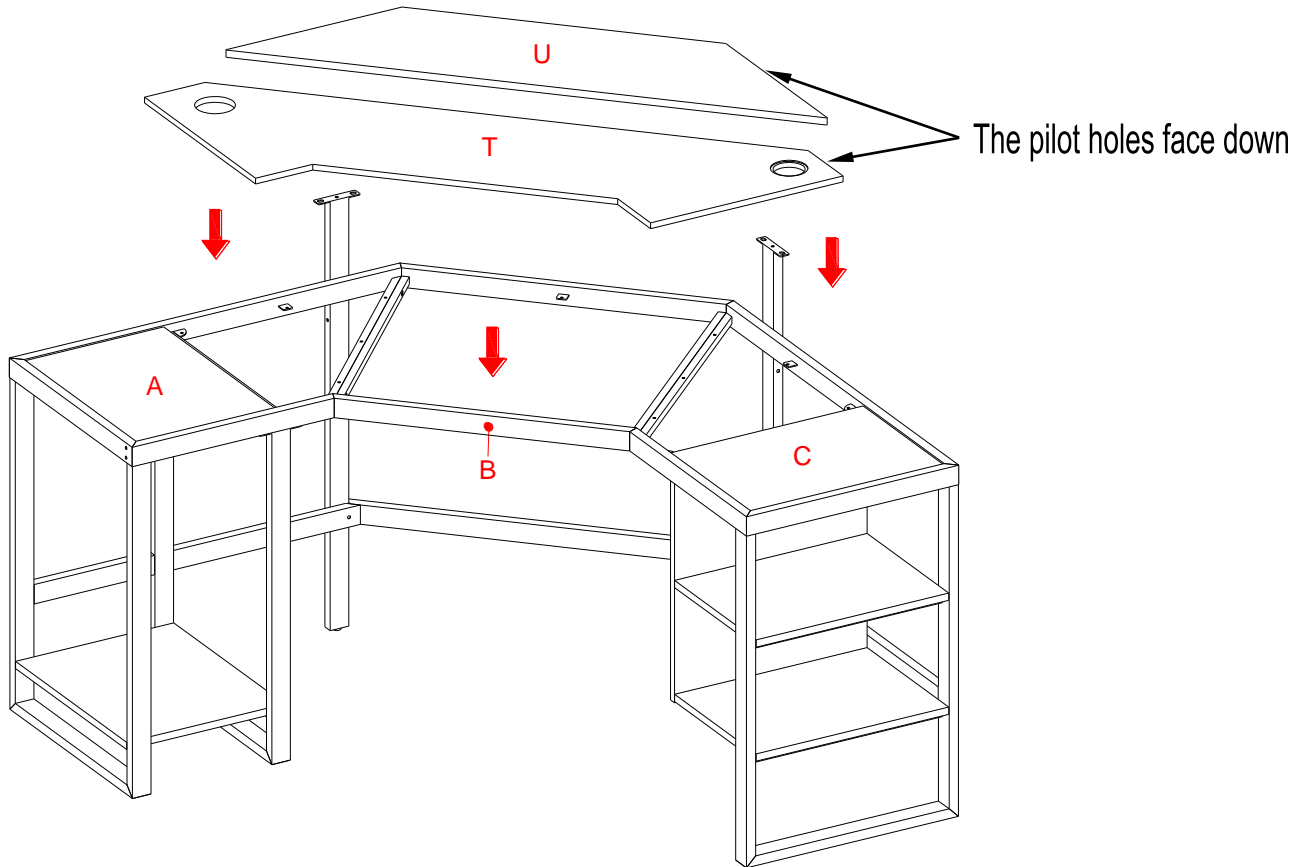 


22. Position the Corner Top Panels (T and U) onto the top of the assembled unit.

 Corner Assembling

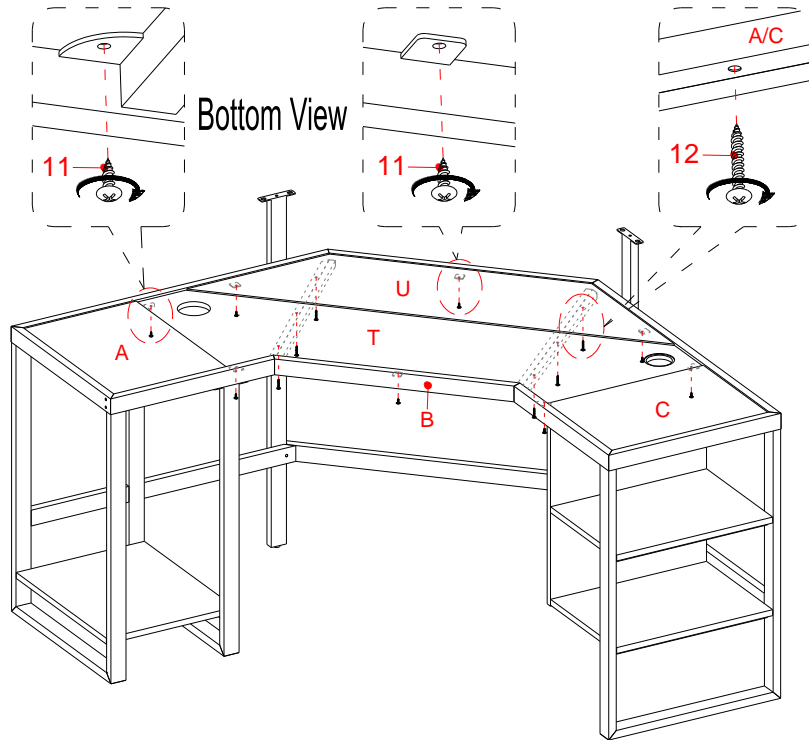


23. Fasten the Corner Top Panels (T and U) to the rails of Top Frames (A and C) with six 25 mm Screws (12).

 24. Secure the Corner Top Panels (T and U) to the metal tabs with eight 12 mm Screws (11).

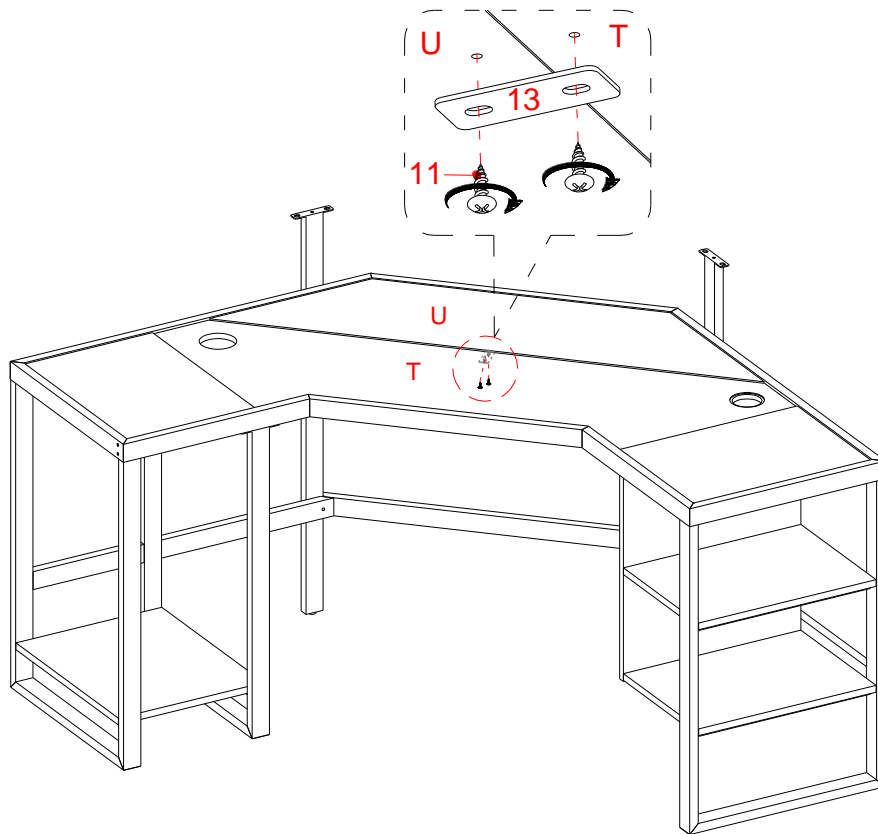


25. Using the pilot holes as a guide, Attach the Metal Bracket (13) in place with two 12 mm Screws (11).

 Corner Assembling

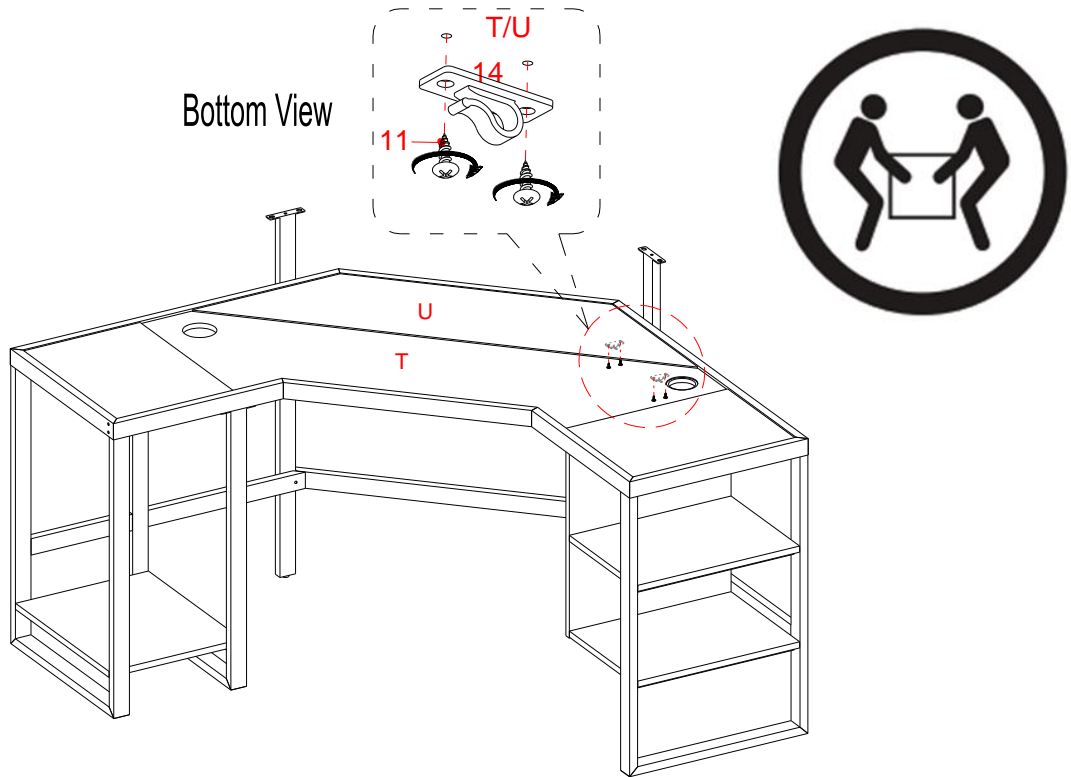


 26. Using the pilot holes as a guide, Attach two Cord Clips (14) to the Top Panels (T and U) with two 12 mm Screws (11) in each.

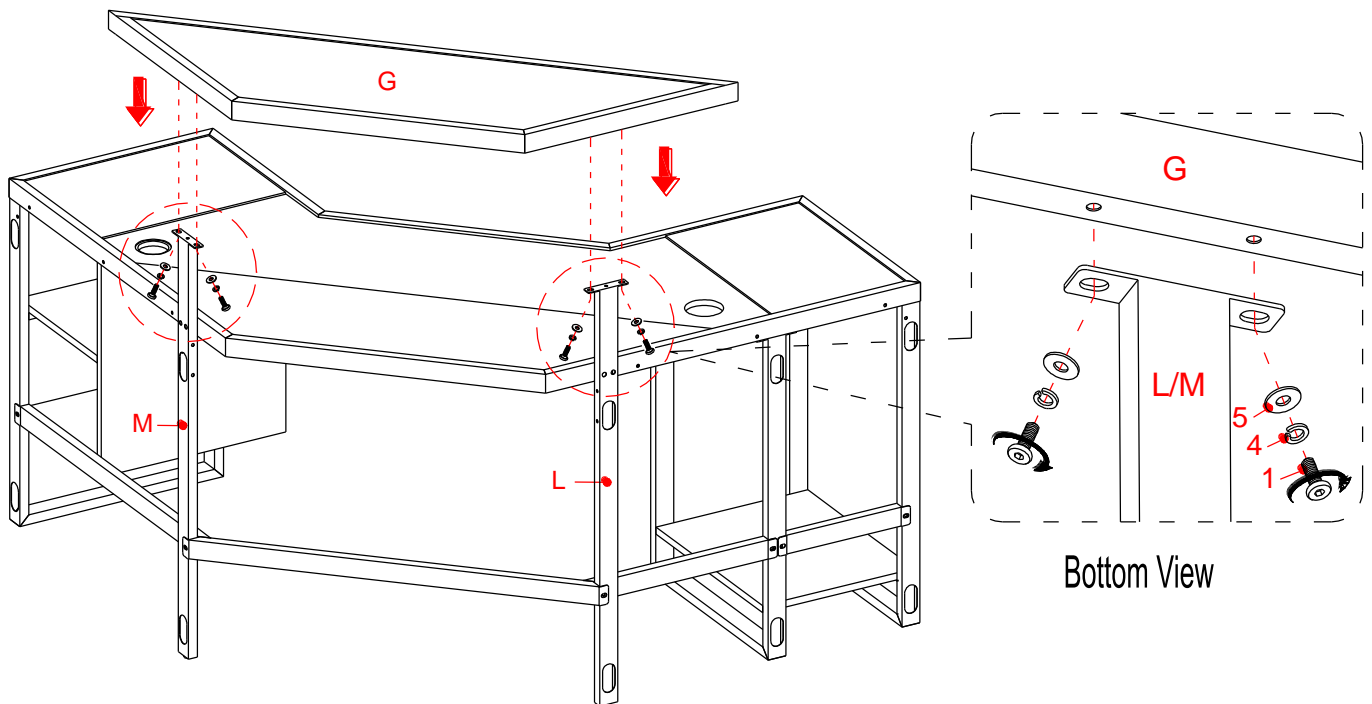


27. Attach the Hutch Top (G) to the Left and Right Posts (L and M) with four 12 mm Bolts (1) and four Washers (4 and 5).

 Assembly Instructions

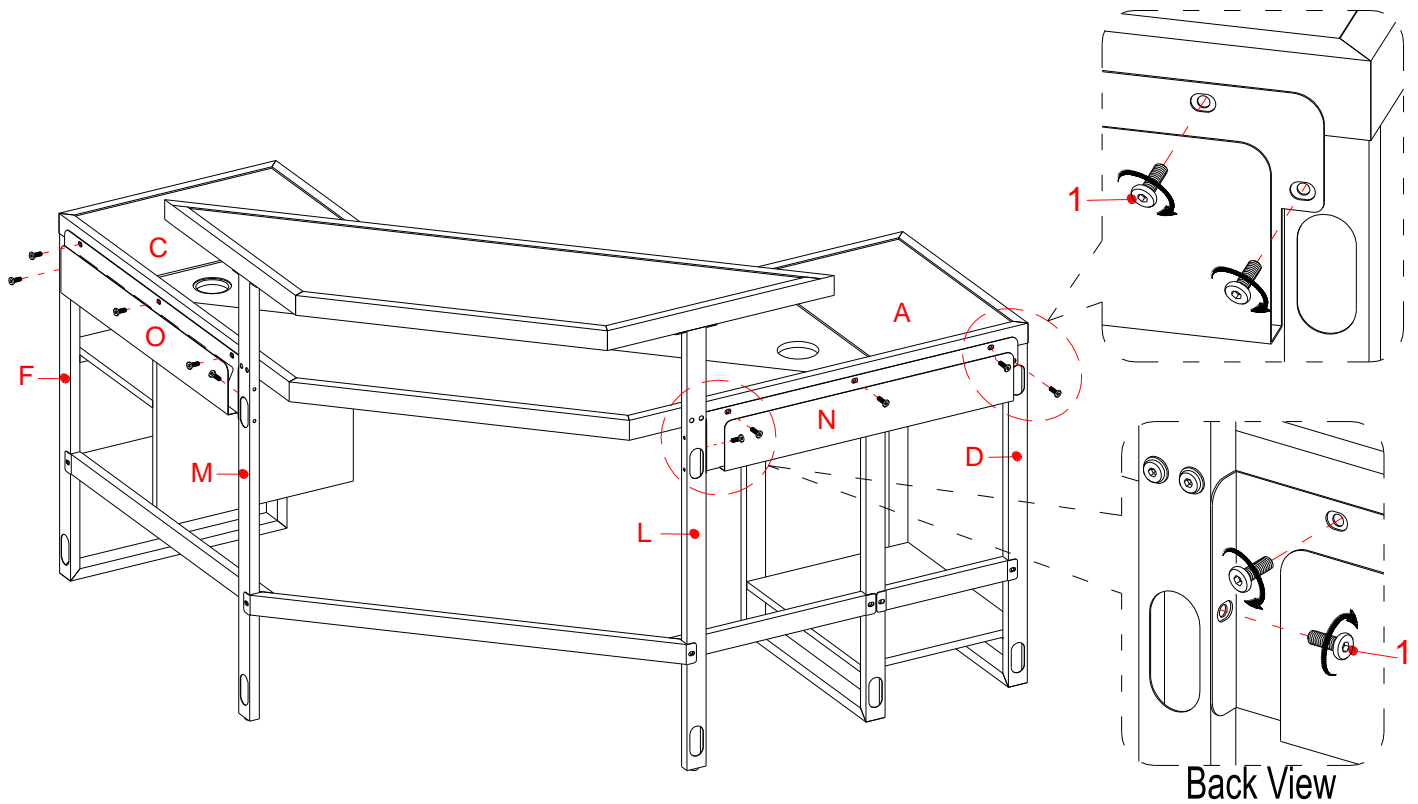


28. Fasten the Left Cord Management (N) to the Left Side assembly with five 12 mm Bolts (1).

 29. Secure the Right Cord Management (O) to the Right Side assembly with five 12 mm Bolts (1).

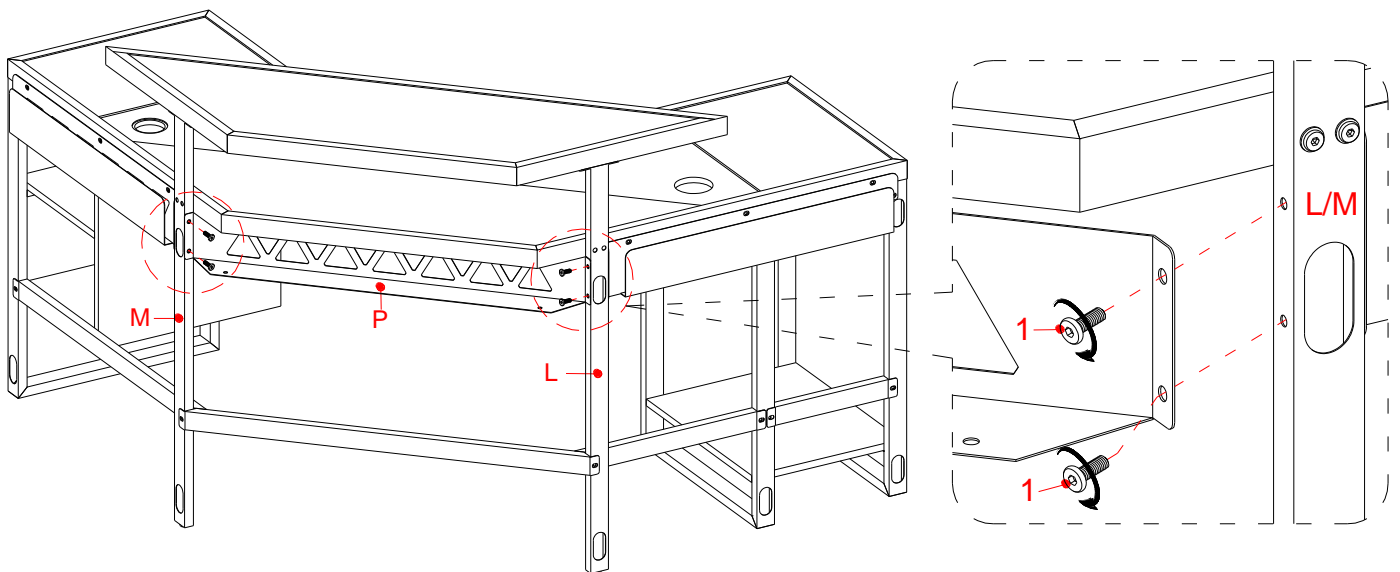


30. Attach the Middle Cord Management (P) to the Left and Right Posts (L and M) with four 12 mm Bolts (1).

 Assembly Instructions

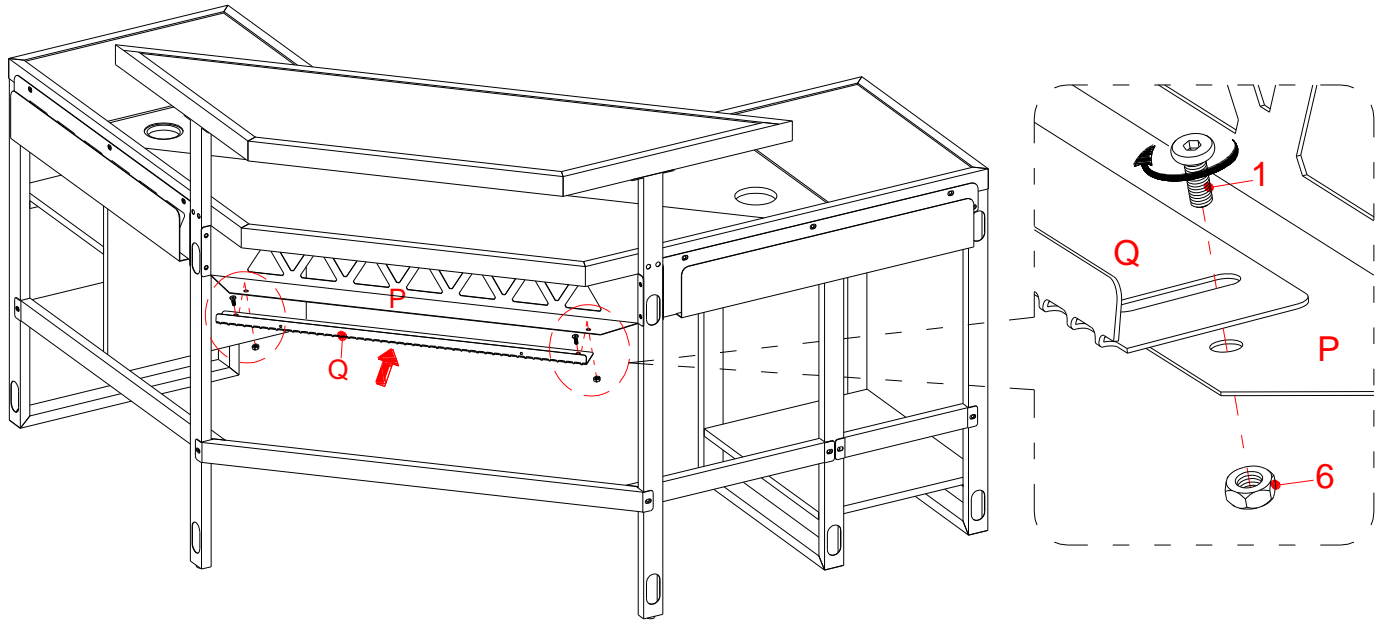


31. Attach the Light Support (Q) to the Middle Cord Management (P) with two 12 mm Bolts (1) and two Hex Nuts (6). **Note:** Ensuring that the light function properly. This can be done by moving the Light Support (Q) forward and back.

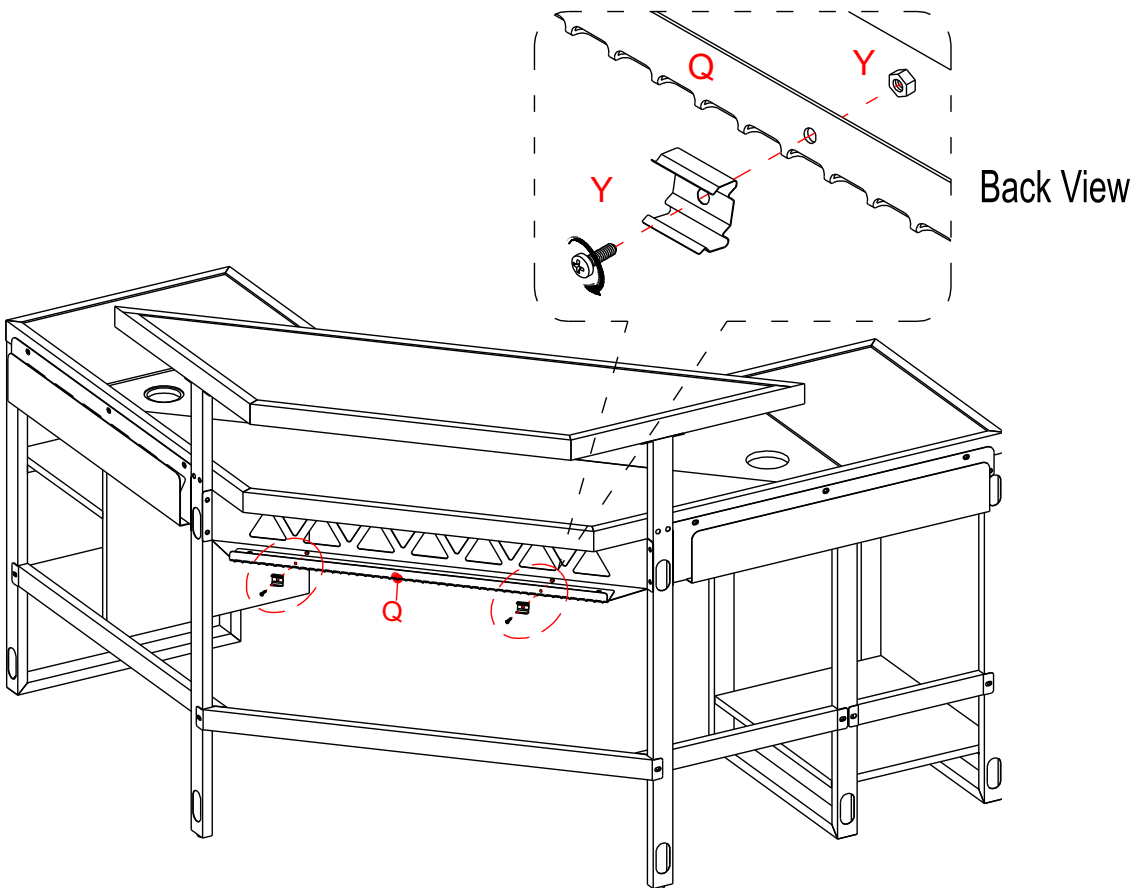 


32. Attach the Buckles (Y) to the Light Support (Q) with the provided Bolts and the Hex Nuts.

 Assembly Instructions

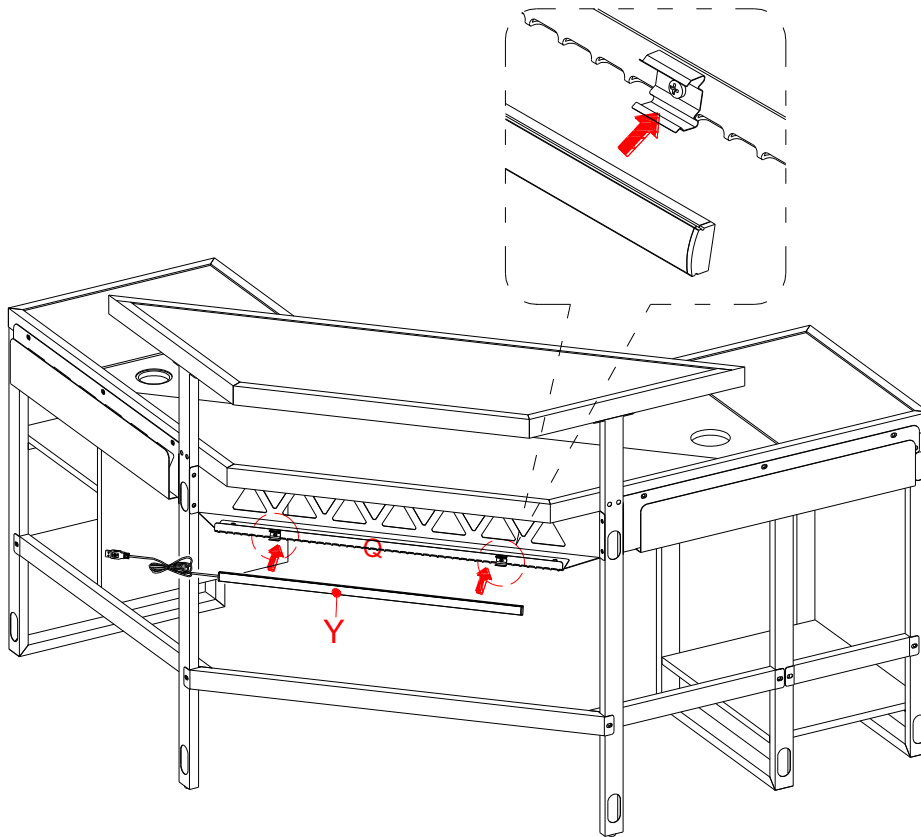


 33. Clip the LED light bar into the buckles (Y).

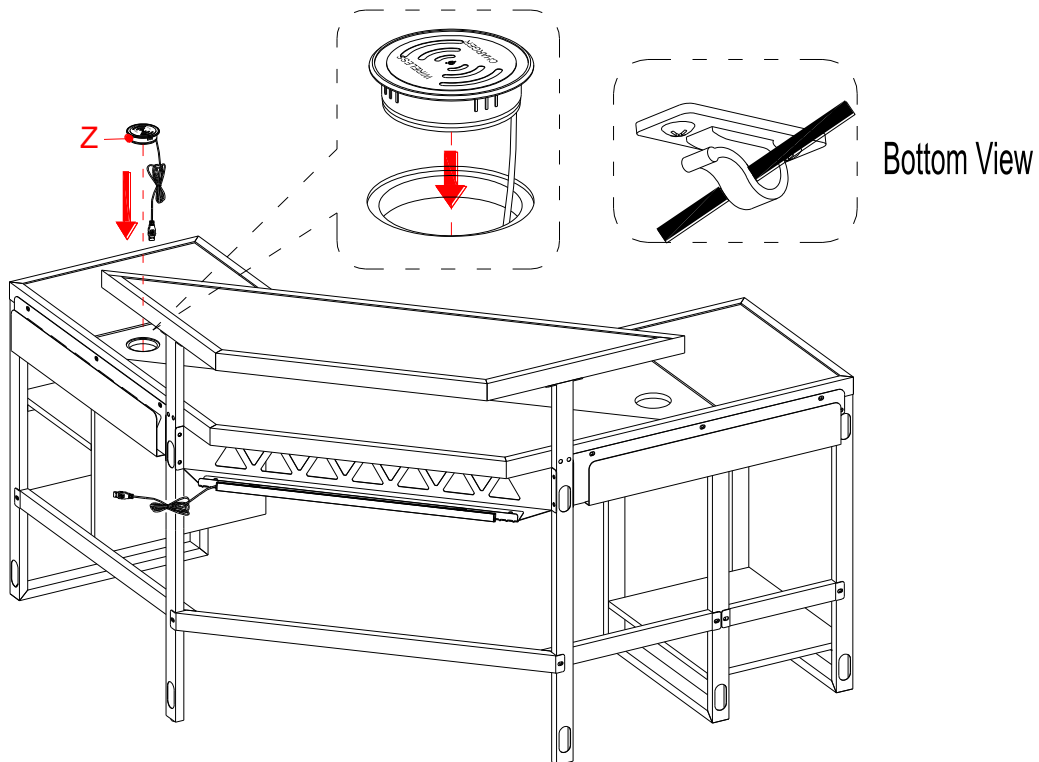


34. Feed the wire of Wireless Charger (Z) through the cutout of the Desk Top and push into the cutout from top of Desk Top ensuring the wire are not pinched. **NOTE:** You can use the Cord Clips to help keep your entertainment center's cables and cords organized.

 Assembly Instructions

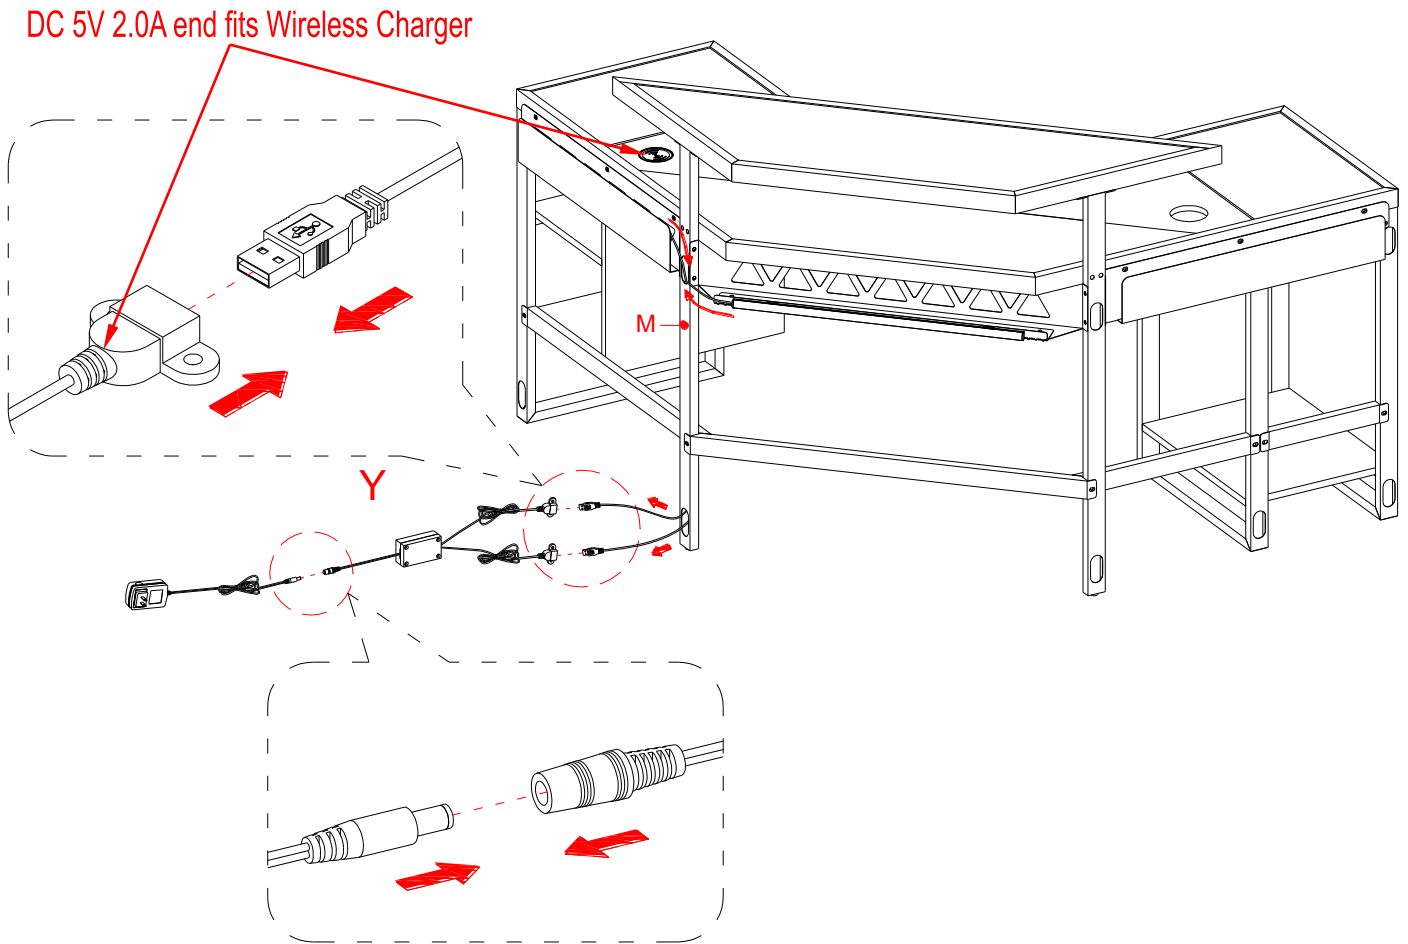


35. Connect the plug of the Light Fixture together properly. Secure the cord in place with plastic ties. Make sure the loose connecting wire is taped securely and out of the way. Connect the light fixture to the power transformer. (Refer to page 4 on Low Voltage Lighting Systems User Guide).

 Assembly Instructions

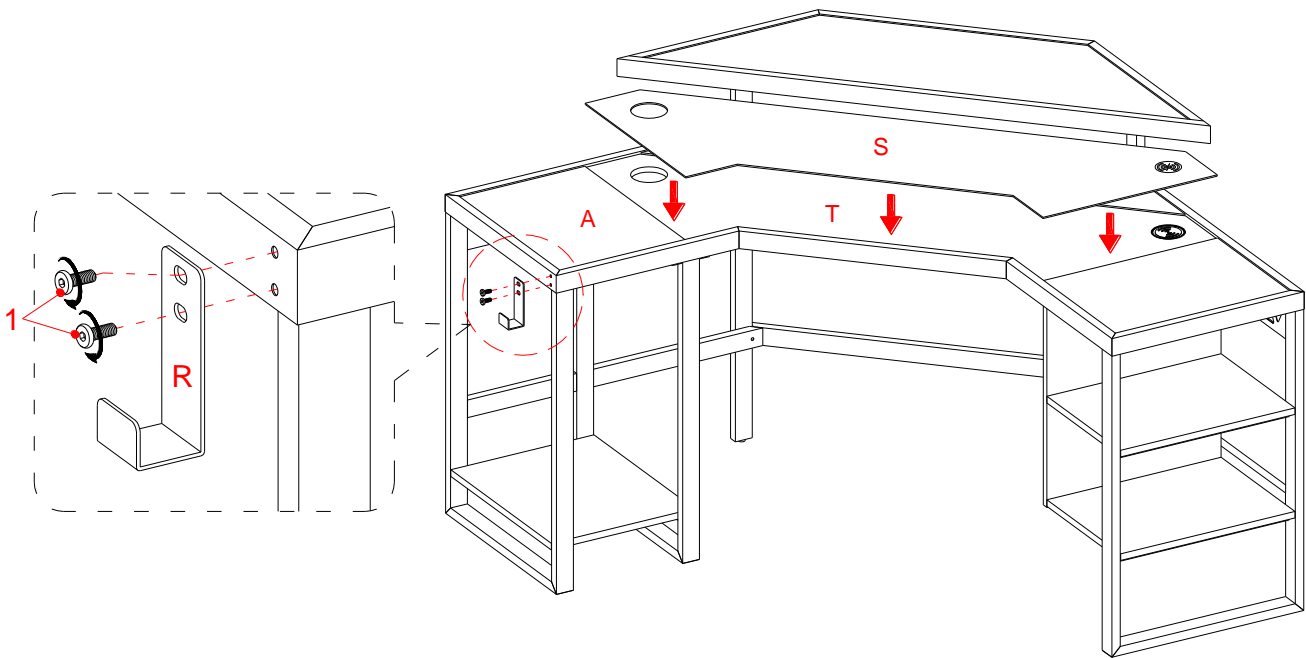

36. Position the Corner Mouse Pad (S) onto the Corner Front Top Panel (T).

 37. Attach the Accessory Hook (R) to the Left Top Frame (A) with two 12 mm Bolts (1).

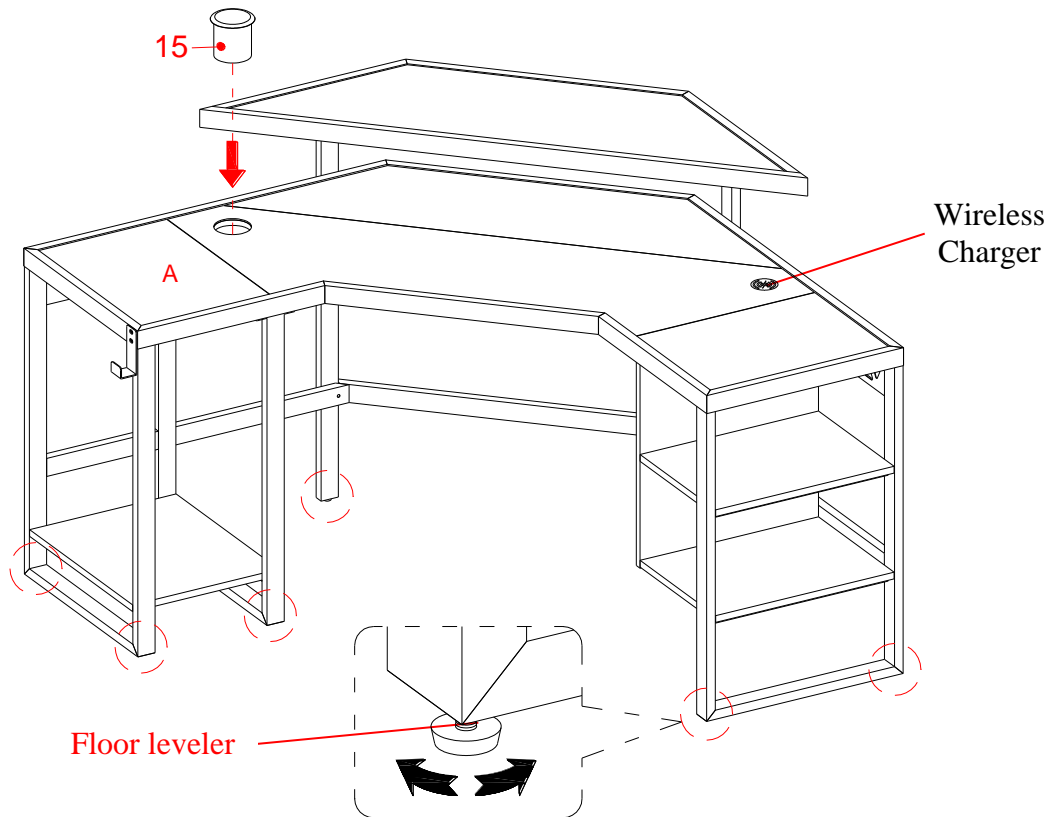

38. Position the unit at the desired location against a wall. If necessary, adjust the Floor Levelers at the bottom of the frames to level the unit.

39. Place the Cup Holder (15) over the hole of the desk top.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Gently rub the surface with a soft dry cloth, soft damp cloth, or soft damp cloth with neutral detergent, and then dry it well.
- Strong Alkaline detergents or acidic detergents are not recommended to use.
- Sponges containing abrasive agents or fibers are not recommended to use.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage your furniture's finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

Further Advice about Wood Furniture Care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

We hope you enjoy your purchase for many years.
Thank you for your purchase!

QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.

Whalen Furniture Manufacturing
1578 Air Wing Road, San Diego CA, 92154, USA
Customer Service: 866-942-5362
8:30 a.m. - 4:30 p.m., PST, Monday to Friday
www.whalenfurniture.com