 




LOT NUMBER: _____
DATE PURCHASED: __/__/__

Industria Audio Tower

Model # AT3260-12BT

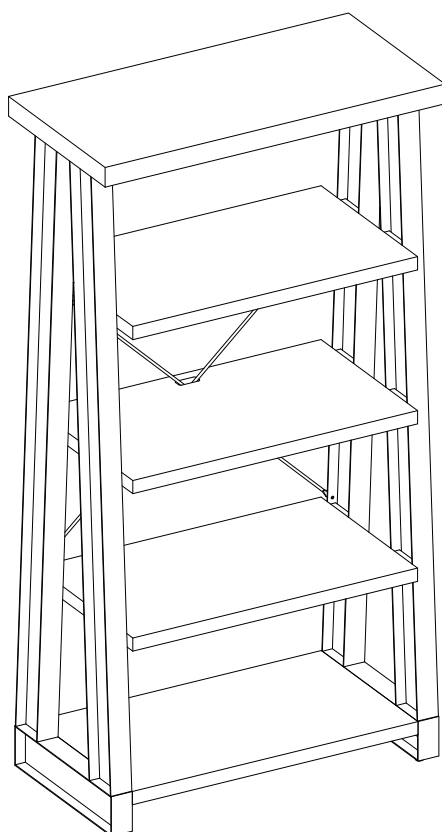

ADULT ASSEMBLY REQUIRED

If you have any questions regarding assembly or if parts are missing, DO NOT return this item to the store where it was purchased. Please call our customer service number and have your instructions and parts list ready to provide the model name, part name or factory number:

1-866-942-5362

Pacific Standard Time: 8:30 a.m. - 4:30 p.m., Monday to Friday

Or visit our website 24 hours a day, 7 days a week for product assistance at

www.whalenstyle.com

Or e-mail your request to parts@whalenfurniture.com

**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**

Whalen Furniture Manufacturing


Page 1

Factory No. 16434

Date 2014-09-02 Rev. 1 Factory: SUHOCO

MAXIMUM RECOMMENDED WEIGHT LOADS

 MANUFACTURER: Whalen Furniture Manufacturing
CATALOG: Industria Audio Tower (AT3260-12STB)
DATE OF MANUFACTURE: September 2014
MADE IN CHINA

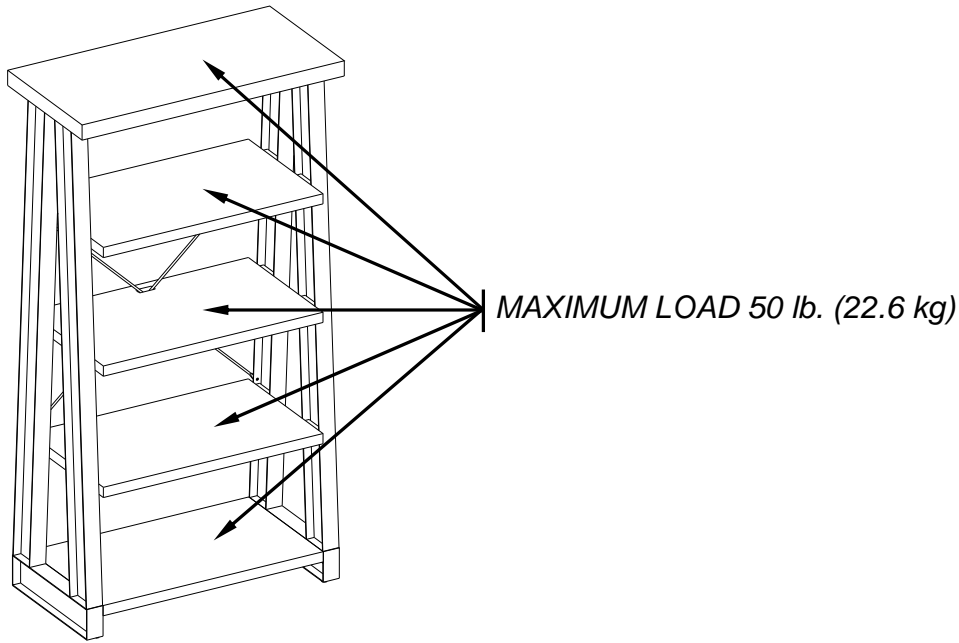

⚠ WARNING

THIS UNIT IS INTENDED ONLY FOR USE WITHIN THE MAXIMUM WEIGHTS INDICATED. USE WITH LOAD HEAVIER THAN THE MAXIMUM WEIGHTS INDICATED MAY RESULT IN INSTABILITY, CAUSING POSSIBLE INJURY.

GENERAL INFORMATION, TIPS and TRICKS

 
1. Please read the Assembly Instructions prior to assembling this product.
2. Remove all hardware from the box and sort by size.
3. Check to see that all hardware and parts are present BEFORE assembling.
4. Ask a friend to assist you with the assembly of this furniture.
5. To avoid damage, assemble the product on a sturdy, level and protective surface.
6. Please wait until all steps are completed before fully tightening Bolts.
7. Make sure all bolts are tightly fastened before the unit is used.

This product is sold with two sets of Tipping Restraint Hardware Kits. You must install the Tipping Restraint Hardware between the wall and the tower to prevent any accidents or damages. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. The restraint is only a deterrent and is not a substitute for proper adult supervision. Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.


Please call for replacement parts or assistance: **1-866-942-5362**

Parts and Hardware List


Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

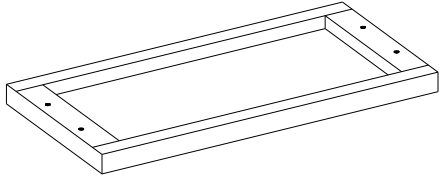


A- Top Panel (1)

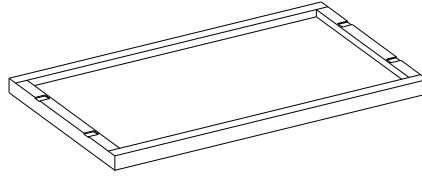 


B- Middle Upper Shelf (1)

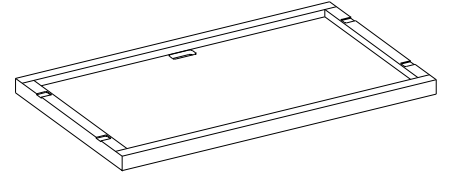 


C- Middle Shelf (1)

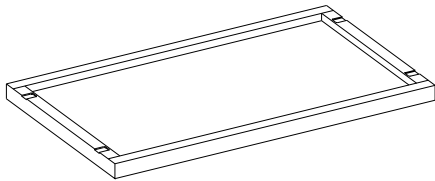 


D- Middle Lower Shelf (1)

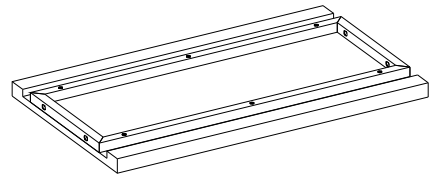 


E- Bottom Shelf (1)

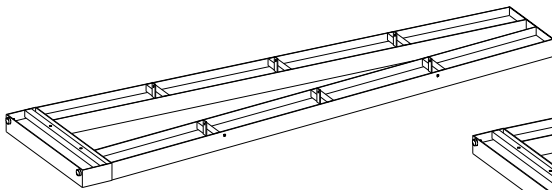 


F- Left Leg (1)

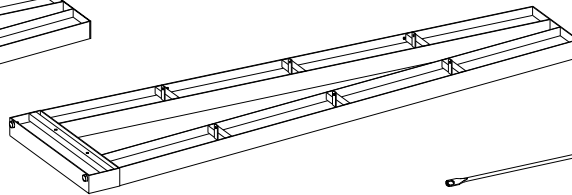 


G- Right Leg (1)

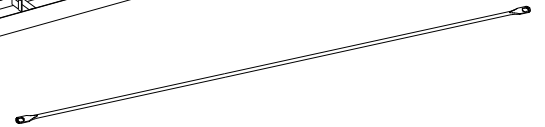 

H- Metal Bar (2)

 

 
(1) 5/8" Bolt
(8+1 extra)




(2) 1-1/4" Bolt
(4+1 extra)



 
(3) Lock Washer
(12+1 extra)

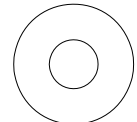

 
(4) Flat Washer
(12+1 extra)



 
(5) 1/2" Wood Screw
(12+1 extra)



4 mm Allen Wrench
(2)

 

Touch-up Pen
(1)

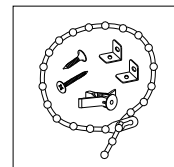 

Tipping Restraint Hardware Kit (2)
(Inside Plastic Bag)

 
 
 
 
 
Tools required: Allen wrench (provided) and Phillips screwdriver (not provided).

Assembly Instructions

NOTE: Please do not fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.





1. Unpack the unit and confirm that you have all the hardware and required parts.
2. Fasten the Bottom Shelf (E) to the Left Leg (F) by using two 1-1/4" Bolts (2) with Lock Washers (3) and Flat Washers (4) through the side rail of bottom metal frame and screw into place. As shown. Be sure the metal frame will face the floor when the unit is turned upright.
3. Fit the notches of Middle Shelves (B, C and D) onto the metal brackets of the Left Leg (F) and secure them in place using two 1/2" Wood Screws (5) in each. As shown. Make sure that the center cutout of the Middle Shelf (C) will point towards the back of the unit.
4. Repeat the same procedure to attach the Right Leg (G) at the opposite end.

The cutout on Middle Shelf and the threaded sockets on the back of Legs points toward the same direction.

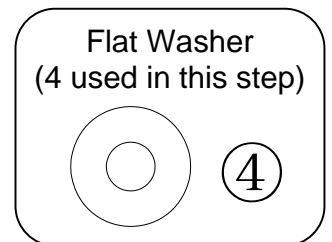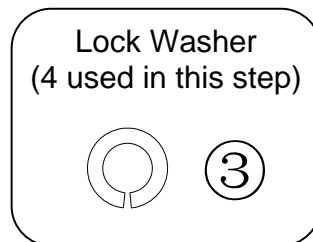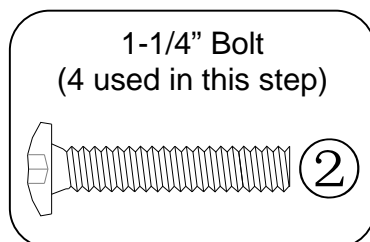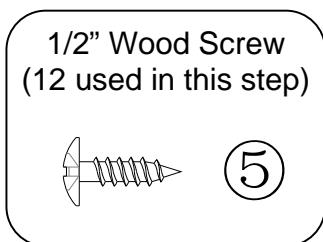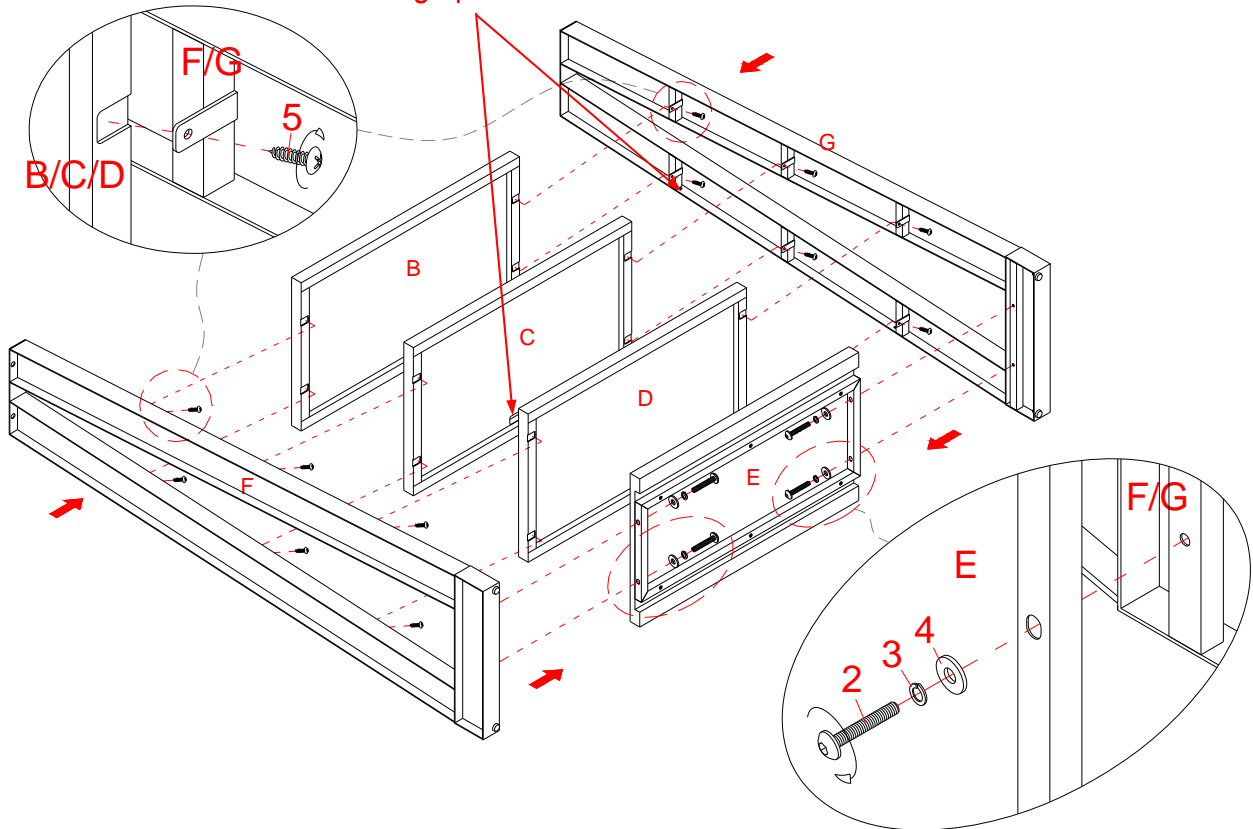





Assembly Instructions

    5. Align and attach the Top Panel (A) to both Legs (F and G) by inserting four 5/8" Bolts (1) with the Washers (3 and 4) through the drilled holes on the top plate and securely screw into place. As shown.

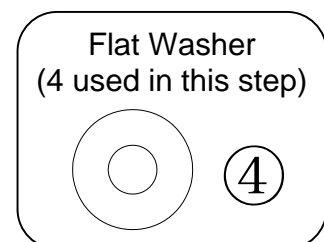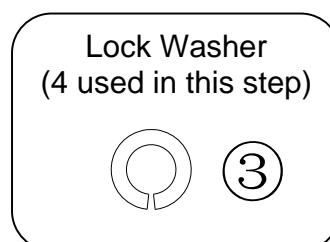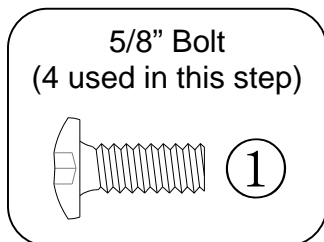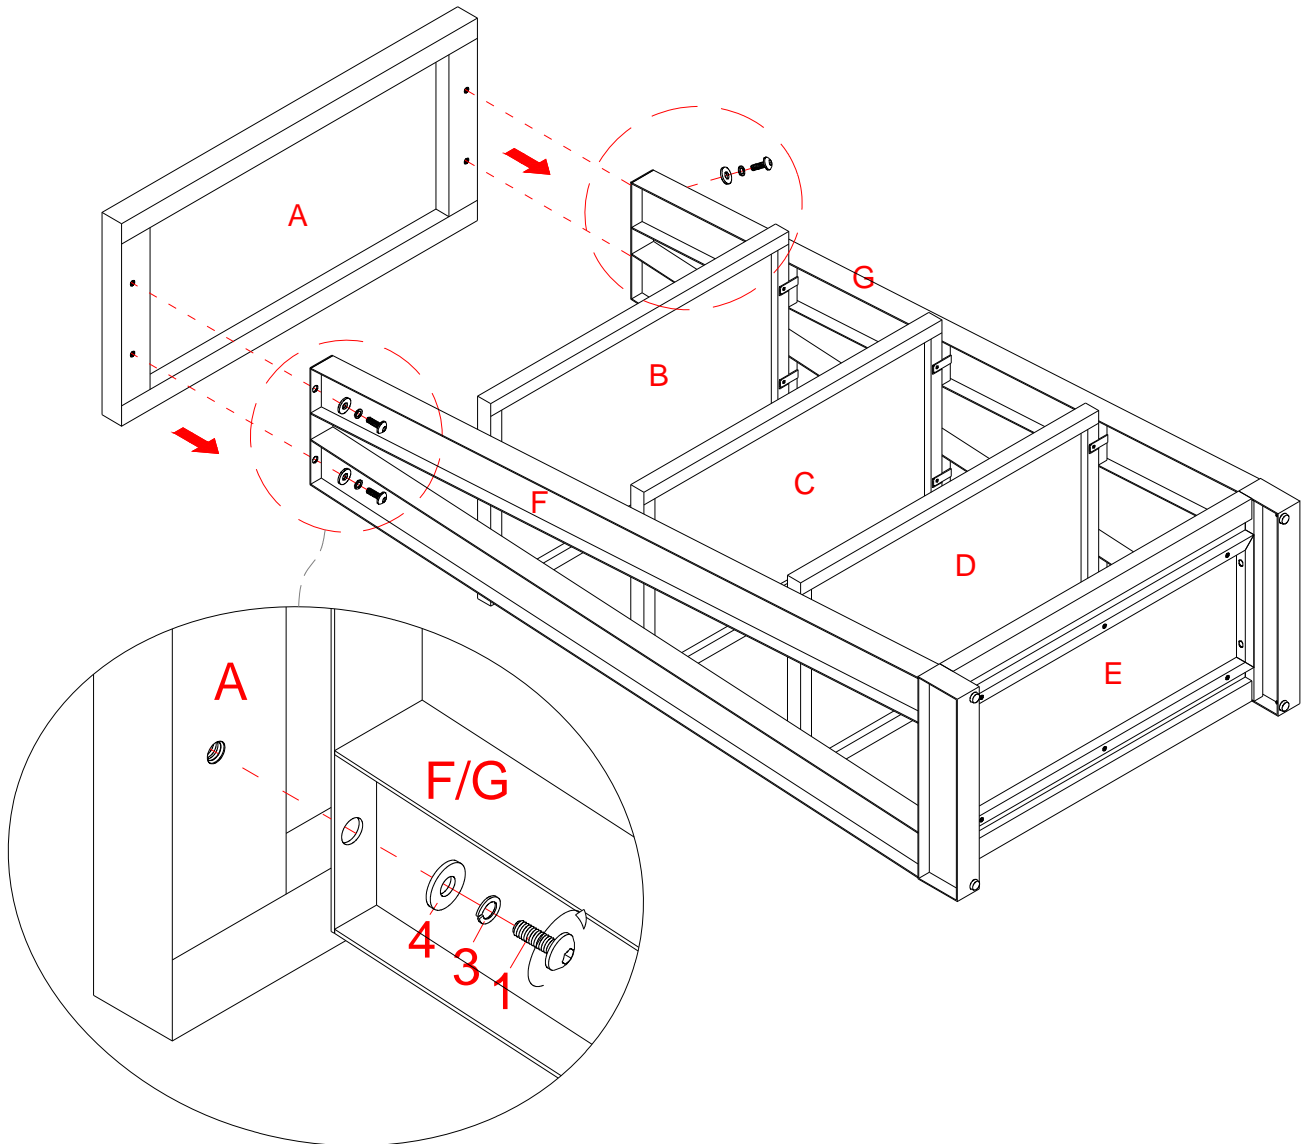

Assembly Instructions

    
6. Go back and tighten all the bolts. Ask for assistance to stand the unit upright.
7. Thread two Metal Bars (H) through the center cutout on Middle Shelf (C) and attach them to both Legs (F and G) for sturdy construction, using two 5/8" Bolts (1) with the Washers (3 and 4) per metal bar. As shown.

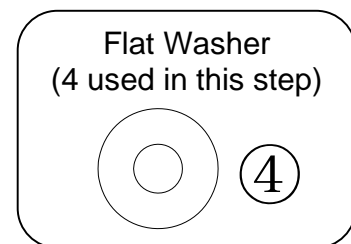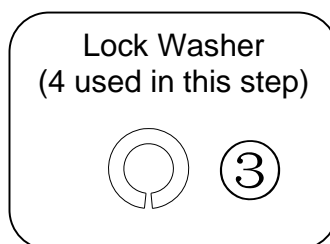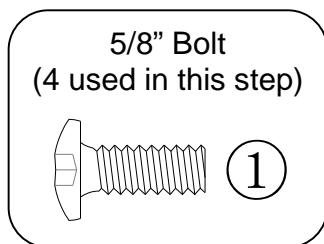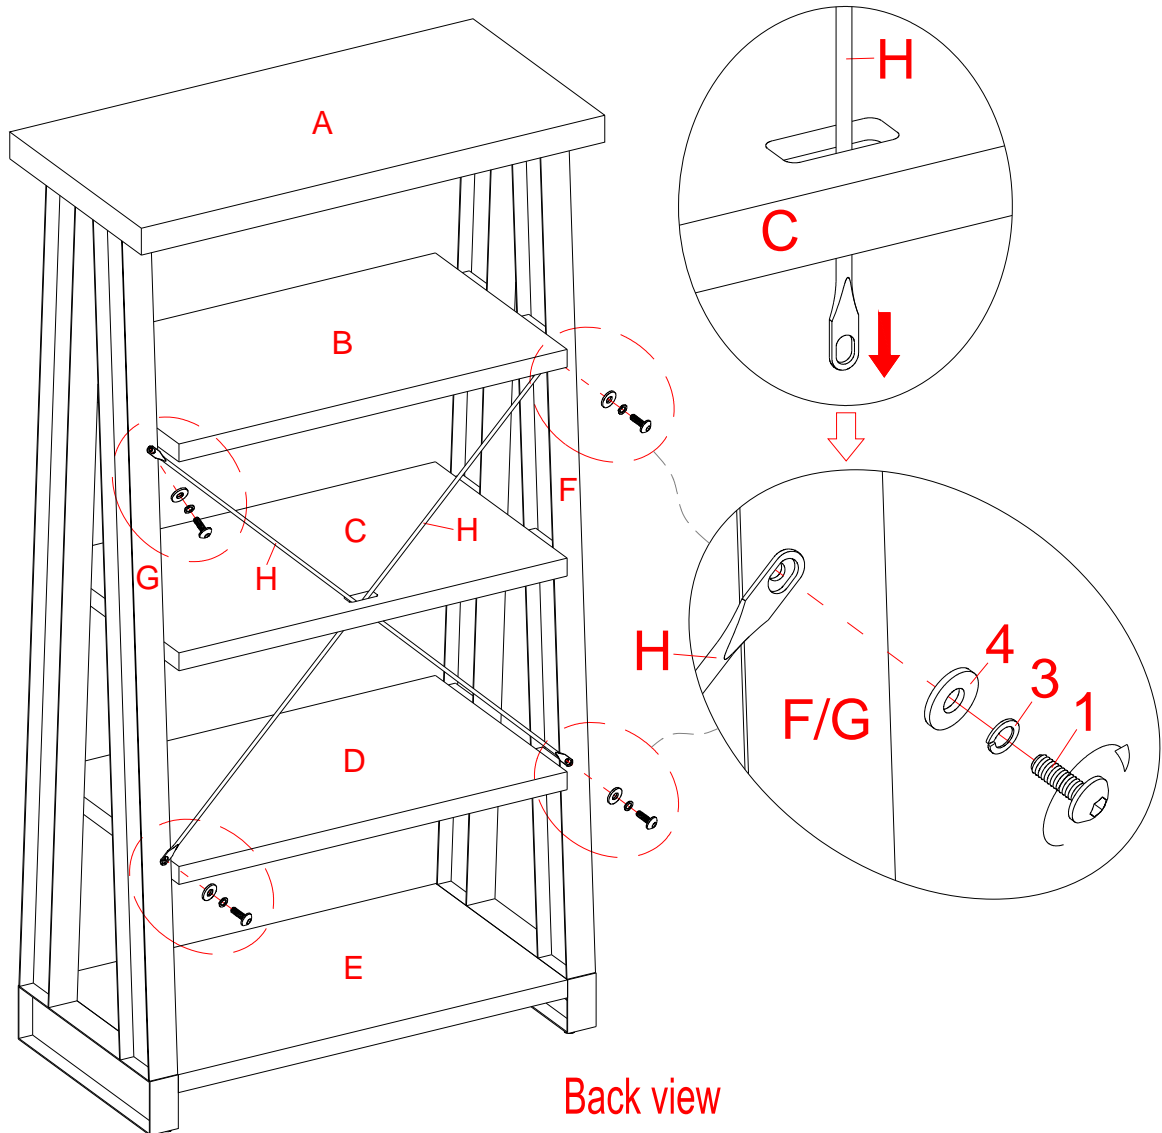

Assembly Instructions

8. Position the assembled unit at the desired location against a wall. If necessary, adjust the pre-attached Floor Levelers at the bottom of the Legs (F and G) to level the unit. Now, follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware to attach the tip-over restraint to the Top Panel (A) and the wall.

 NOTE: Young children can be seriously injured by tipping furniture. You must install the Tipping Restraint Hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

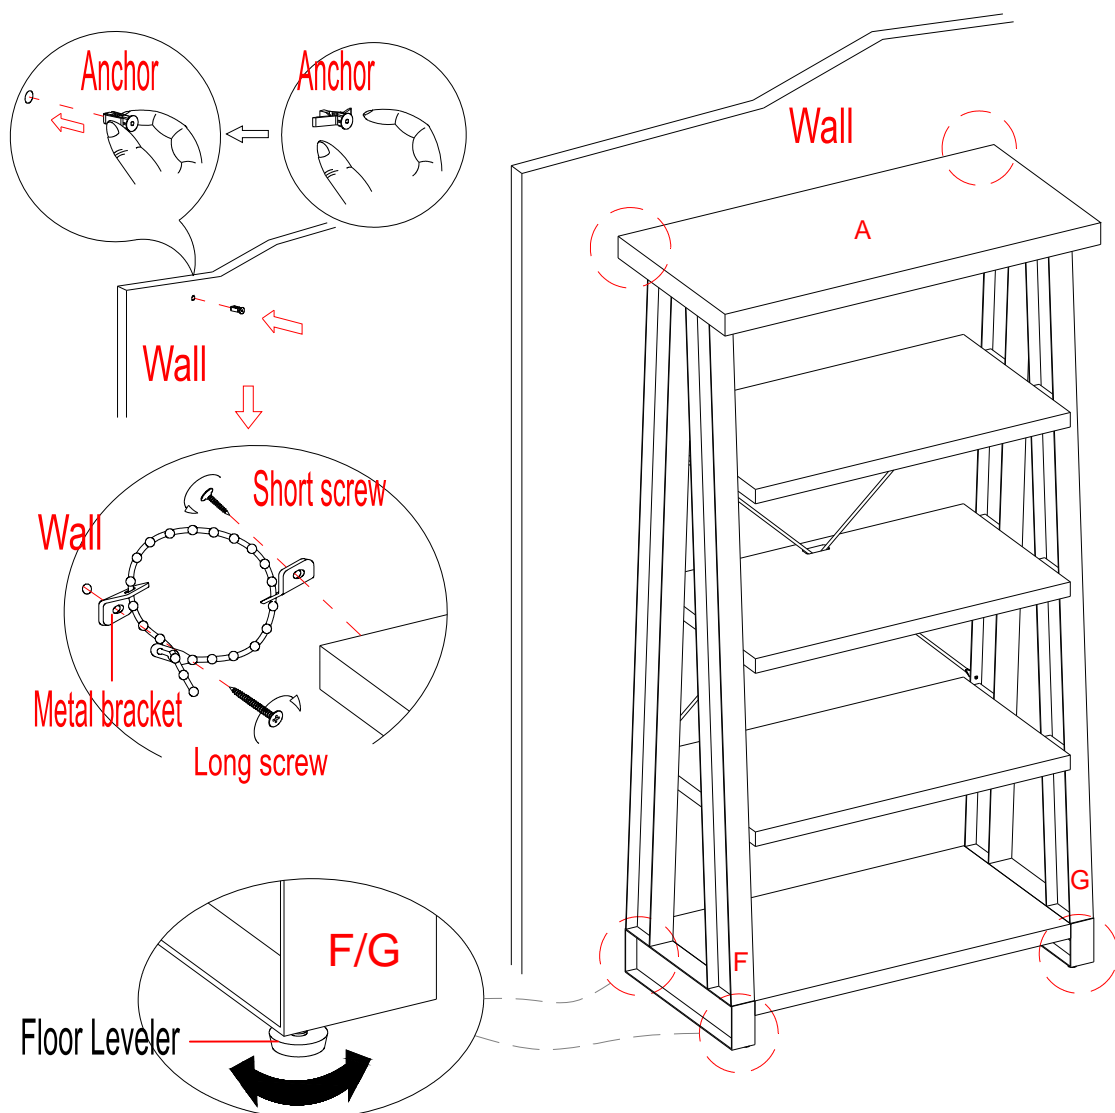

Tools required: Allen wrench (provided), Phillips screwdriver, Mallet, Power Drill, and 3/8" Drill Bit.

Please call for replacement parts or assistance: 1-866-942-5362

Whalen Furniture Manufacturing

Page 7

 
Factory No. 16434

Option #1: As an Audio/Video Tower or Bookcase

You can use this unit as a tower to place your TV or stereo components. Also, it can be used as a stylish bookcase.


Option #2: L-SHAPE ENTERTAINMENT WALL

You can buy our Fireplace Console (model #AVFC54-12BT & FP26-1A, sold separately) and combine it with the Tower. So you can add warmth and charm to your home theater.

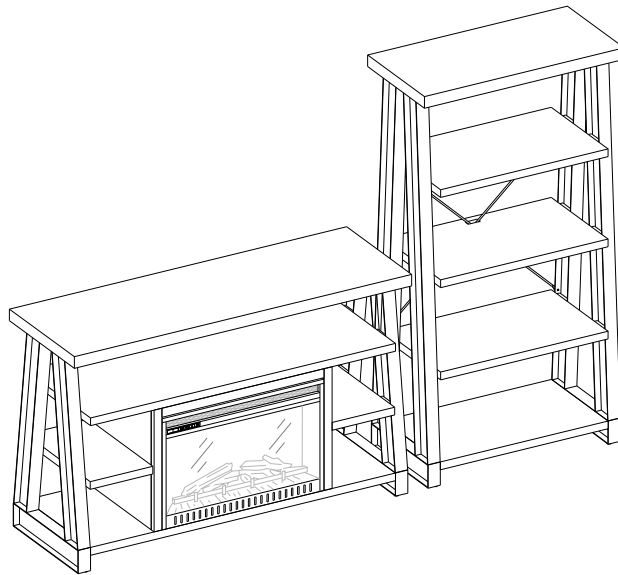

Option #3: U-SHAPE ENTERTAINMENT WALL

 You can buy our 54" TV Console (model #AVCD54-12STB, sold separately) and combine it with the two Towers. So you can enjoy your entertainment wall.

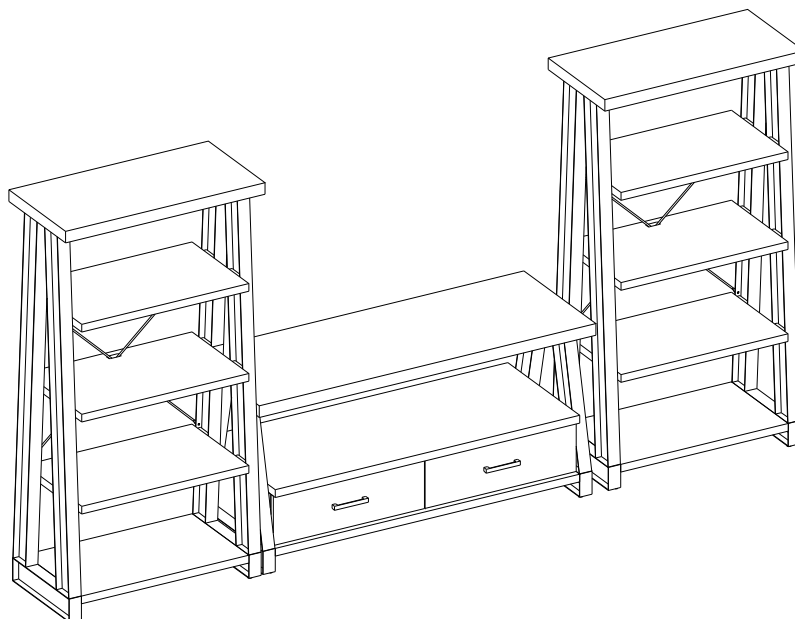

Please call for replacement parts or assistance: 1-866-942-5362

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

Further advice about wood furniture care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

A Touch-up Pen has been provided to repair any small nicks or scratches that may occur during assembly or shipping.

We hope you enjoy your purchase for many years.
Thank you for your purchase!

QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific legal rights and you may also have other rights which vary from State to State (province to province).

Customer Service: 1-866-942-5362

 
 
 
 
 
 
 
8:30 a.m. - 4:30 p.m., PST, Monday to Friday

www.whalenstyle.com

Please call for replacement parts or assistance: 1-866-942-5362

IF YOU NEED TO ORDER ANY REPLACEMENT PARTS, PLEASE USE THE LIST BELOW

Industria Audio Tower (AT3260-12BT)

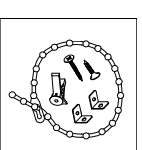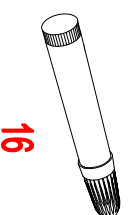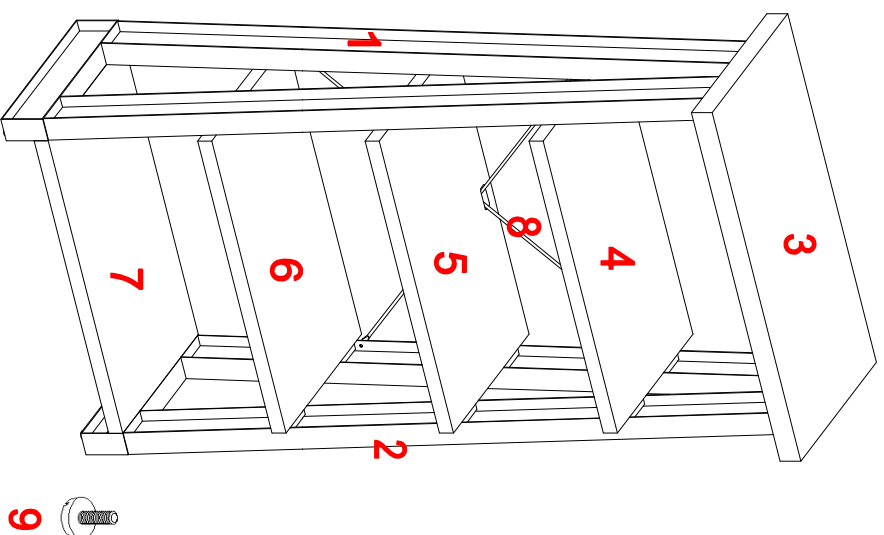

*AT3260-12BT-1-LL	Left Leg	*AT3260-12BT-10-5/8B	5/8" Bolt
*AT3260-12BT-2-RL	Right Leg	*AT3260-12BT-11-1 1/4B	1-1/4" Bolt
*AT3260-12BT-3-TP	Top Panel	*AT3260-12BT-12-LW	Lock Washer
*AT3260-12BT-4-MUS	Middle Upper Shelf	*AT3260-12BT-13-FW	Flat Washer
*AT3260-12BT-5-MS	Middle Shelf	*AT3260-12BT-14-1/2WS	1/2" Wood Screw
*AT3260-12BT-6-MLS	Middle Lower Shelf	*AT3260-12BT-15-M4AW	4 mm Allen Wrench
*AT3260-12BT-7-BS	Bottom Shelf	*AT3260-12BT-16-TUP	Touch-up Pen
*AT3260-12BT-8-MB	Metal Bar	*AT3260-12BT-17-TRHK	Tipping Restraint Hardware Kit
*AT3260-12BT-9-FL	Floor Leveler	*AT3260-12BT-CH	Complete Hardware