




LOT NUMBER: _____
DATE PURCHASED: ___/___/___


52" 3-in-1 Console (XL-5)

U.S. Patents 8,079,311 & 8,191,485

This item is designed to be a 3-in-1 configuration. Please choose the option that best suits your needs. DO NOT discard any of the hardware or parts that you will not use on your chosen option. This will allow you to use this TV Console in different configurations at a later date, if desired.

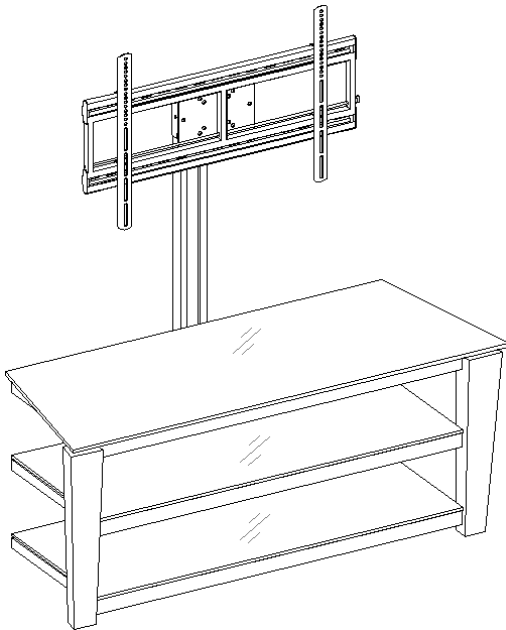

Floating Swivel Mount with Tilt

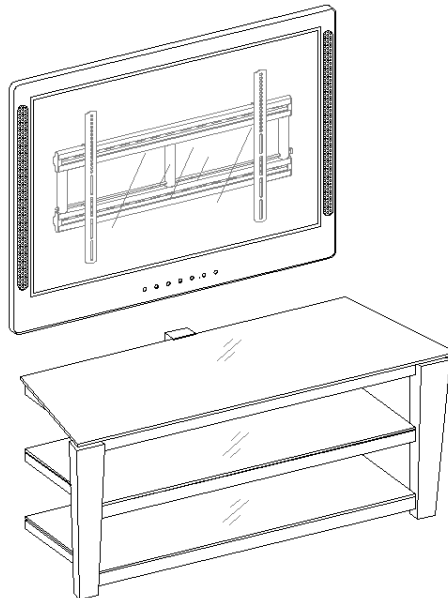

Universal Wall Mount

TV sold separately

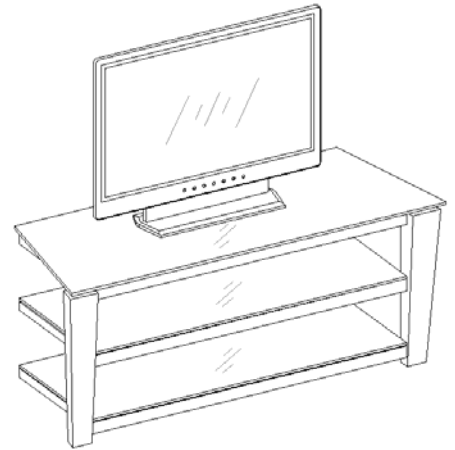


Table-top Console

ADULT ASSEMBLY REQUIRED

If you have any questions regarding assembly or if parts are missing, DO NOT return this item to the store where it was purchased. Please call our customer service number and have your instructions and parts list ready to provide the model name, part name or factory number:

1-866-942-5362 8:30 a.m. - 4:30 p.m. PST, Monday - Friday

ONLINE: www.whalenstyle.com

EMAIL: parts@whalenfurniture.com



Video Instruction Guides


Go to <http://whalen.showuhow.com> to view step-by-step instructional videos for assembling and installing your product. Enter the following product number on the ShowUhow homepage.

XL-5 or SV3IN1C-B

**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**

MAXIMUM RECOMMENDED WEIGHT LOADS

MANUFACTURER: Whalen Furniture
 CATALOG: 52" 3-in-1 Console (XL-5)
 DATE OF MANUFACTURE: August 2012
 MADE IN CHINA

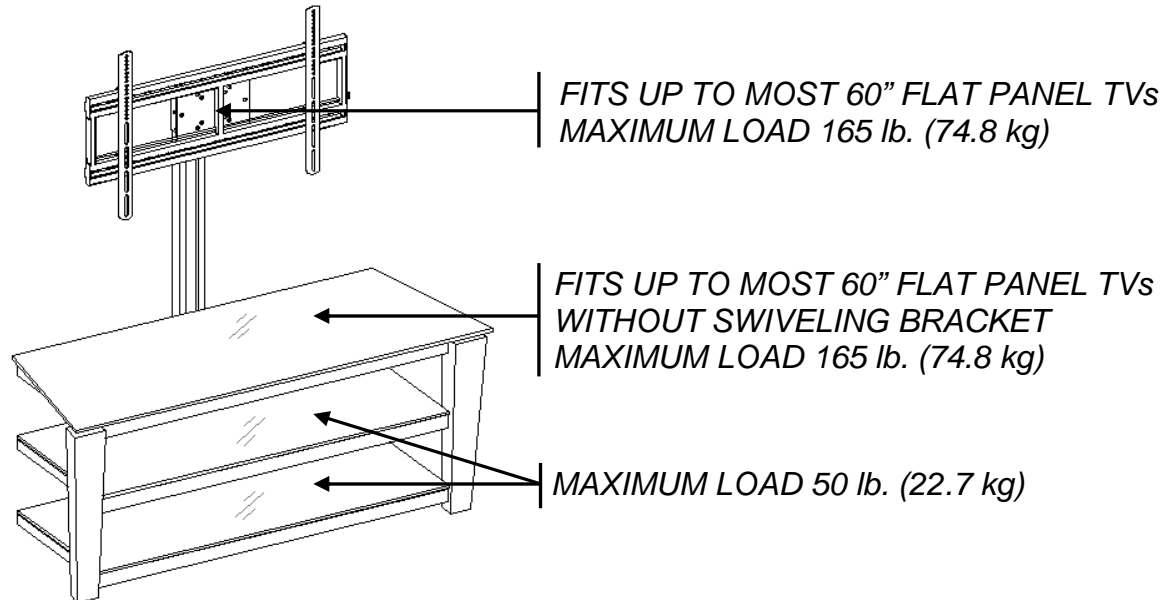

⚠ WARNING

THIS UNIT IS NOT INTENDED FOR USE WITH CRT TVS. USE ONLY WITH FLAT PANEL TVS AND AUDIO/VIDEO EQUIPMENT MEETING RECOMMENDED SIZE /WEIGHT LIMITS. NEVER USE WITH LARGER/HEAVIER FLAT PANEL TVS OR EQUIPMENT THAN RECOMMENDED. TO AVOID INSTABILITY, PLACE FLAT PANEL TV IN CENTER OF UNIT; CRT TVS, IMPROPERLY POSITIONED FLAT PANEL TVS, OR FLAT PANEL TVS OR OTHER EQUIPMENT THAT EXCEED RECOMMENDED SIZE AND WEIGHT LIMITS COULD FALL OFF OR BREAK THE UNIT, CAUSING POSSIBLE SERIOUS INJURY.

GENERAL INFORMATION, TIPS & TRICKS


1. Please read the Assembly Instructions prior to assembling this product.
2. Remove all hardware from the box and sort by size.
3. Check to see that all hardware and parts are present BEFORE assembling.
4. Ask a friend to assist you with the assembly of this furniture.
5. To avoid damage, assemble the product on a sturdy, level and protective surface.
6. Please wait until all steps are completed before tightening bolts.
7. Make sure all bolts are tightly fastened before the unit is used.

This product is sold with one set of Tipping Restraint Hardware Kit. You must install the Tipping Restraint Hardware between the wall and the TV stand to prevent any accidents or damages. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. The restraint is only a deterrent and is not a substitute for proper adult supervision. Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.


Please call for replacement parts or assistance: **1-866-942-5362**

Parts and Hardware List


Please read completely through the instructions and verify that all parts listed are present before beginning assembly.

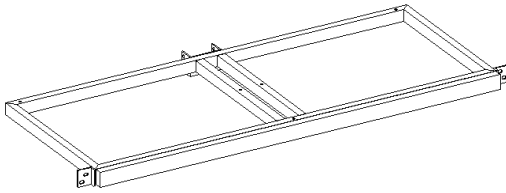


A- Top Shelf Frame (1)

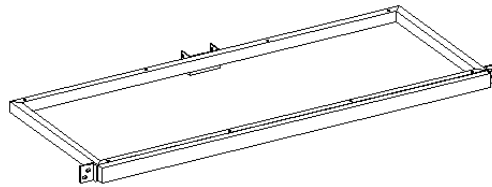


B- Middle Shelf Frame (1)

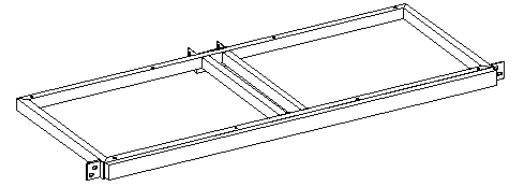

C- Bottom Shelf Frame (1)

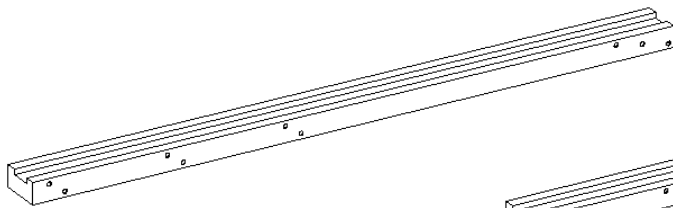

D- Long Spine (1)

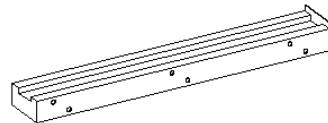


D1- Short Spine (1)




E- Left Leg (1)




F- Right Leg (1)

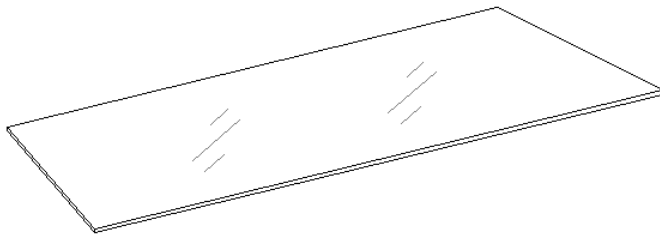


G- Top Glass (1)

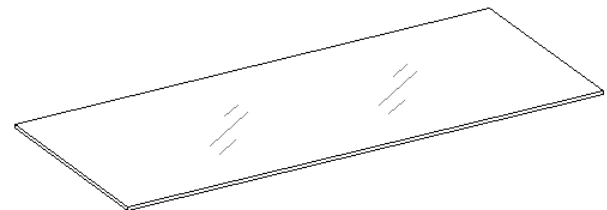


H- Glass Shelf (2)

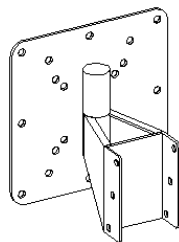


I- Deluxe Bracket w/Mounting Plate (1)

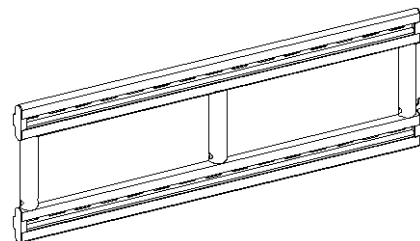

J- XYZ Mounting Frame (1)

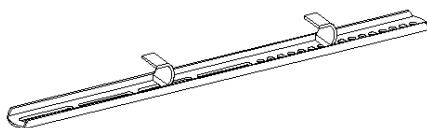


K- Monitor Bracket (2)

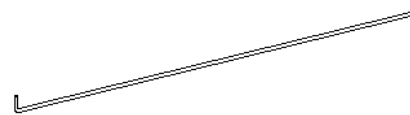


L- Safety Bar (1)

Please call for replacement parts or assistance: [1-866-942-5362](tel:1-866-942-5362)

Parts and Hardware Master List

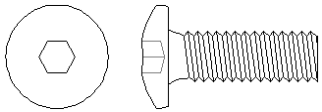

(1) 3/4" Bolt
(36+1 extra)

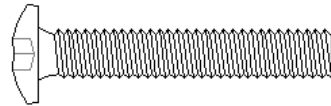


(2) 1-1/2" Bolt
(5+1 extra)




(3) Hex Nut
(6+1 extra)




(4) Lock Washer
(41+2 extra)

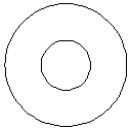


(5) Flat Washer
(35+1 extra)

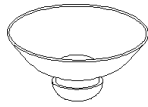


(6) Suction Cup
(16+1 extra)

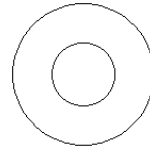


(7) Large Flat Washer
(12+1 extra)

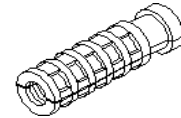


(8) 1-3/4" Concrete Anchor
(6)

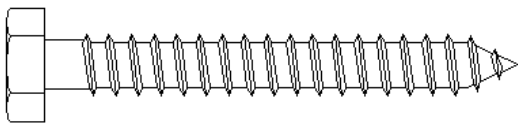


(9) 2-1/2" Lag Bolt (6)

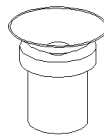

(10) Glass Raiser (5)

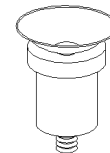


(11) Glass Raiser w/Threaded Pin (2)

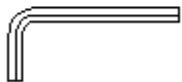


Allen Wrench (1)



Open Wrench (1)

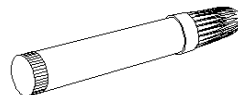


Touch-up Pen (1)

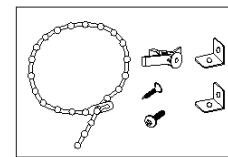


Tipping Restraint Hardware Kit (1)
(Inside Plastic Bag)


TV Mounting Kit

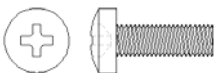


M4 x 12 Bolt (4)

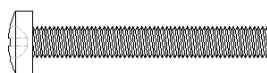


M4 x 30 Bolt (4)

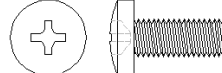

M5 x 12 Bolt (4)

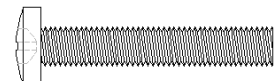


M5 x 30 Bolt (4)

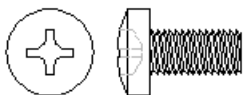


M6 x 12 Bolt (4)



M6 x 35 Bolt (4)

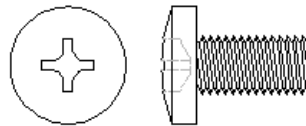

M8 x 16 Bolt (4)

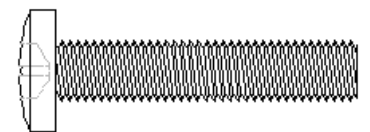

M8 x 40 Bolt (4)




M4 Lock Washer (4)



M5 Lock Washer (4)



M6 Lock Washer (4)

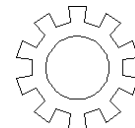


M8 Lock Washer (4)




Large Spacer (4)



Small Spacer (4)

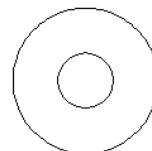

M4/M5 Flat Washer (8)

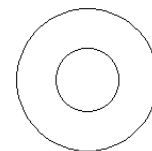

M6/M8 Flat Washer (4)


Tools Required: Allen Wrench & Open Wrench (provided) and Phillips screwdriver (not provided).



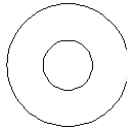
Please call for replacement parts or assistance: 1-866-942-5362

Assembly Instructions

NOTE: Please do not fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make it easier during assembly of unit.

1. Unpack the unit and confirm that you have all the hardware and parts required.
2. Choose the option suits your needs. Locate Long Spine (D) or Short Spine (D1) and set back face down on a scratch free surface as shown in detail #1.
3. Align the "U" shape plate holes of 3 Shelf Frames (A, B & C) with the threaded inserts on the Long Spine (D) in place, insert and screw 3/4" Bolts (1) with Washers (4 & 5) through the "U" shape plate holes into the Spine. Fasten all bolts with Allen Wrench provided. See detail #1.

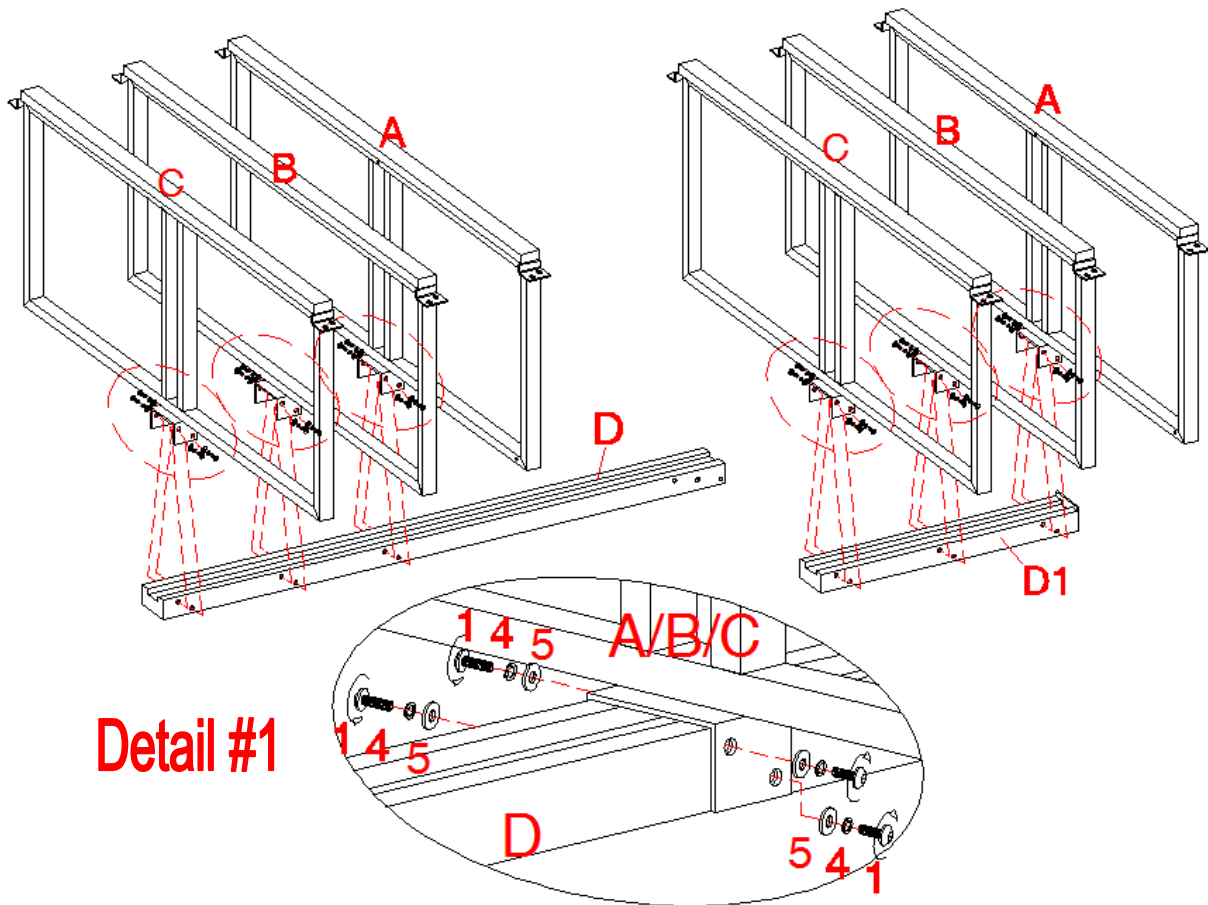


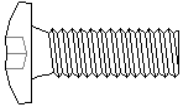

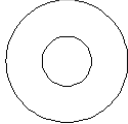
Required hardware in this step			
Description:	(1) 3/4" Bolt	(4) Lock Washer	(5) Flat Washer
Sketch			
Qty.	(12 pcs)	(12 pcs)	(12 pcs)
Tools required: Allen Wrench			

Please call for replacement parts or assistance: 1-866-942-5362

Assembly Instructions

4. Align and attach Left and Right Leg (E & F) to the front ends of Shelf Frames in place, using 3/4" Bolts (1) with Washers (4 & 5) through the end bracket holes into the threaded inserts located on the legs, 6 Bolts per Leg. See detail #2.

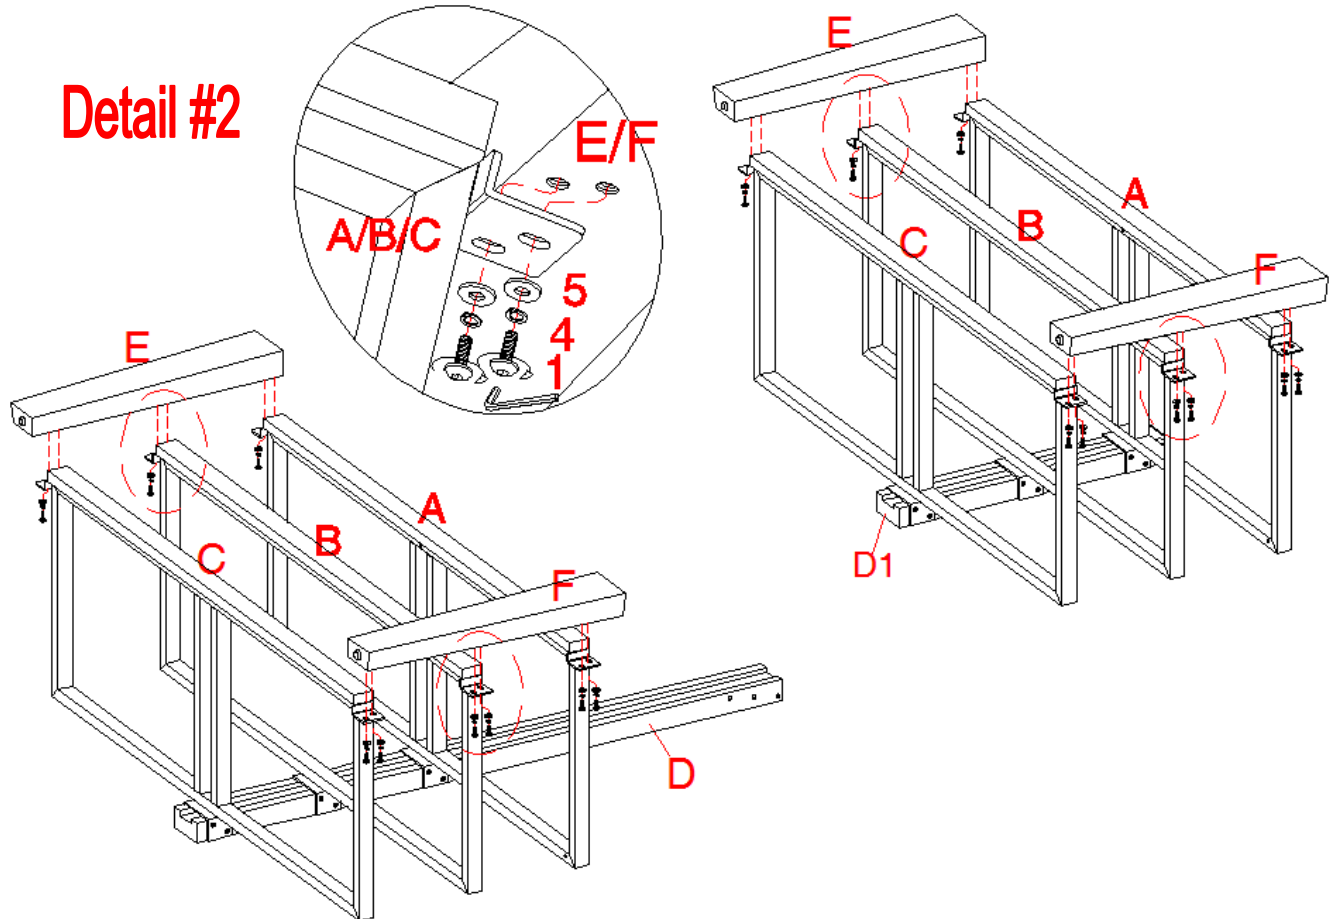


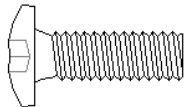Required hardware in this step			
Description:	(1) – 3/4" Bolt	(4) - Lock Washer	(5) - Flat Washer
Sketch			
Qty.	(12 pcs)	(12 pcs)	(12 pcs)
<u>Tools required:</u> Allen Wrench			

Please call for replacement parts or assistance: 1-866-942-5362

Assembly Instructions

5. Stand the unit upright. Now go back and fully tighten all the bolts.
6. In case of uneven floors, Floor Levelers are provided at the bottom of Left & Right Legs (E & F). Simply tilt the unit back and raise or lower floor leveler by hand to correct tilting as shown in detail #3.

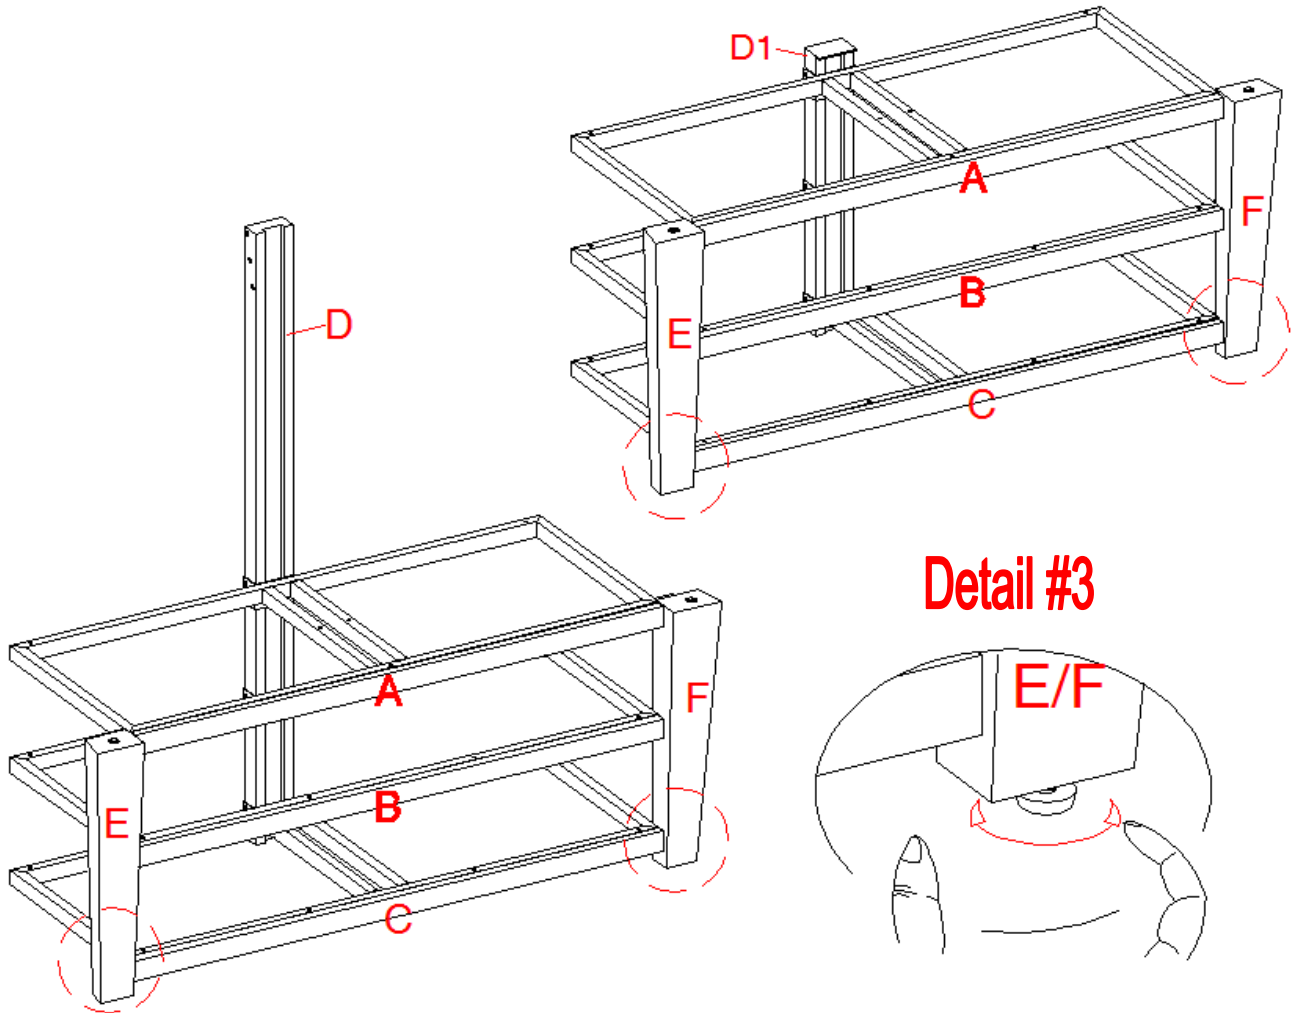

<u>Parts Provided</u>	<u>Qty</u>	<u>Tools Required</u>
Pre-attached Floor Leveler	(2)	No Tool Required




**If you choose Table-top configuration,
continue to STEP 7.
If mounting TV with the Swinging Floater,
skip ahead to PAGE 10.**

Assembly Instructions for Table Top

7. Put the Suction Cups (6) into top holes of Middle & Bottom Shelf Frames (B & C) into place. Insert the Glass Shelves (H) onto the Suction Cups as shown in detail #4.
8. Attach 5 Glass Raisers (10) onto the top holes of Top Shelf Frame (A) using the 1 1/2" Bolts (2) with Washers (4 & 5) through the pre-drilled holes into the Glass Raisers. Screw the Glass Raisers with Threaded Pin (11) onto top hole of Left & Right Leg (E & F) as shown in detail #4. Proceed to center the Top Glass (G) onto the Top Shelf Frame (A).

Note: Make sure the Glass sits securely on the top of Suction Cups. If glass is scratched you can repair by using a BLACK marker and filling in scratched area from underneath.

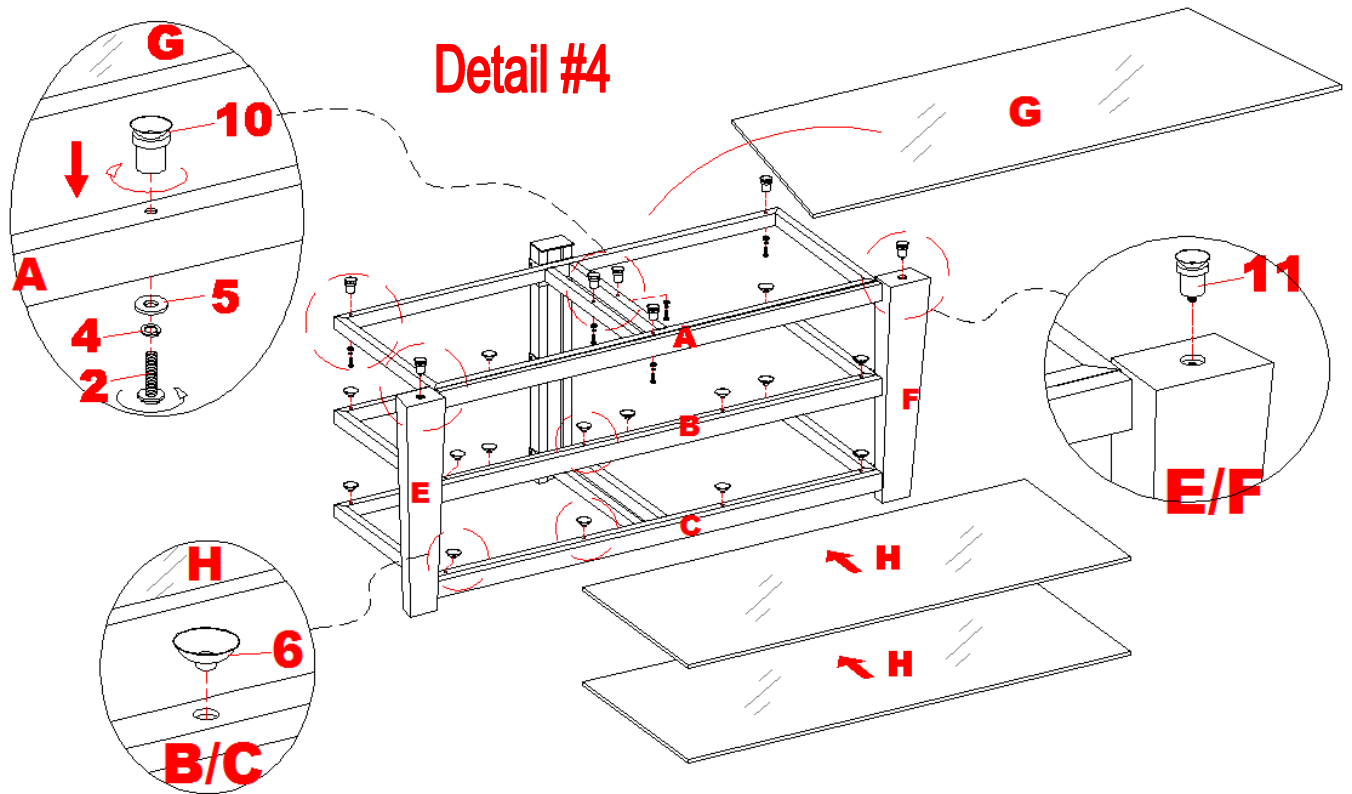

Required Hardware In This Step						
No.	2	4	5	6	10	11
Sketch						
Description	1 1/2" Bolt	Lock Washer	Flat Washer	Suction Cup	Glass Raiser	Glass Raiser w/Threaded
Qty.	5pcs	5pcs	5pcs	16pcs	5pcs	2pcs
Tools required	Allen Wrench					


Please call for replacement parts or assistance: 1-866-942-5362

Assembly Instructions for Table Top

9. Position the assembled console in the desired location against a wall. Now, follow the instructions printed on the plastic bag in order to mount the Tipping Restraint Hardware Kit to the Spine (D1) properly. As shown in detail #5.

NOTE: YOU MUST USE THIS TIPPING RESTRAINT TO ATTACH THIS UNIT TO THE WALL, TO PREVENT TIPPING CAUSING ACCIDENTS AND/OR INJURIES.

10. The console is now ready for use. Be sure to position your TV in the center of the console.

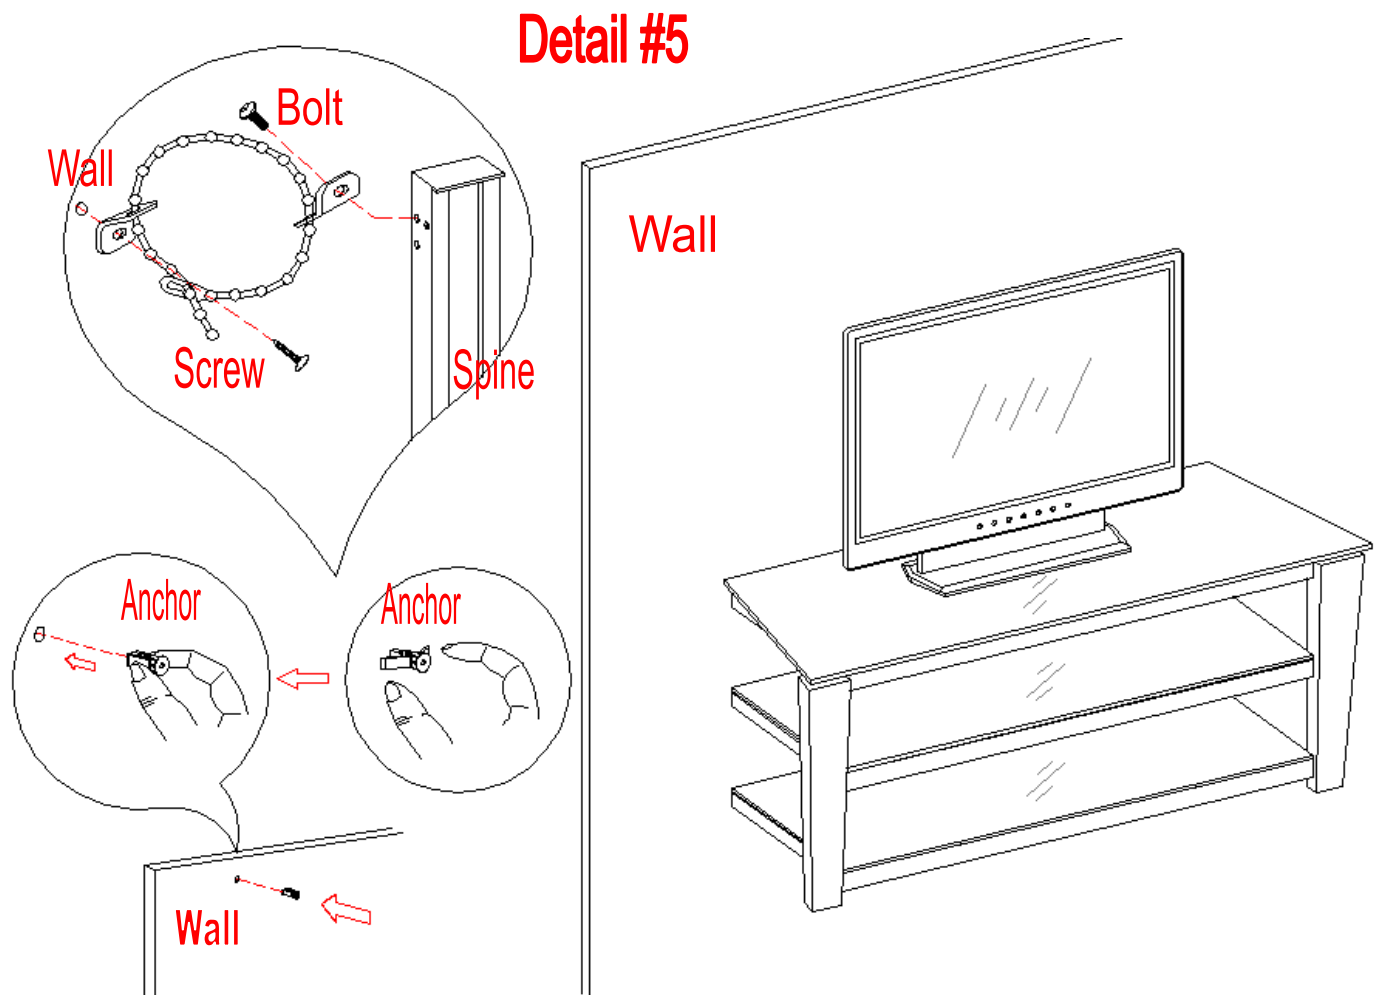




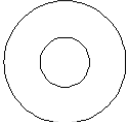
Tools required: Allen Wrench (provided), Phillips screwdriver, Mallet, Power Drill, and 3/8" Drill Bit.

Assembly Instructions for Option 1: Floating Swivel Mount

Assembly Instructions to attach Deluxe Bracket w/ Mounting Plate

11. Attach Deluxe Bracket w/Mounting Plate (I) to the top of Long Spine (D) using six 3/4" Bolts (1) with Lock Washers & Flat Washers (4 & 5) as shown in detail #6.

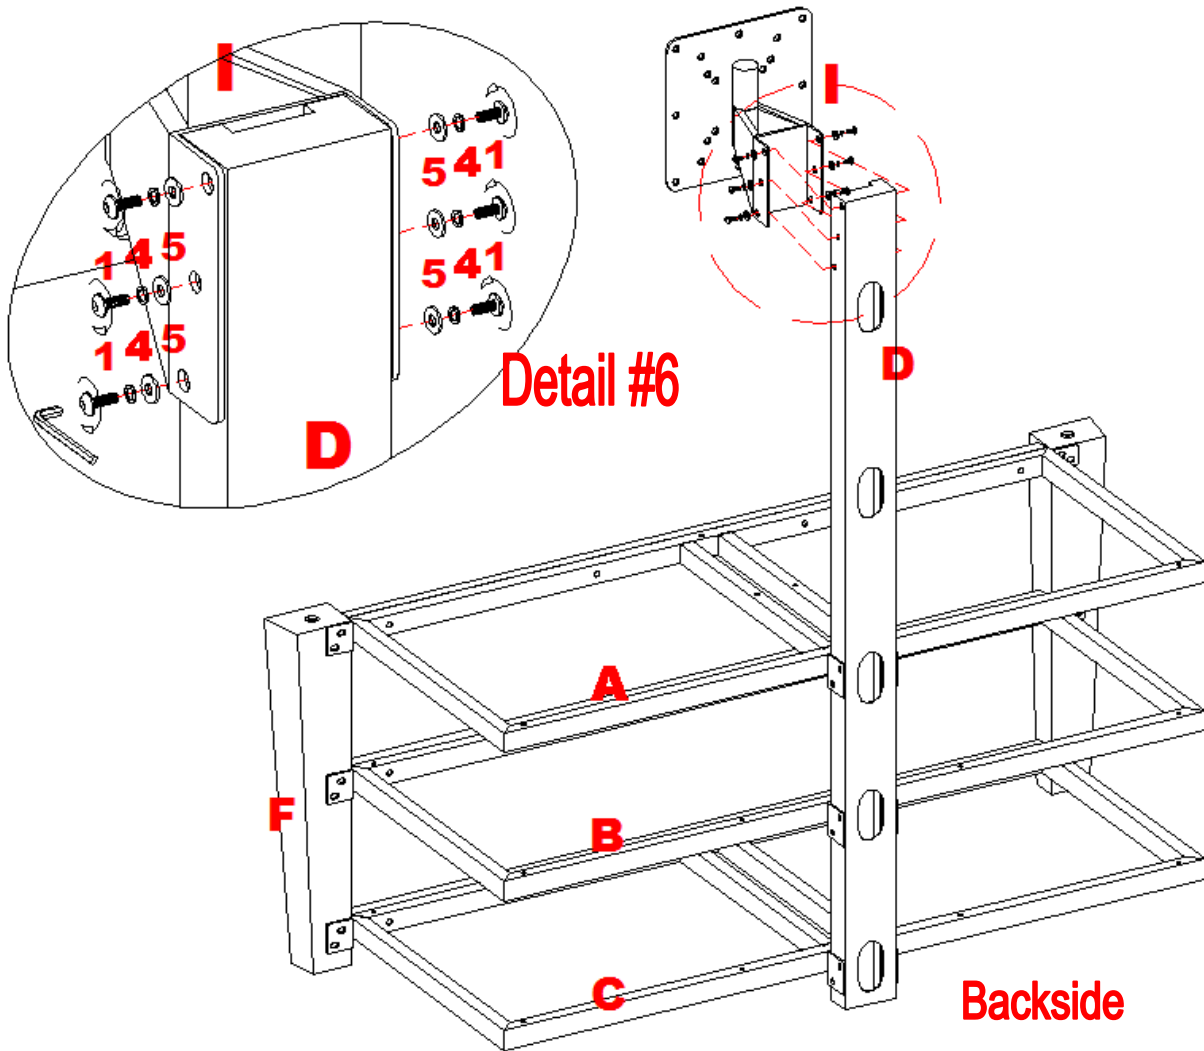

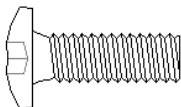Required hardware in this step			
Description:	(1) – 3/4" Bolt	(4) - Lock Washer	(5) - Flat Washer
Sketch			
Qty.	(6 pcs)	(6pcs)	(6pcs)
Tools required: Allen Wrench			

Please call for replacement parts or assistance: 1-866-942-5362


Assembly Instructions for Option 1: Floating Swivel Mount

Note: There are two mounting options included in this 3-in-1 system TV console:

1. Mounting Plate.
2. XYZ Mounting Frame to accommodate random hole patterns.

12. For the television with VESA hole patterns, you can mount your LCD directly to the Deluxe Bracket with Mounting Plate (I), using the appropriate Bolts through the Lock Washers and Flat Washers through the proper holes of Mounting Plate and then into the TV. See detail #7

Note: Hand threading the bolt in the TV Mounting Kit included into the threaded insert on the back of the TV to determine correct size bolt you will require. If you are unable to find the correct one, consult a local hardware store.

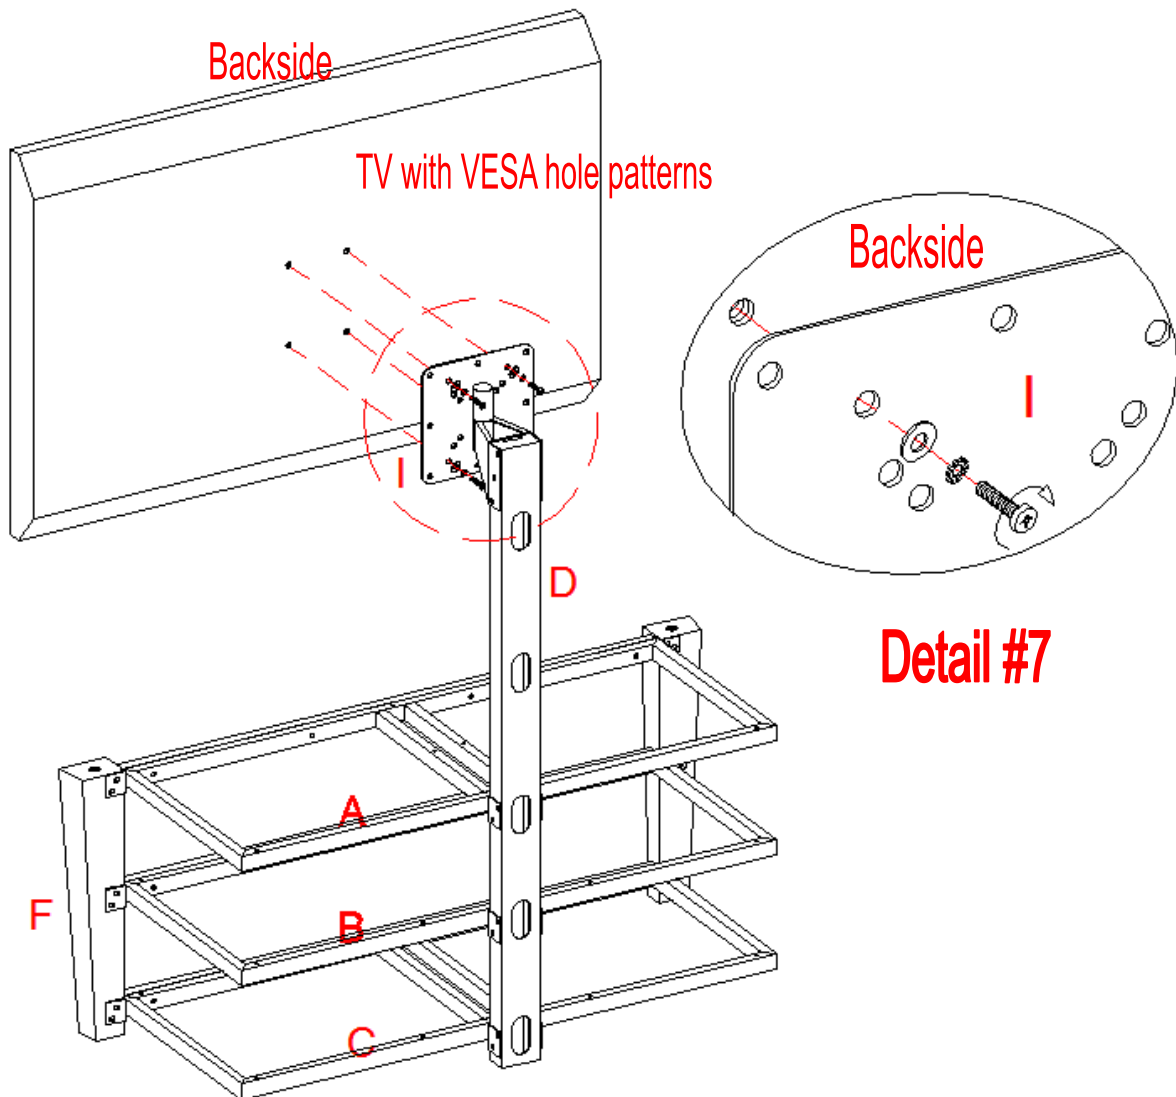

Parts Provided	Tools Required
TV Mounting Kit	Phillips Screwdriver


Please call for replacement parts or assistance: 1-866-942-5362





Assembly Instructions for Option 1: Floating Swivel Mount

Note: For Plasma and LCD TVs larger than 32", you must use the XYZ Mounting Frame (J) provided. The XYZ Mounting Frame will accommodate large LCD without VESA Hole Patterns and Plasma TV's with Random Hole Patterns.

13. Attach XYZ Mounting Frame (J) to the Deluxe Bracket with Mounting Plate (I) with the back hook is bottom, thread six 3/4" Bolts (1) with Large Flat Washers (7) through the appropriate slots of XYZ Mounting Frame and the top & bottom hole set on Mounting Plate, through the other Large Flat Washers (7) and Lock Washers (4) then secure with Nuts (3). Tighten with provided Open Wrench. See detail #8.

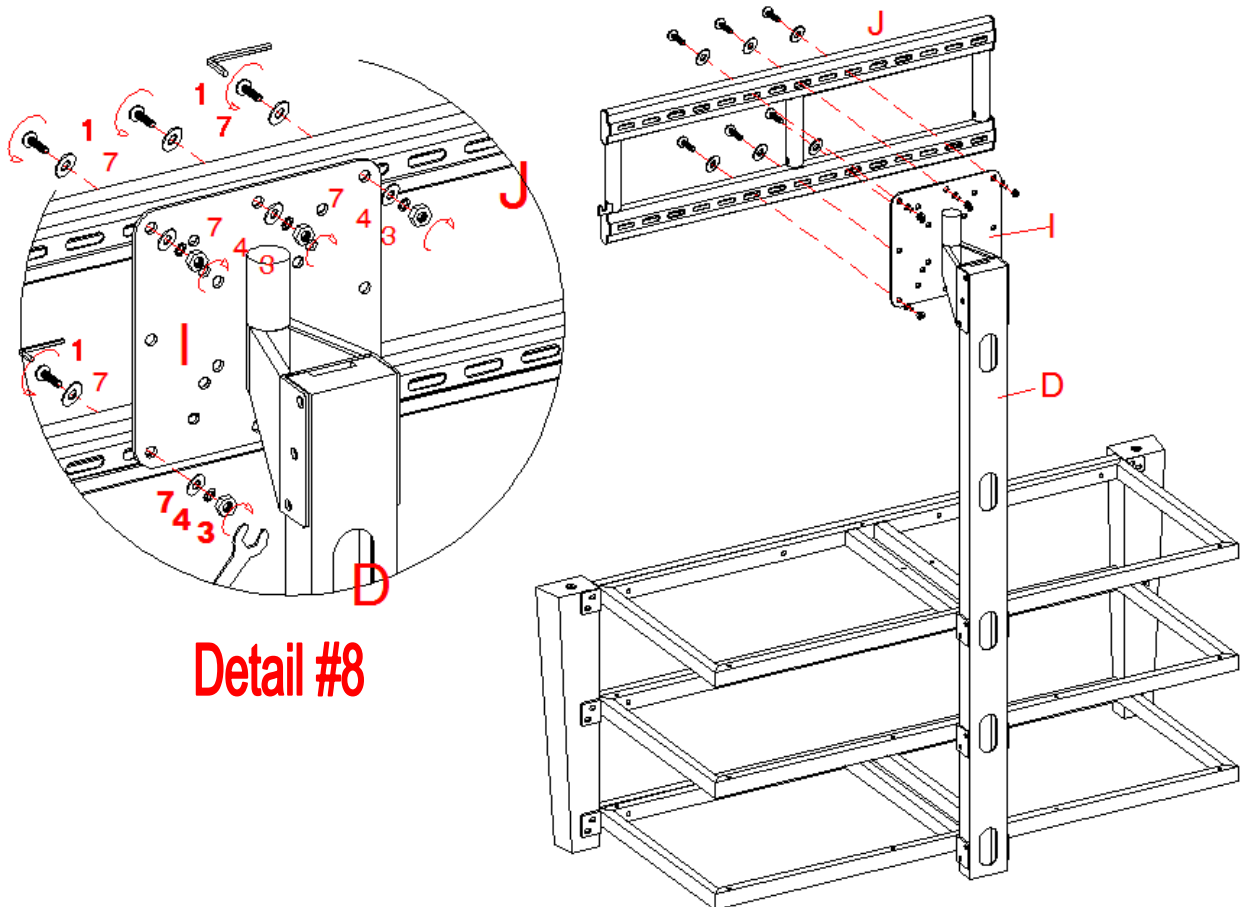Note: Make sure the Mounting Frame is centered on the Mounting Plate for added security.

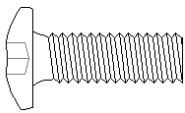

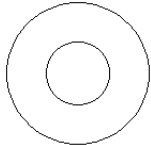Required hardware in this step				
Description:	(1)- 3/4" Bolt	(3)- Hex Nut	(4)- Lock Washer	(7)- Large Flat Washer
Sketch				
Qty.	(6 pcs)	(6 pcs)	(6 pcs)	(12 pcs)
<u>Tools required:</u> Allen Wrench and Open Wrench				


Please call for replacement parts or assistance: 1-866-942-5362

Mounting Monitor Bracket to a television with a flat back

Note: For televisions with a curved back or recessed back proceed directly to step #17

14. Determine the correct diameter of the bolt your TV requires by hand threading them into the threaded insert on the back of the TV. If you encounter any resistance, stop immediately. If you are unable to find the correct bolt consult a local hardware store.
15. Once you have determined the correct diameter Bolt, follow the appropriate Diagram below, thread the short Bolt through the appropriate Lock Washer, the Large Flat Washer, the Monitor Bracket (K), and into the upper threaded inserts of TV. As shown in detail #9.

Note: Lean the TV up against a wall or other solid surface when attaching with the Monitor Brackets. DO NOT place the TV face down on the glass this may cause permanent damage.
16. Proceed to insert the long Bolt through the appropriate Lock Washer, the Large Flat Washer, the slot of Monitor Bracket (K), a second Large Flat Washer (M4/M5 Diameter Bolts only), appropriate Spacer, and into the bottom threaded inserts of TV. As shown in detail #9 Make sure the Monitor Brackets (K) are centered and level with each other. Tighten the bolts securing the Monitor Brackets to the TV.

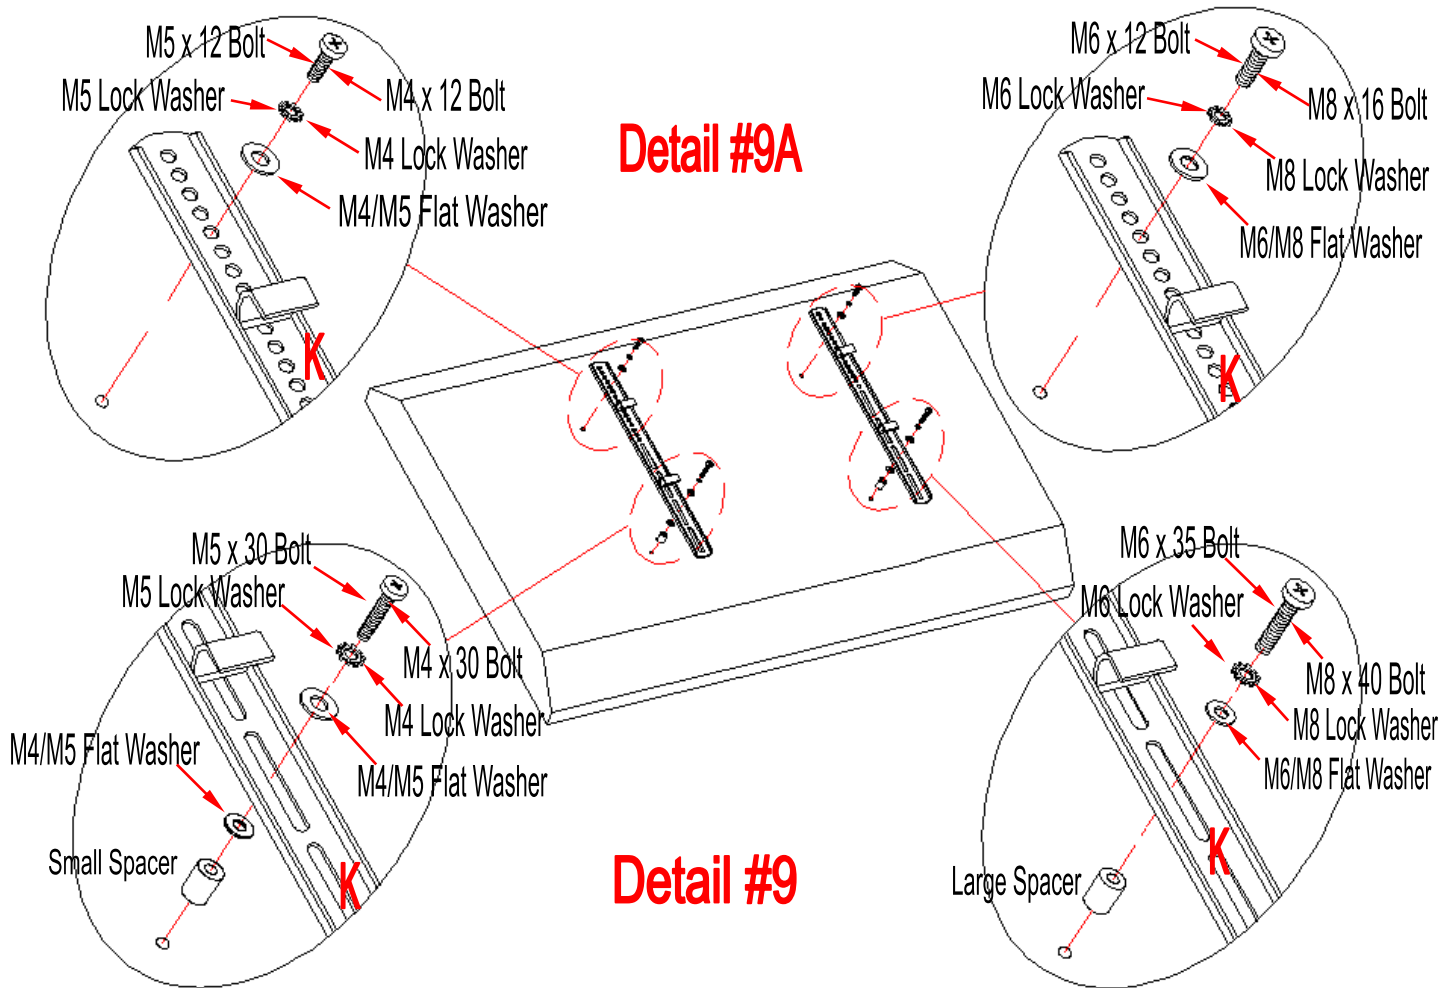


Please call for replacement parts or assistance: 1-866-942-5362

Mounting Monitor Bracket to a television with a curved / recess back

17. Determine the correct diameter of the bolt your TV requires by hand threading them into the threaded insert on the back of the TV. If you encounter any resistance, stop immediately. If you are unable to find the correct bolt consult a local hardware store.
18. Once you have determined the correct diameter Bolt, follow the appropriate Diagram below, thread the Bolt through the appropriate Lock Washer, the Large Flat Washer, the Monitor Bracket (K), a second Large Flat Washer (M4/M5 Diameter Bolts only), appropriate Spacer and into the threaded inserts of TV. See detail #10.

⚠ WARNING DO NOT LAY THE TELEVISION FACE DOWN ON THE GLASS

19. Make sure the Monitor Brackets (K) are vertically centered and level with each other. Tighten the bolts securing the Monitor Brackets (K) to the TV.

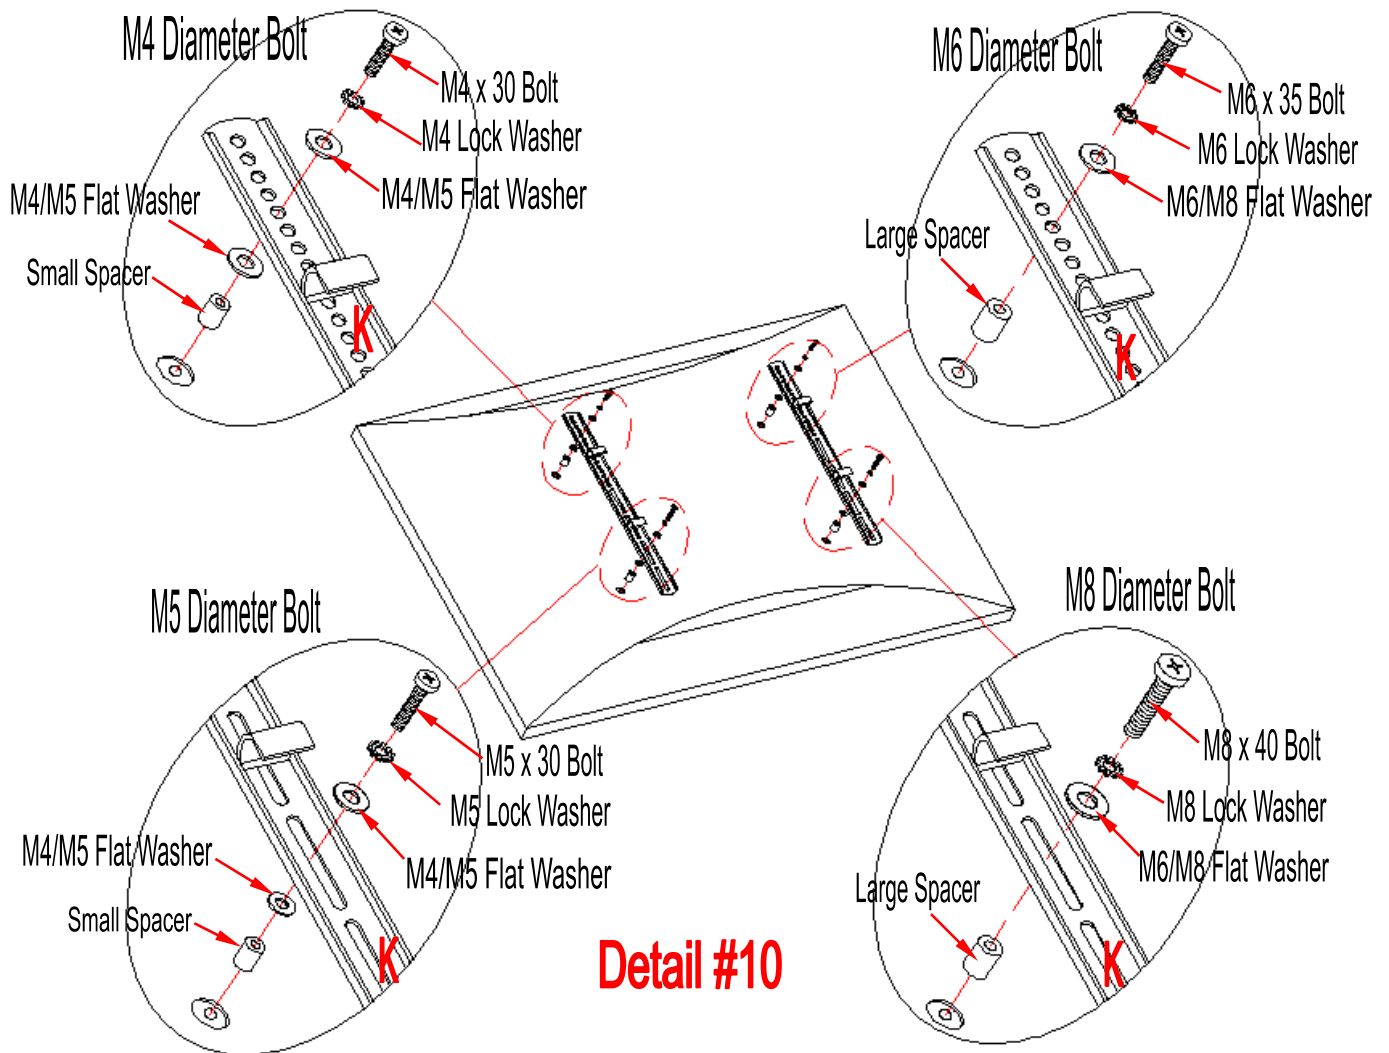


NOTE: If mounting your TV in the Wall Mount configuration, once you have completed the installation of the monitor brackets, proceed to PAGE 17.

Please call for replacement parts or assistance: 1-866-942-5362

Assembly Instructions for Option: Floating Swivel Mount

MAKE SURE ALL BOLTS ARE TIGHT AND SPINE IS AT A 90 DEGREE ANGLE AND USING A QUALITY LEVEL TO VERIFY THE MOUNTING FRAME IS LEVEL PRIOR TO INSTALLATION OF TV.

20. Once the Monitor Brackets (K) are attached onto the back of television, ask for assistance to lift the television up to the XYZ Mounting Frame (J). Place the hooks on Monitor Brackets over the Mounting Frame then lower them onto the bars of Mounting Frame. Proceed to center the television.
21. Insert the Safety Bar (L) into the bottom holes on the side of XYZ Mounting Frame (J) by sliding it all the way across the frame. Secure the Safety Bar by rotating the bent end into the slot of hook so that it is facing backward. Make sure it sits over the bottom hook of the Monitor Brackets. See detail #11.

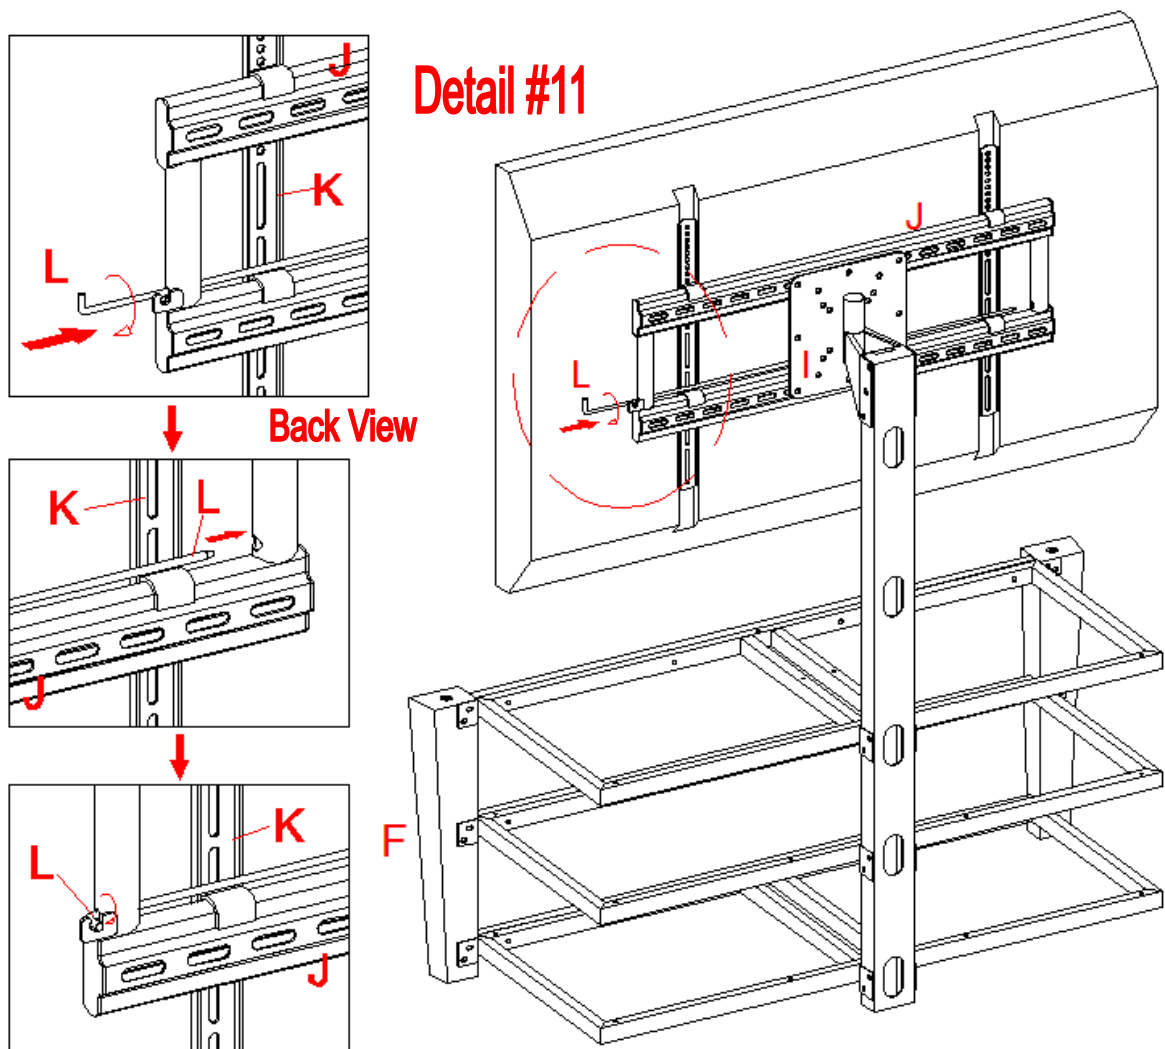

<u>Parts Provided</u>	<u>Qty</u>	<u>Tools Required</u>
L – Safety Bar	(1)	No Tool Required


Please call for replacement parts or assistance: 1-866-942-5362

Assembly Instructions for Option: Floating Swivel Mount

22. Repeat steps 7 & 8 to attach the Top Glass and Glass Shelves in place.
 23. Carefully move the console and position it in the desired location against a wall. Now, follow the instructions printed on the plastic bag in order to mount the Tipping Restraint Hardware Kit to the Spine properly. As shown in detail #12.

NOTE: You must install the Tipping Restraint Hardware with the unit to prevent tipping causing any accidents or damage to the unit.

24. You can enjoy your home entertainment center now. Swivel the TV left-or-right for optimum viewing control.

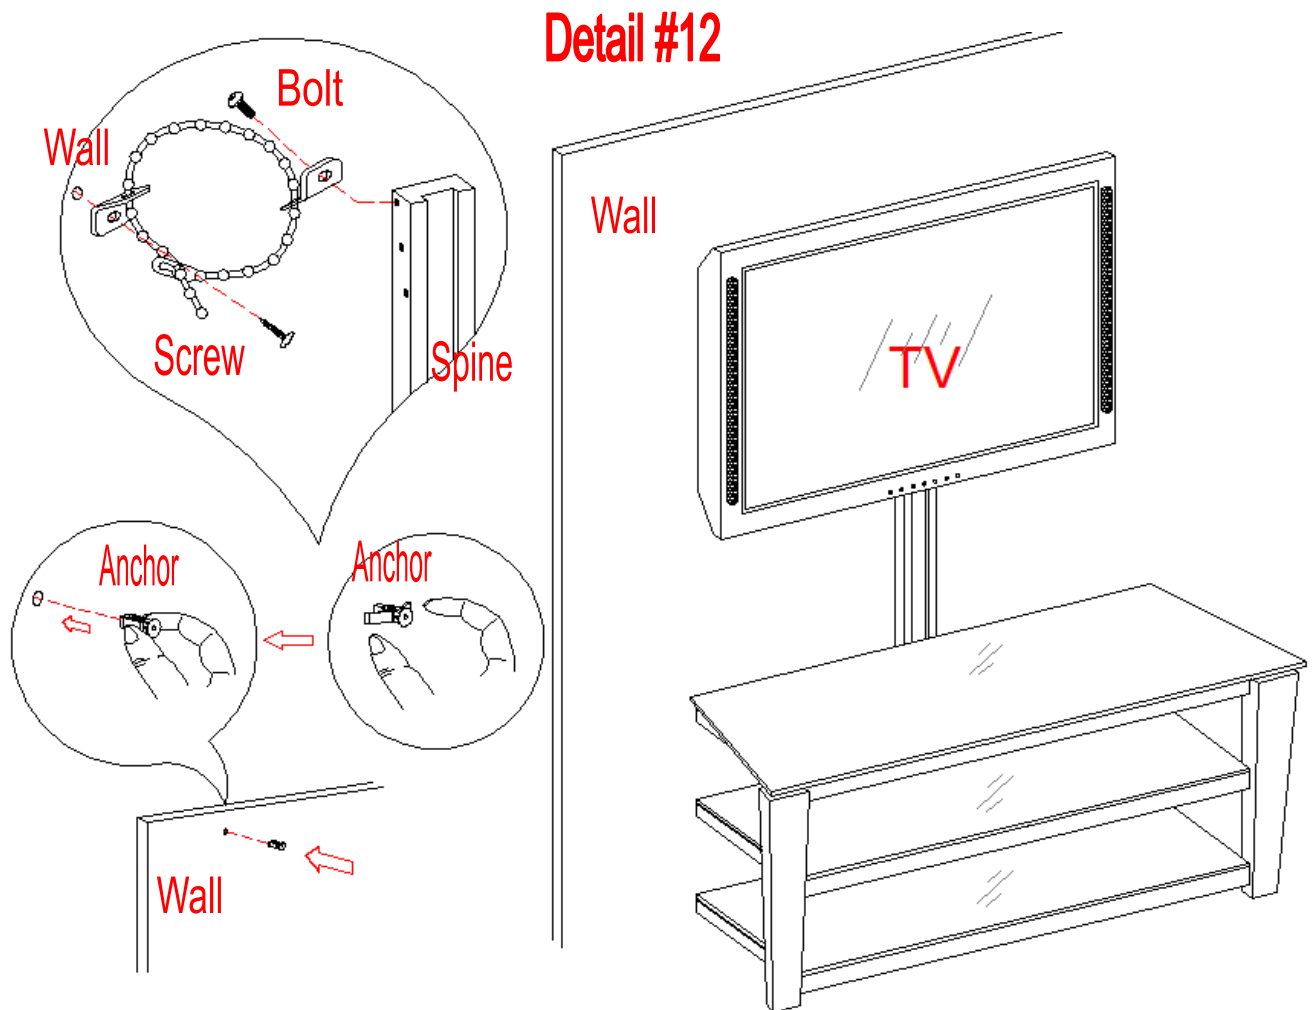

Tools Required: Allen Wrench (provided), Phillips Screwdriver, Mallet, Power Drill, and 3/8" Drill Bit.


STOP The following steps are only for those who wish to mount their TV directly to the wall. If you have already mounted your TV to the Swinging Floater or plan to display your TV on the top surface of the stand, disregard the following steps.

Assembly Instructions for Universal Wall Mount


Installing XYZ Mounting Frame onto a WOODEN STUD WALL

- 25. The XYZ Mounting Frame must be mounted to two Wood Studs at least 12" apart, using a high quality stud sensor to locate the two adjacent studs. After you have located the studs, verify with a nail for added security. See detail #13A.
- 26. Pre-drill a 2 1/2" deep hole at the desired height in each stud using a 3/16" drill bit, make sure that the holes are centered in the studs and level with each other. Use the XYZ Mounting Frame (J) as a template to mark the corresponding location for the bottom holes in each stud, drill holes 2 1/2" deep with the 3/16" drill bit at the marked location.
- 27. Orient the Mounting Frame with the "C" shape plate against the wall, and using four Lag Bolts (9) with Large Flat Washer (7) through the slots of "C" shape plate on Mounting Frame into the holes in the wall, secure the mounting frame to the wall as shown in detail #13B.



Detail #13A

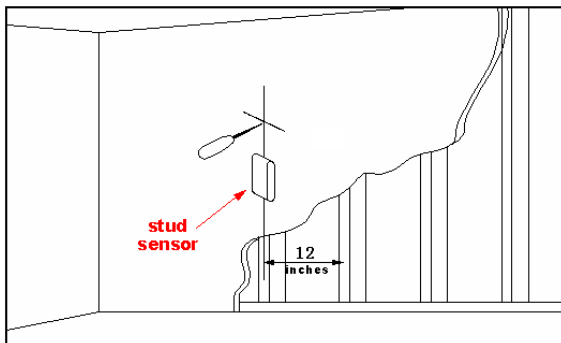

Detail #13B

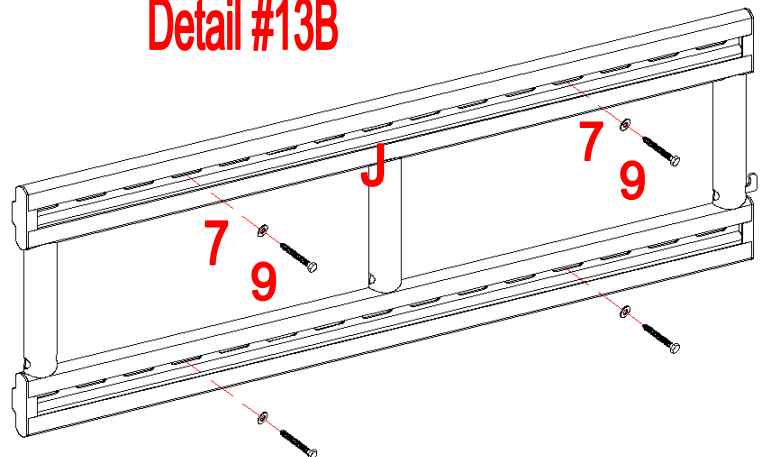


WARNING Do not over tighten the Lag Bolts. Tighten Lag Bolts only until the Lag Bolt Washer is pulled firmly against the "C" Plate of Mounting Frame. If there is a layer of drywall or other material, this drywall or other material may not exceed 5/8 inch in thickness. Failure to heed this caution may result property damage and/or personal injury.
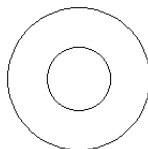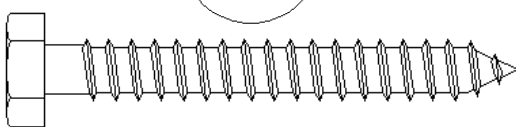
<u>Hardware provided</u>	<u>Sketch</u>	<u>Qty.</u>
(7) Large Flat Washer		(4)
(9) 2-1/2" Lag Bolt		(4)
<u>Tools required</u>		
Stud Sensor, Mallet, Power Drill, 3/16" Drill Bit, Socket Set		

Please call for replacement parts or assistance: 1-866-942-5362




Assembly Instruction for installing XYZ Mounting Frame onto BRICK, SOLID CONCRETE OR CONCRETE BLOCK WALLS

28. Use the XYZ Mounting Frame (J) as a template, mark six holes location on the wall, three in the top row and three in the bottom row of slots. Make sure that the holes are level and there is at least 6" between any two holes, pre-drill these holes with a 1/2" masonry bit to at least 2 1/2" in depth.
29. Insert a Concrete Anchor (8) into each of these holes; make sure they are completely seated and flush with the concrete surface, even if there is a layer of drywall or other material in front of the concrete.
30. Attach the XYZ Mounting Frame (J) to the wall using six Lag Bolts (9) and Large Flat Washers (7) through the slot of "C" Plate on Mounting Frame into the Concrete Anchors (8) in the wall as shown in detail #14. Make sure the back hook of Mount Frame is bottom.

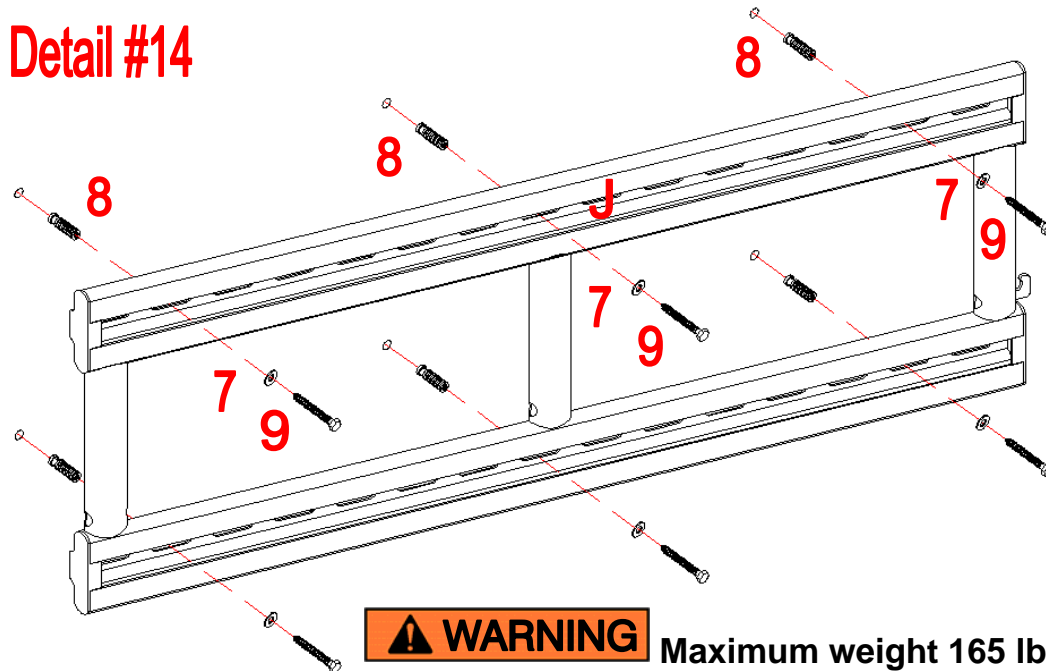

⚠ WARNING Maximum weight 165 lb. (74.8 kg)

⚠ WARNING Concrete Anchors should only be used for masonry mounting. NEVER use the wall anchors to mount the unit to drywall.

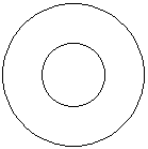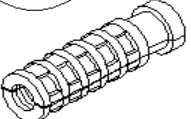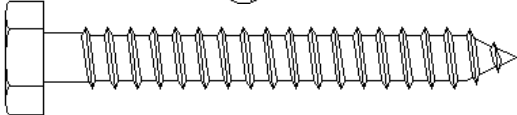
<u>Hardware provided</u>	<u>Sketch</u>	<u>Qty.</u>
(7) Large Flat Washer		(6)
(8) 1-3/4" Concrete Anchor		(6)
(9) 2-1/2" Lag Bolt		(6)

Tools required: Mallet, Power Drill, 1/2" Masonry Bit for brick concrete, Socket Set

Please call for replacement parts or assistance: 1-866-942-5362

Assembly Instructions

31. Attach the Monitor Brackets (K) to the back of the television following steps 14 through 16, or 17 through 19, depending on the type of TV that you own. Once the Monitor Brackets (K) are attached onto the back of television, ask for assistance to lift the television up to the XYZ Mounting Frame (J). Place the hooks on Monitor Brackets over the Mounting Frame then lower them onto the bars of Mounting Frame. Proceed to center the television.
32. Insert the Safety Bar (L) into the bottom holes on the side of XYZ Mounting Frame (J) by sliding it all the way across the frame. Secure the Safety Bar by rotating the bent end into the slot of hook so that it is facing wall. Make sure it sits over the bottom hook of the Monitor Brackets. See detail #15.
33. Place assembled console under your TV. Finally, connect the A/V and power cables to your TV. You are now ready to enjoy your wall-mounted Flat Panel TV.

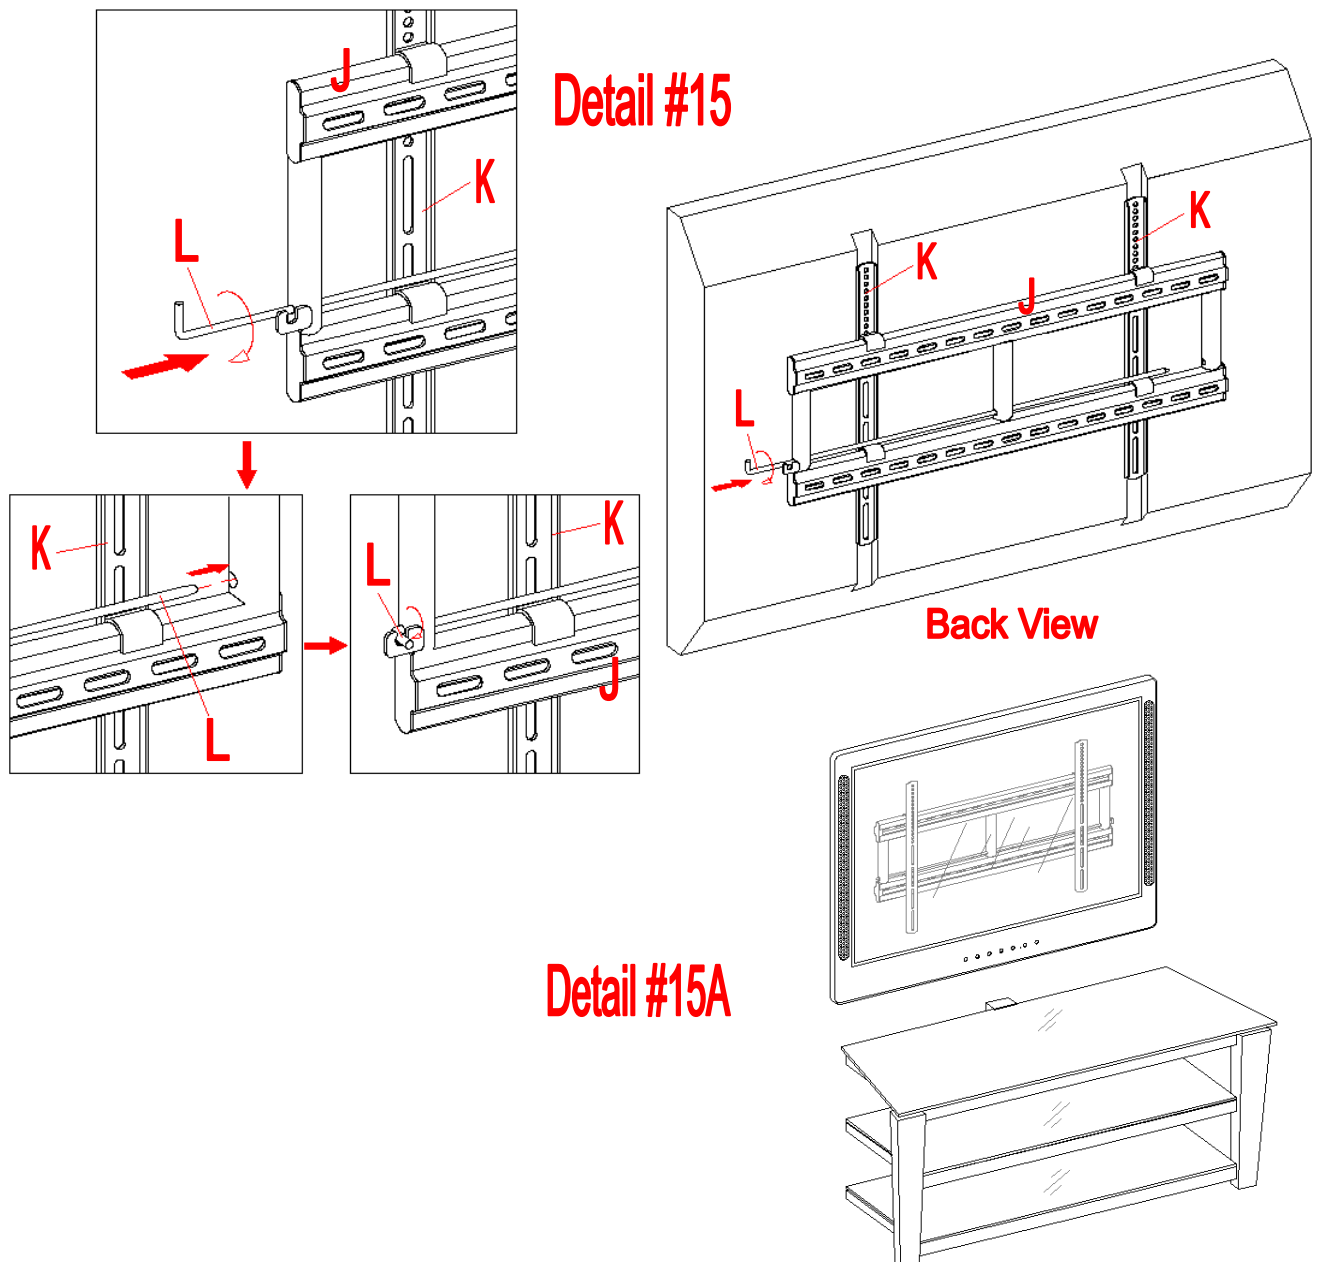

Please call for replacement parts or assistance: 1-866-942-5362

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

Further advice about wood furniture care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

A Touch-up Pen has been provided to repair any small nicks or scratches that may occur during assembly or shipping.

We hope you enjoy your purchase for many years and thank you for choosing Whalen Furniture.

QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

Customer Service: 1-866-942-5362

8:30 a.m. - 4:30 p.m. PST, Monday to Friday


www.whalenstyle.com



Please call for replacement parts or assistance: 1-866-942-5362

IF YOU NEED TO ORDER PARTS PLEASE USE THE LIST BELOW

52" 3-in-1 Console (XL-5)

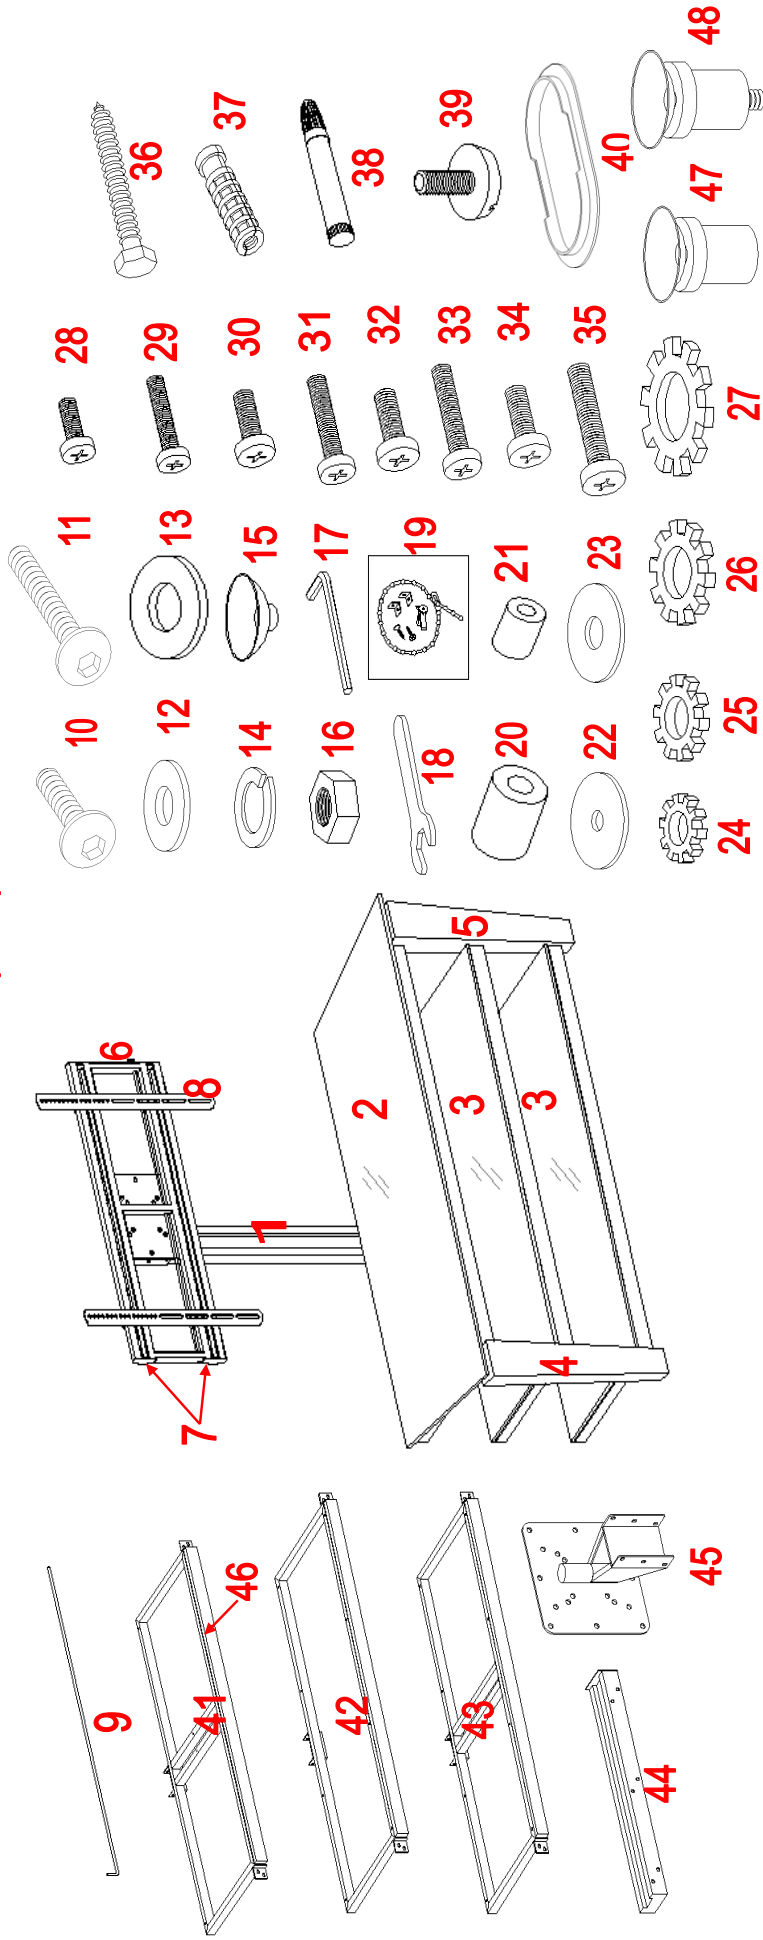

*XL-5-1-LS	Long Spine	*XL-5-18-OW	Open Wrench	*XL-5-35-M8x40B	M8 x 40 Bolt
*XL-5-2-TG	Top Glass	*XL-5-19-TRHK	Tipping Restraint Hardware Kit	*XL-5-36-2 1/2LB	2 1/2" Lag Bolt
*XL-5-3-GS	Glass Shelf	*XL-5-20-LS	Large Spacer	*XL-5-37-1 3/4CA	1 3/4" Concrete Anchor
*XL-5-4-LL	Left Leg	*XL-5-21-SS	Small Spacer	*XL-5-38-TUP	Touch-up Pen
*XL-5-5-RL	Right Leg	*XL-5-22-M4M5FW	M4/M5 Flat Washer (for TV mounting)	*XL-5-39-FL	Floor Leveler
*XL-5-6-MF	Mounting Frame	*XL-5-23-M6M8FW	M6/M8 Flat Washer (for TV mounting)	*XL-5-40-OPG	Oval Plastic Grommet
*XL-5-7-PC	Plastic Cover	*XL-5-24-M4LW	M4 Lock Washer	*XL-5-41-TSF	Top Shelf Frame
*XL-5-8-MB	Monitor Bracket	*XL-5-25-M5LW	M5 Lock Washer	*XL-5-42-MSF	Middle Shelf Frame
*XL-5-9-SB	Safety Bar	*XL-5-26-M6LW	M6 Lock Washer	*XL-5-43-BSF	Bottom Shelf Frame
*XL-5-10-3/4B	3/4" Bolt	*XL-5-27-M8LW	M8 Lock Washer	*XL-5-44-SS	Short Spine
*XL-5-11- 1 1/2B	1 1/2" Bolt	*XL-5-28-M4x12B	M4 x 12 Bolt	*XL-5-45-DBWP	Deluxe Bracket with Mounting Plate
*XL-5-12-FW	Flat Washer	*XL-5-29-M4x30B	M4 x 30 Bolt	*XL-5-46-DR	Decorative Rail (for Shelf Frame)
*XL-5-13-LFW	Large Flat Washer	*XL-5-30-M5x12B	M5 x 12 Bolt	*XL-5-47-GR	Glass Raiser
*XL-5-14-LW	Lock Washer	*XL-5-31-M5x30B	M5 x 30 Bolt	*XL-5-48-GRTP	Glass Raiser with Threaded Pin
*XL-5-15-SC	Suction Cup	*XL-5-32-M6x12B	M6 x 12 Bolt	*XL-5-49-CH	Complete Hardware
*XL-5-16-N	Nut	*XL-5-33-M6x35B	M6 x 35 Bolt		
*XL-5-17-AW	Allen Wrench	*XL-5-34-M8x16B	M8 x 16 Bolt		
				24	25
				26	27
				28	29
				30	31
				32	33
				34	35
				36	37
				38	39
				40	41
				42	43
				44	45
				46	47
				48	