


REPLACEMENT PARTS LIST


For replacement parts, call our customer service department at 1-866-942-5362, 8:30 a.m. - 4:30 p.m., PST, Monday - Friday.

PART	DESCRIPTION	PART#
A	Top Panel	*WSLWFP48-5-01-TP
B	Bottom Panel	*WSLWFP48-5-02-BP
C	Center Shelf	*WSLWFP48-5-03-CS
D	Upper Side Panel	*WSLWFP48-5-04-USP
E	Upper Side Panel Molding	*WSLWFP48-5-05-USPM
F	Upper Partition Panel	*WSLWFP48-5-06-UPP
G	Upper Partition Panel Molding	*WSLWFP48-5-07-UPPM
H	Lower Left Side Panel	*WSLWFP48-5-08-LLSP
I	Lower Right Side Panel	*WSLWFP48-5-09-LRSP
J	Lower Left Partition Panel	*WSLWFP48-5-10-LLPP
K	Lower Right Partition Panel	*WSLWFP48-5-11-LRPP
L	Top Stretcher	*WSLWFP48-5-12-TS
M	Middle Crossbar	*WSLWFP48-5-13-MC
N	Bottom Front Molding	*WSLWFP48-5-14-BFM
O	Bottom Back Stretcher	*WSLWFP48-5-15-BBS
P	Door	*WSLWFP48-5-16-D
Q	Adjustable Shelf	*WSLWFP48-5-17-AS
R	Upper Back Panel	*WSLWFP48-5-18-UBP
S	Lower Back Panel	*WSLWFP48-5-19-LBP
T	Door Glass	*WSLWFP48-5-20-DG
	Door Hinge with Screws	*WSLWFP48-5-21-DHS
	Complete Hardware	*WSLWFP48-5-CH
	Complete Fireplace Insert	FB23-2D-IR
	Remote Control 6-Button	00RC006B-VSE

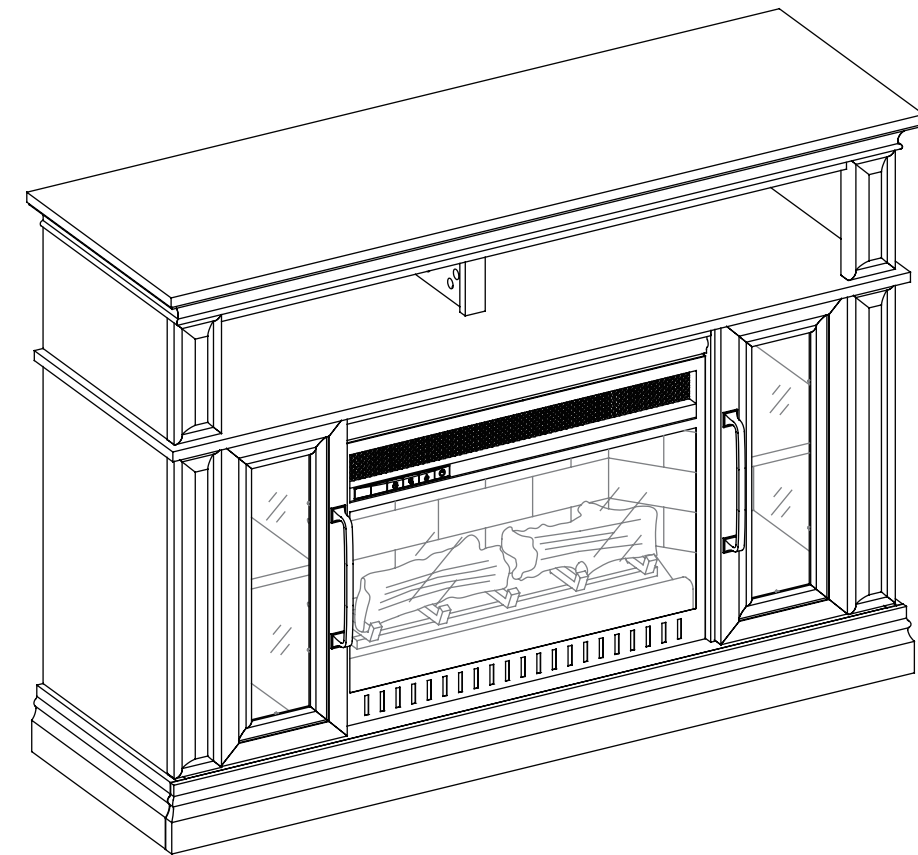

On-line Video Instruction Guides
Go to www.guides.sellpoints.com to view step-by-step instructional videos for operating the fireplace. Enter the following product number on the website.

WSLWFP48-5

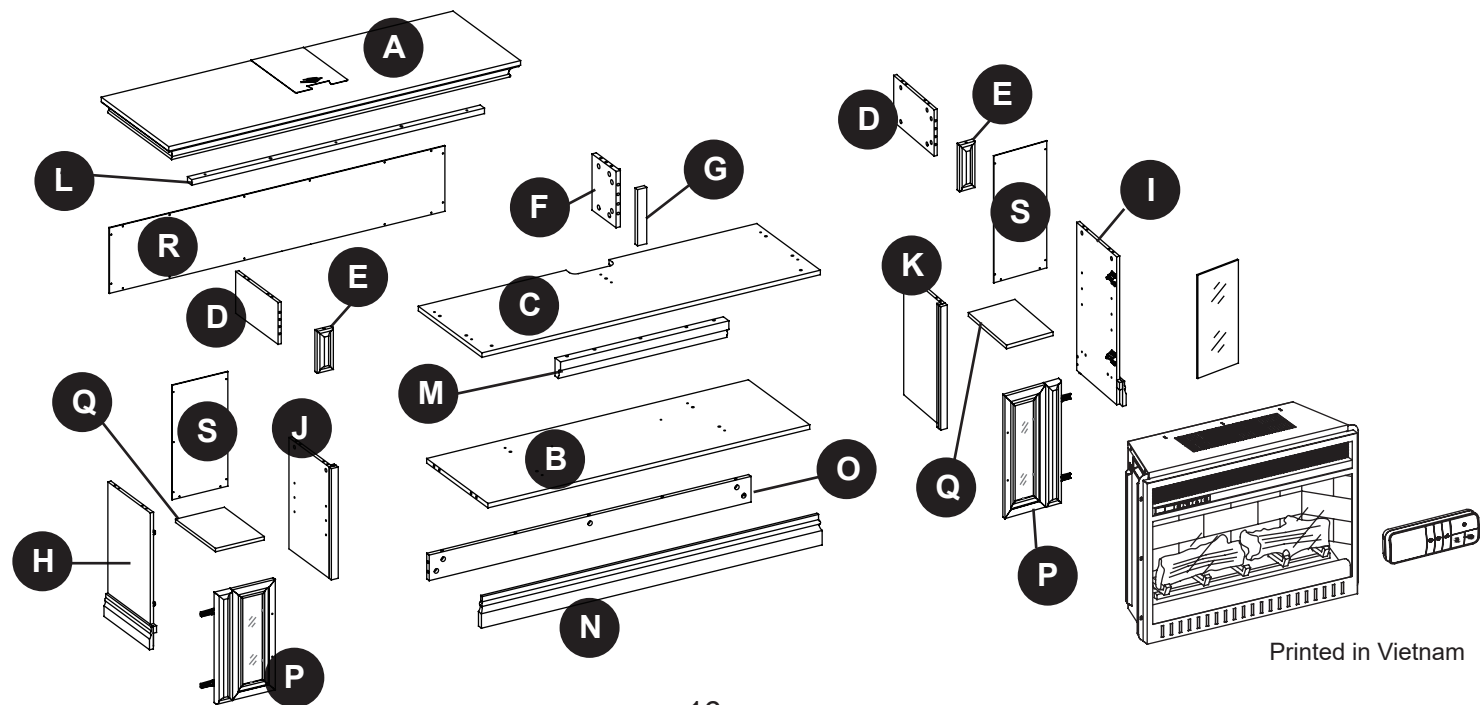

Printed in Vietnam

ITEM # 1031289

48 in. Media Console Infrared Electric Fireplace

MODEL # WSLWFP48-5

Español p. 17

ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____




Please call for replacement parts or assistance: 1-866-942-5362
Pacific Standard Time: 8:30 a.m. – 4:30 p.m., PST, Monday to Friday
Or visit our web site: www.whalenfurniture.com

TABLE OF CONTENTS

Wood Dowel Installation.....	2
Package Contents.....	3
Hardware Contents.....	4
Safety Information.....	5
Preparation	5
Assembly Instructions.....	6
Care and Maintenance	15
One-Year Warranty	15
Replacement Parts List	16


WOOD DOWEL INSTALLATION

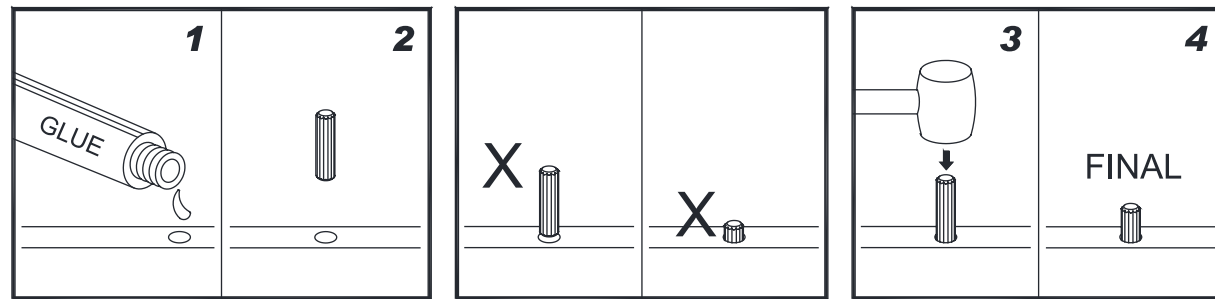

1. Apply glue to each dowel prior to inserting the dowel into the hole. Excess glue can be wiped off with damp cloth.
2. Insert dowel at least half way by tapping lightly with a rubber mallet if necessary.


NOTE: IT IS VERY IMPORTANT TO USE GLUE WITH DOWELS.

CAM LOCK SYSTEM OPERATION

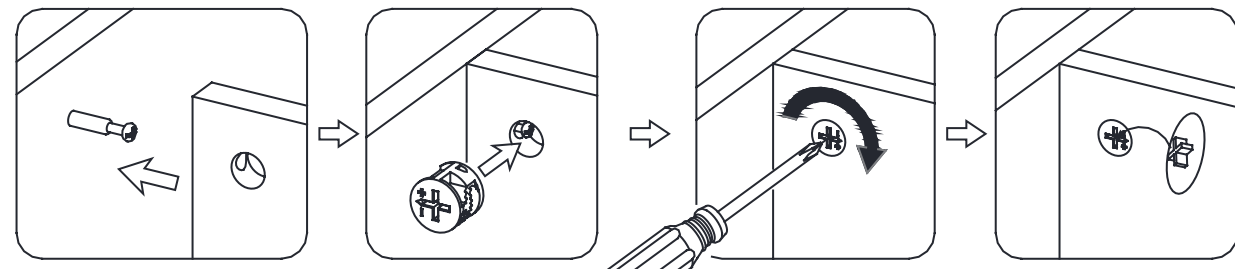






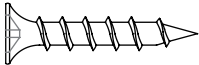
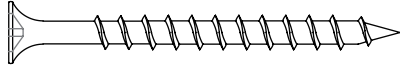
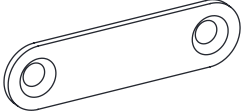
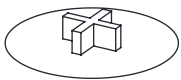
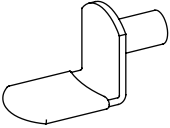
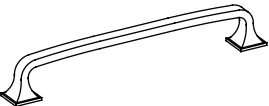

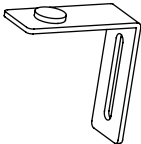

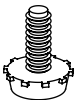

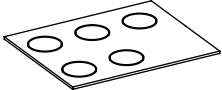



1. Screw the Cam Bolt into the threaded inserts on the panel. Connect both panels together; making sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock faces out and points towards Cam Bolt.
3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt in place.
4. Plug the Cam Lock Cover into the cross slot of the Cam Lock to conceal the Cam.

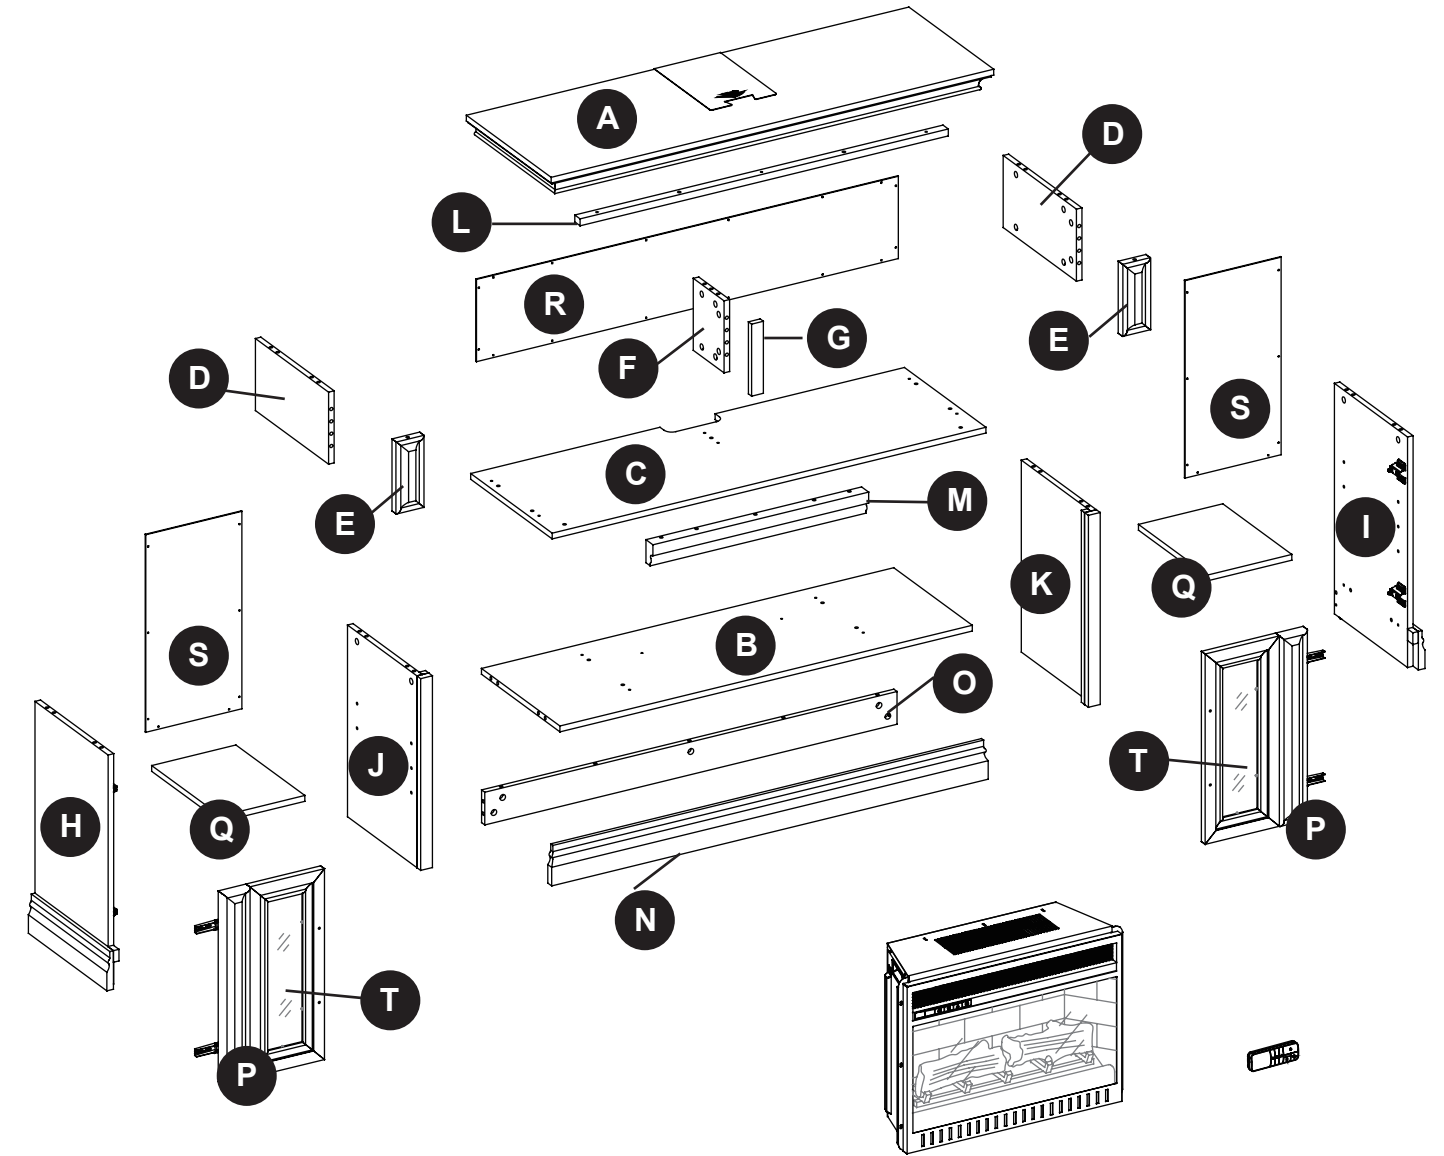PACKAGE CONTENTS



PART	DESCRIPTION	QUANTITY	PART	DESCRIPTION	QUANTITY
A	Top Panel	1	L	Top Stretcher	1
B	Bottom Panel	1	M	Middle Crossbar	1
C	Center Shelf	1	N	Bottom Front Molding	1
D	Upper Side Panel	2	O	Bottom Back Stretcher	1
E	Upper Side Panel Molding	2	P	Door	2
F	Upper Partition Panel	1	Q	Adjustable Shelf	2
G	Upper Partition Panel Molding	1	R	Upper Back Panel	1
H	Lower Left Side Panel	1	S	Lower Back Panel	2
I	Lower Right Side Panel	1	T	Door Glass (pre-attached)	2
J	Lower Left Partition Panel	1		Fireplace Insert	1
K	Lower Right Partition Panel	1		Remote Control with Battery	1

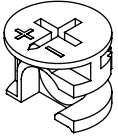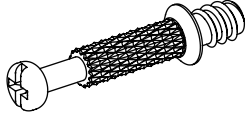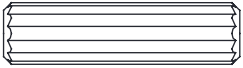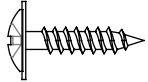
HARDWARE CONTENTS (shown actual size)

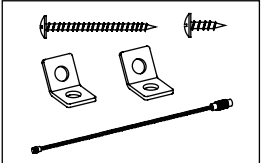AA	BB	CC	DD	EE
				
Cam Lock	Cam Bolt	M8 x 30 mm Wood Dowel	M3.5 x 15 mm Washer Head Screw	M3.5 x 15 mm Short Screw
Qty. 41+2 extra	Qty. 41+2 extra	Qty. 46+2 extra	Qty. 34+1 extra	Qty. 12+1 extra
FF	GG	HH	II	JJ
				
M4 x 25 mm Screw	M4 x 50 mm Screw	Metal Bracket	Cam Lock Cover	Shelf Pin
Qty. 3+1 extra	Qty. 4+1 extra	Qty. 2	Qty. 26+1 extra	Qty. 8+1 extra
KK	LL	MM	NN	OO
				
Handle	22 mm Handle Bolt	L-shaped Metal Brace	Corner Connector	Floor Leveler
Qty. 2	Qty. 4	Qty. 2	Qty. 2	Qty. 2
PP	QQ	RR	SS	TT
				
Acrylic Stopper	Rubber Bumper	Glue	Touch-up Pen	Tipping Restraint Hardware Kit
Qty. 1	Qty. 4+1	Qty. 1	Qty. 1	Qty. 2

! SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

- Do not allow children to climb or play in or around this product.
- Use this unit for its intended purpose only. Do not use shelves as step ladder.
- To avoid damage, assemble the product on a sturdy, level and protective surface.
- Two people should work together to assemble the unit.
- Make sure all bolts/screws are tightly fastened before the unit is used.
- Check bolts/screws periodically and tighten them if necessary.
- Do not push furniture, especially on carpeted floor. Have someone help you lift the item and place it in its new location. Remove any shelves before moving.

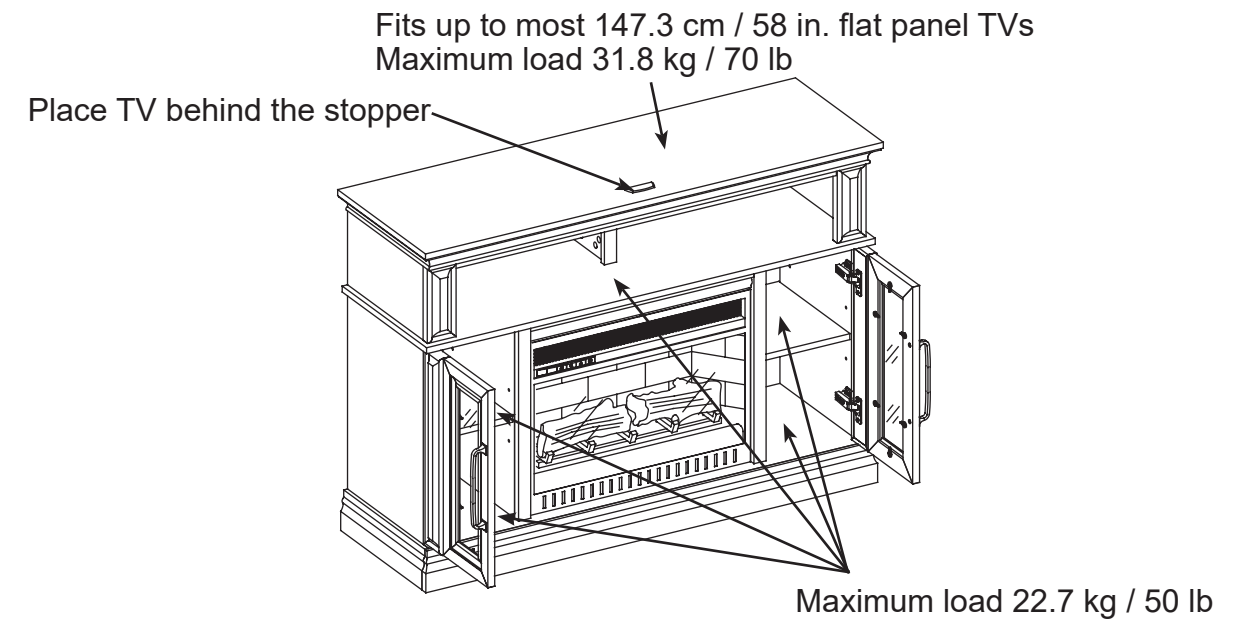

! WARNING

This unit is not intended for use with CRT TVs. Use only with flat panel TVs and audio/video equipment meeting recommended size and weight limits. Never use with larger/heavier than recommended flat panel TVs or equipment. To avoid instability, place flat panel TV in the center of the unit; the base of the television must be able to rest on the supporting surface of the unit without over-hanging the edges. Improperly positioned flat panel TVs, or flat panel TVs or other equipment that exceed recommended size and weight limits could fall off or break the unit, causing possible serious injury.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.




Estimated Assembly Time: 60 minutes


Tools Required for Assembly (not included): Phillips Screwdriver, Stud Finder, Power Drill, 1/8 in. Drill Bit and Marking Pencil.

ASSEMBLY INSTRUCTIONS

- 1a. Unpack the unit and confirm that you have all the hardware and required parts. Assemble the unit on a carpeted floor or the empty carton to avoid any scratch.
- 1b. Glue two wood dowels (CC) into the inner holes of top stretcher (L) and attach it to the top panel (A) with three screws (FF).


Hardware Used

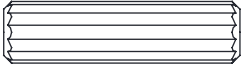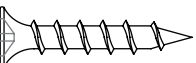
CC	Wood Dowel		x 2
FF	M4 x 25 mm Screw		x 3
RR	Glue		x 1

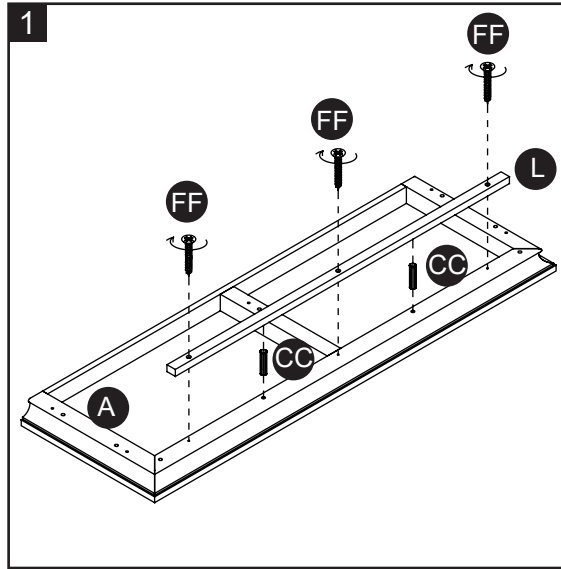

2. Securely screw 24 cam bolts (BB) into the designated small holes on the top panel (A), bottom panel (B), lower side panels (H and I), upper side moldings (E) and upper partition panel molding (G). Fully tighten with a Phillips screwdriver.


Hardware Used

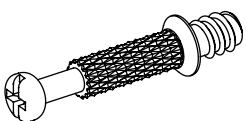
BB	Cam Bolt		x 24
-----------	----------	--	------

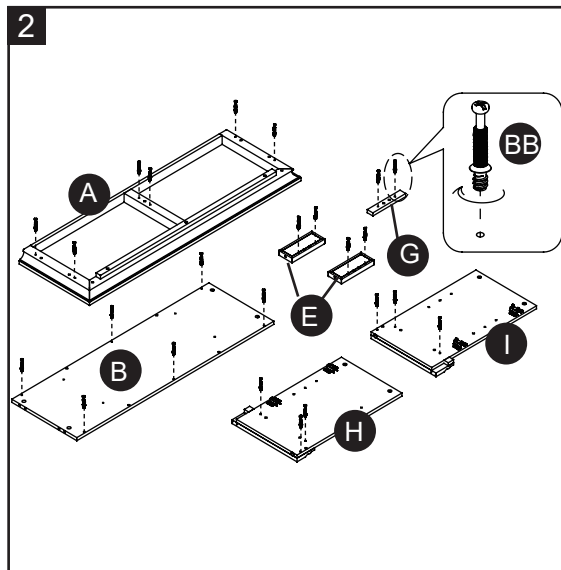

3. Securely screw 11 cam bolts (BB) into the designated small holes on the center shelf (C). Fully tighten with a Phillips screwdriver.

Hardware Used


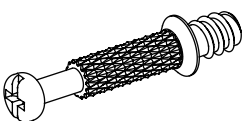

BB	Cam Bolt		x 11
-----------	----------	---	------

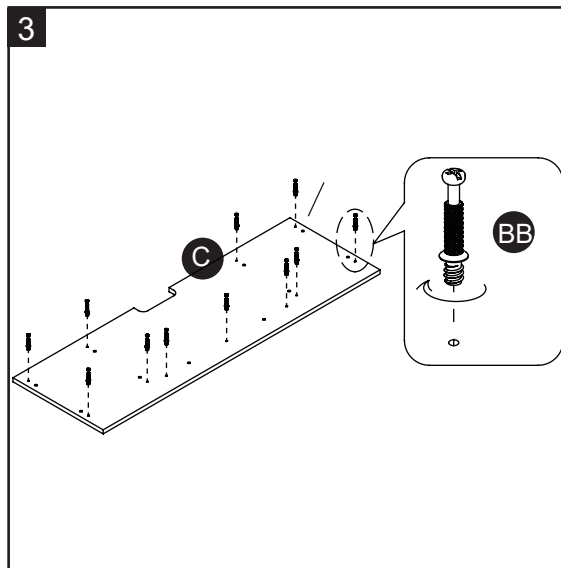


ASSEMBLY INSTRUCTIONS

4. Glue two wood dowels (CC) into the inner holes of middle crossbar (M). Align and attach the middle crossbar (M) to the center shelf (C) by engaging three cam locks (AA).




Hardware Used

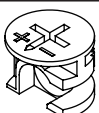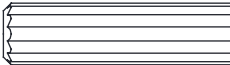
AA	Cam Lock		x 3
CC	Wood Dowel		x 2
RR	Glue		x 1

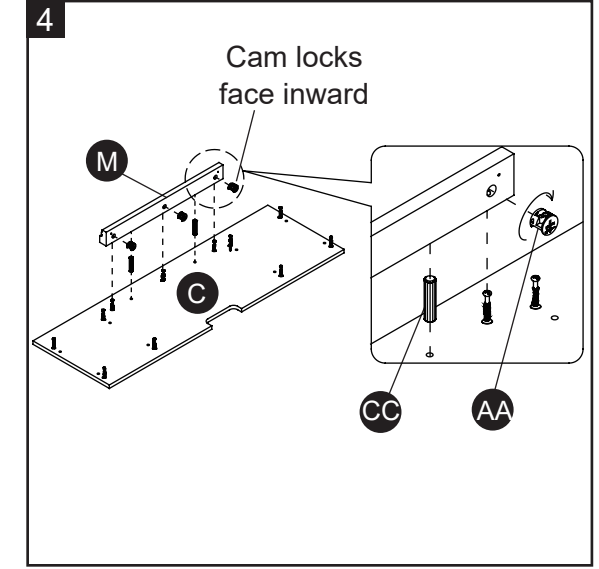

5. Glue four wood dowels (CC) into the inner holes of the bottom front molding (N) and bottom back stretcher (O) and attach them to the bottom panel (B) by engaging six cam locks (AA).

Hardware Used

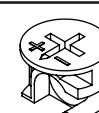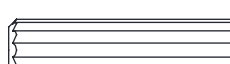AA	Cam Lock		x 6
CC	Wood Dowel		x 4
RR	Glue		x 1

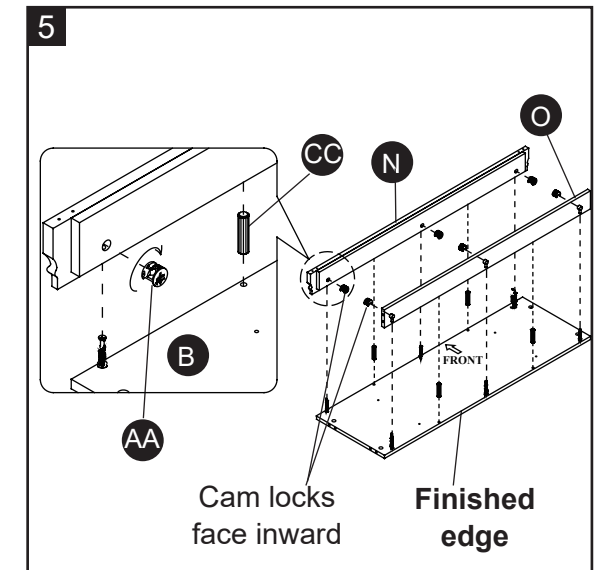





- 6a. Glue six wood dowels (CC) into the inner holes of the previous assembly at both ends.

- 6b. Align the large holes on both lower side panels (H and I) with the inserted wood dowels and press them together. Attach the lower side panels (H and I) in place by engaging six cam locks (AA).

Note: To ensure proper assembly in future steps, the Finished Edge of bottom panel (B) must be facing down.

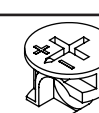Hardware Used

AA	Cam Lock		x 6
CC	Wood Dowel		x 6
RR	Glue		x 1

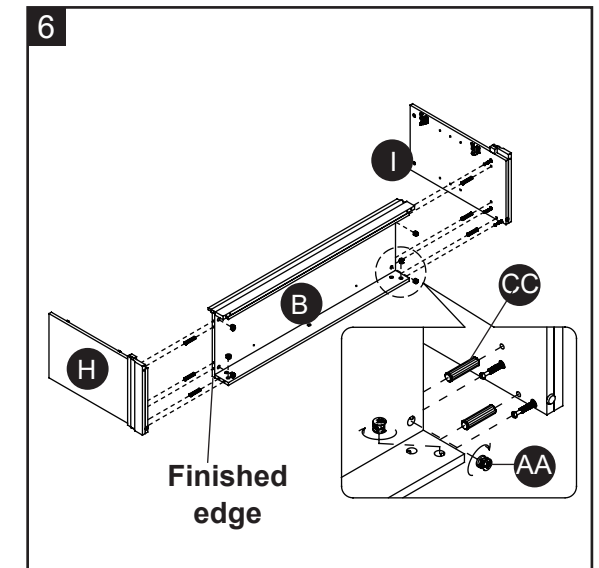


ASSEMBLY INSTRUCTIONS

7. With the pilot holes as a guide, fasten two corner connectors (NN) to the joints where the bottom front molding (N) meets with the bottom side panels (H and I), using four short screws (EE) per connector.

Hardware Used

EE M3.5 x 15 mm Short Screw x 8


NN Corner Connector x 2

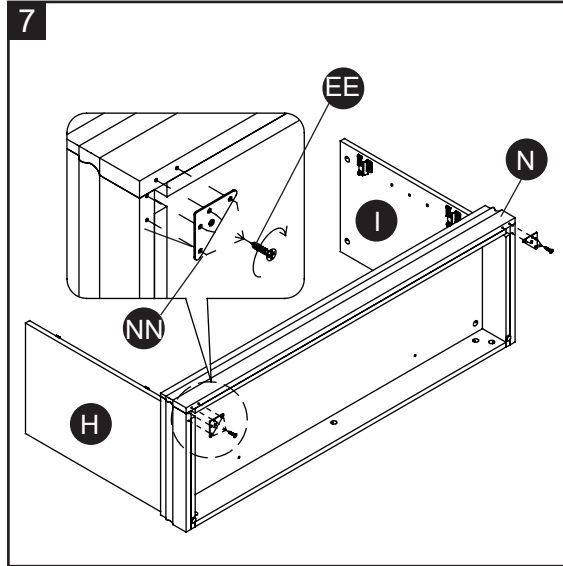

8. Screw two floor levelers (OO) onto the installed corner connectors (NN).

Hardware Used

OO Floor Leveler x 2

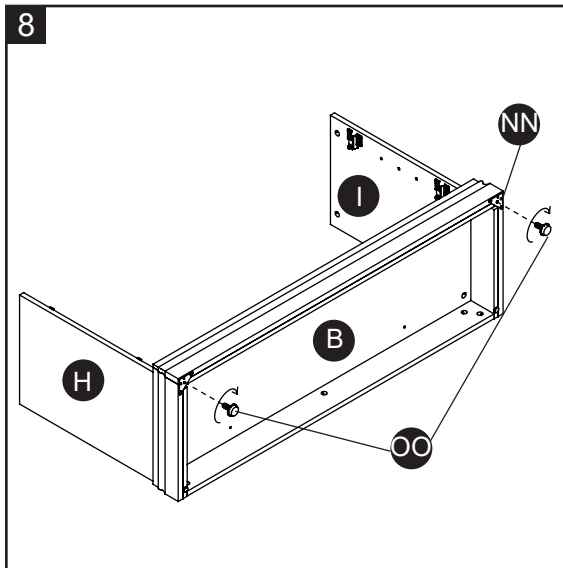


9. Glue four wood dowels (CC) into the bottom inner holes of both partition panels (J and K) and attach them to the bottom panel (B) with four long screws (GG).

Hardware Used

CC Wood Dowel x 4

GG M4 x 50 mm Screw x 4

RR Glue x 1

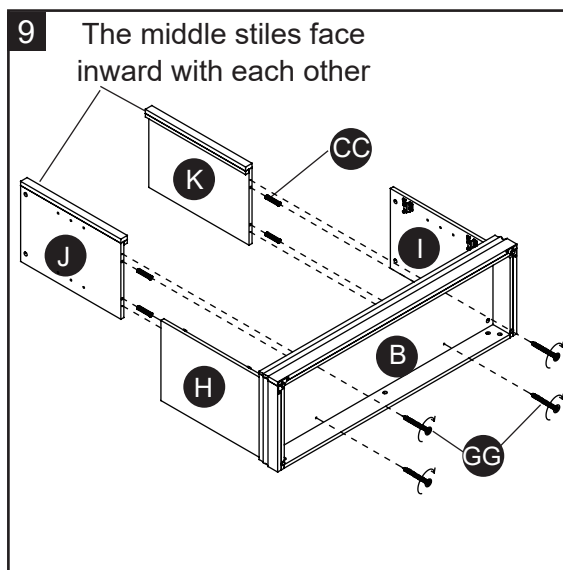

ASSEMBLY INSTRUCTIONS

10a. Glue eight wood dowels (CC) into the top holes of lower side panels (H and I) and lower partition panels (J and K).


10b. Ask for assistance to position the center shelf (C) onto the inserted wood dowels (CC) and attach it in place by engaging eight cam locks (AA).

Hardware Used

AA Cam Lock x 8

CC Wood Dowel x 8


RR Glue x 1

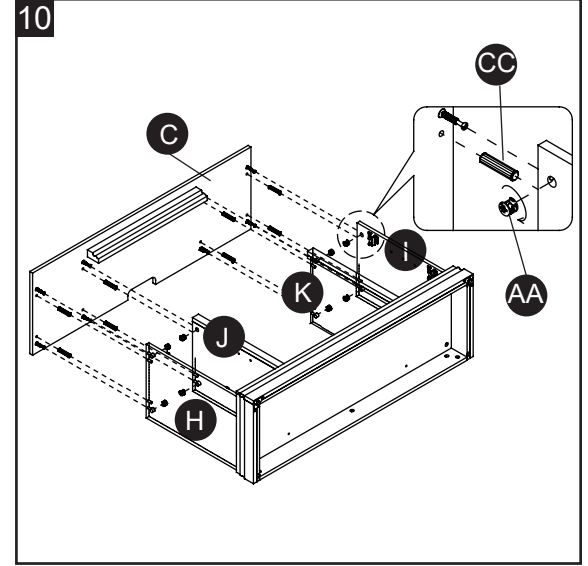

11. Securely screw six cam bolts (BB) into the designated small holes on the center shelf (C). Fully tighten with a Phillips screwdriver.

Hardware Used

BB Cam Bolt x 6

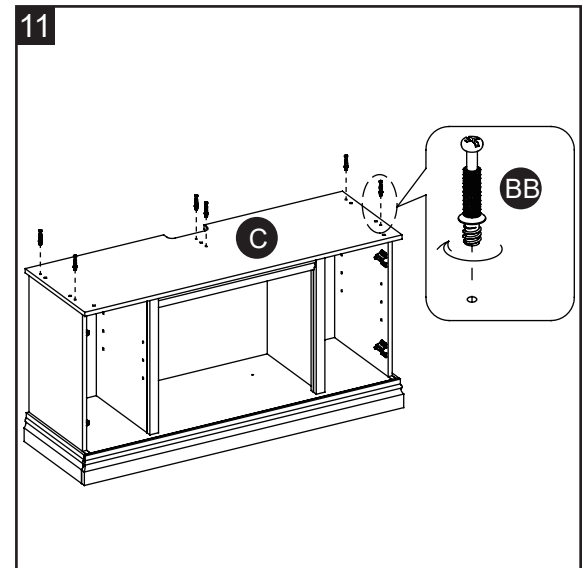


12. Glue two wood dowels (CC) into the inner holes of each upper side panel (D) and attach it to the upper side panel molding (E) by engaging two cam locks (AA).

Hardware Used

AA Cam Lock x 4

CC Wood Dowel x 4




RR Glue x 1

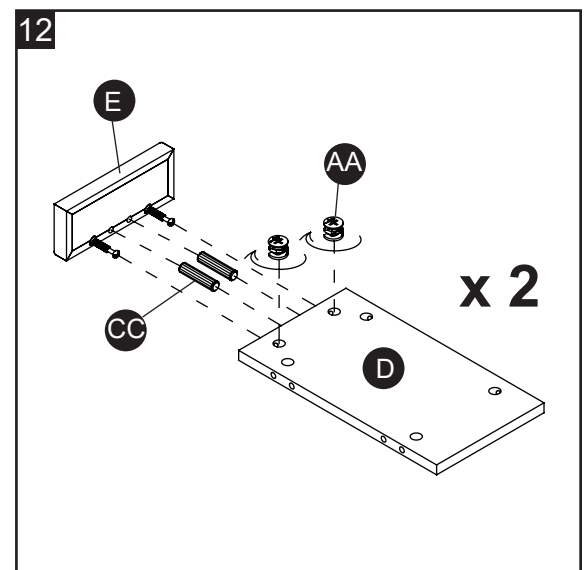


ASSEMBLY INSTRUCTIONS

13. Glue two wood dowels (CC) into the inner holes of upper partition panel (F) and attach it to the upper partition panel molding (G) by engaging two cam locks (AA).




Hardware Used

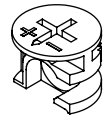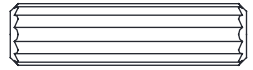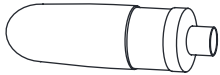
AA	Cam Lock		x 2
CC	Wood Dowel		x 2
RR	Glue		x 1

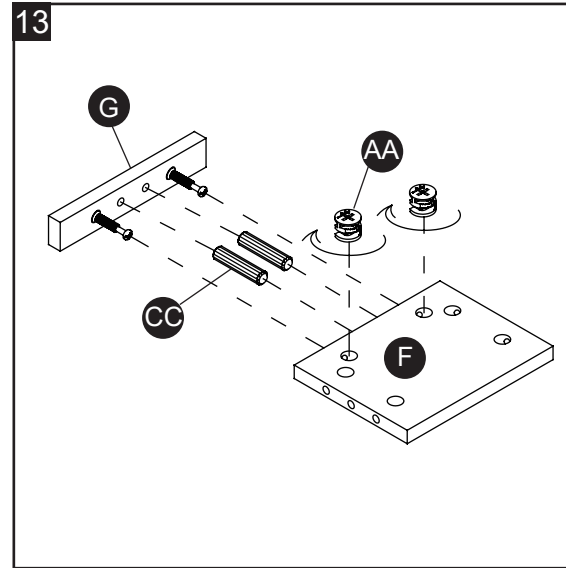

14. Glue seven wood dowels (CC) into the bottom inner holes of upper side panels (D), upper side panel moldings (E) and upper partition panel (F) and attach them to the center shelf (C) by engaging six cam locks (AA).

Hardware Used

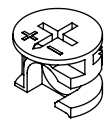
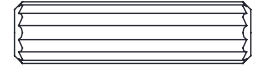

AA	Cam Lock		x 6
CC	Wood Dowel		x 7
RR	Glue		x 1

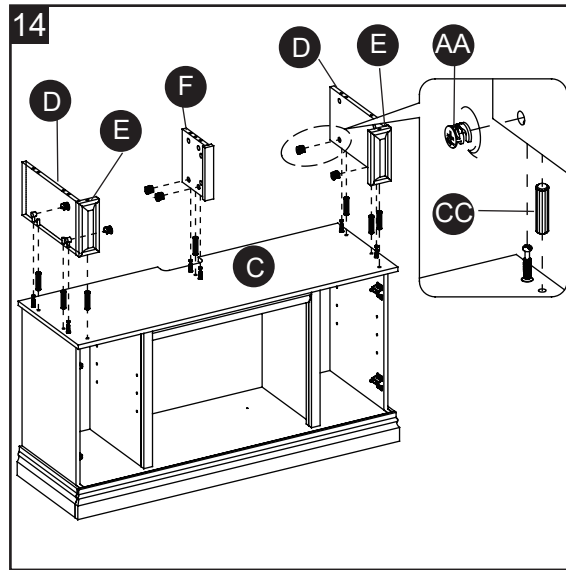


- 15a. Glue seven wood dowels (CC) into the top inner holes of both upper side panels (D), upper side panel moldings (E) and the upper partition panel (F).

- 15b. Ask for assistance to position the top panel (A) onto the inserted wood dowels (CC) and attach it into place by engaging six cam locks (AA).

Hardware Used

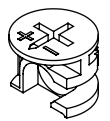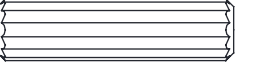AA	Cam Lock		x 6
CC	Wood Dowel		x 7
RR	Glue		x 1

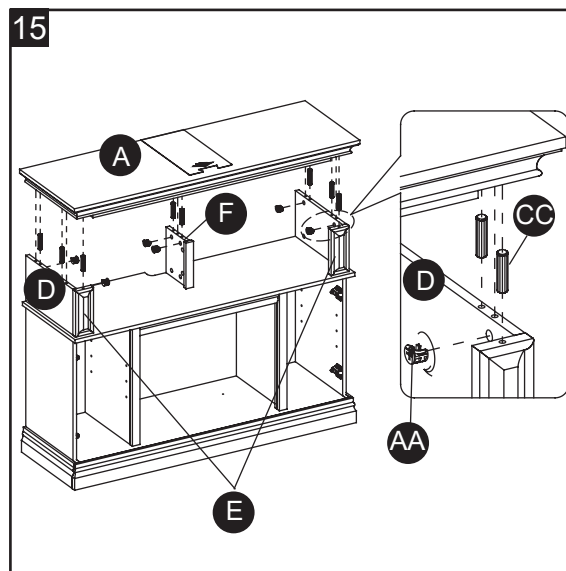


ASSEMBLY INSTRUCTIONS

16. Ask for assistance to lay down the assembled unit at its front edges. Attach two metal brackets (HH) at the joints where the middle crossbar (M) meets with the lower partition panels (J and K) with four short screws (EE).

Hardware Used

EE	M3.5 x 15 mm Screw		x 4
HH	Metal Bracket		x 2

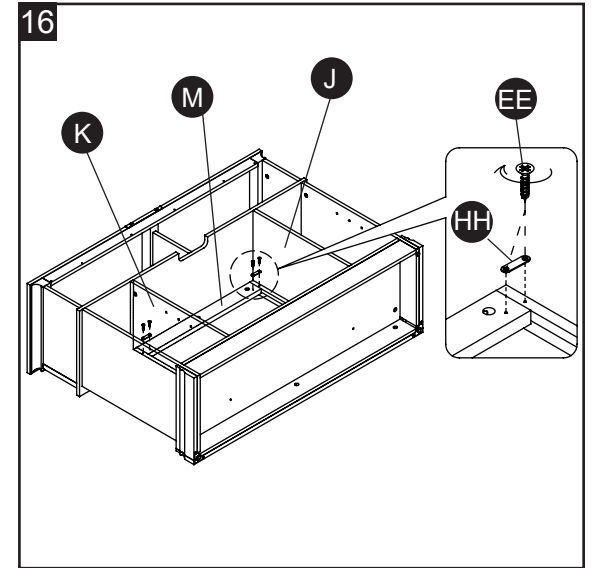


- 17a. Pick up the upper back panel (R) and align the drilled holes with the pilot holes on the back stretcher of the top panel (A). Attach the upper back panel (R) in place with the provided washer head screws (DD).

- 17b. Align and attach two lower back panels (S) to the lower side panels (H and I) and partition panels (J and K) with the provided washer head screws (DD), using the pilot holes as a guide.

Hardware Used

DD	M3.5 x 15 mm Washer Head Screw		x 32
-----------	--------------------------------	---	------

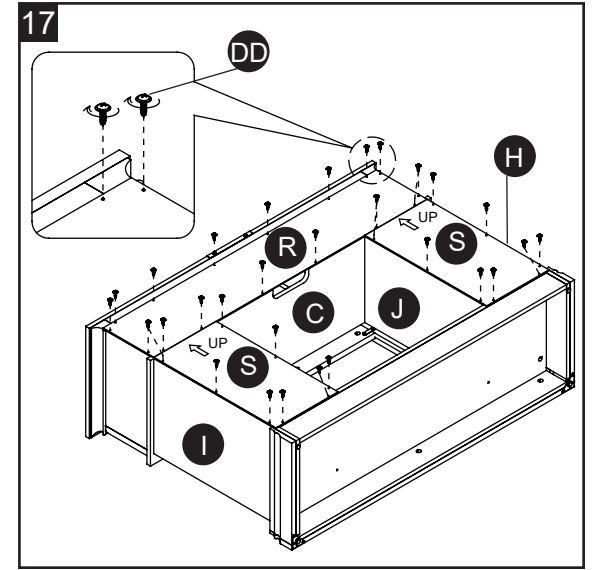
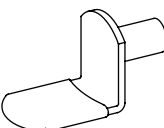



- 18a. Carefully stand the unit upright.

- 18b. Insert four shelf pins (JJ) into the desired holes inside each side compartment. Make sure you place the four shelf pins in the same level so that the shelf is not tilted. Tilt and rest the adjustable shelves (Q) onto the shelf pins (JJ).

- 18c. Plug the cam lock covers (II) onto the visible cam locks (AA) to conceal the cams.

Hardware Used


II	Cam Lock Cover		x 26
JJ	Shelf Pin		x 8

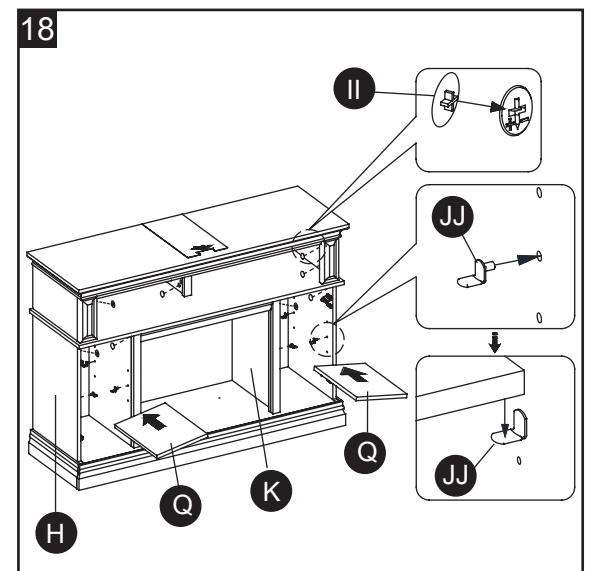

ASSEMBLY INSTRUCTIONS

19. Attach one handle (KK) to the front side of each door (P) with the provided handle bolts (LL).

Hardware Used

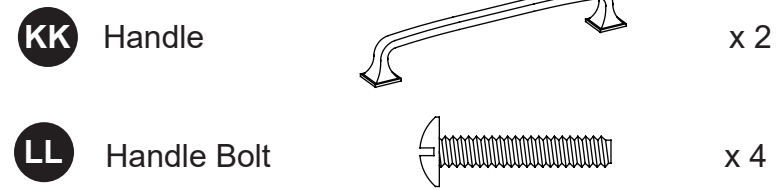


20a. Pick up one door (P) and attach the extended hinge arms to the hinge bases installed on the lower left side panel (H). Loosen the bolt on the back of the hinge base for an easy fit. Align and insert the "U" slot on the hinge arm under the bolt head on the back of the hinge base. Make sure that both door hinges engage and function properly. Tighten the bolt on the hinge base to lock the hinge in place.

20b. Repeat the same procedure to attach the other door (P) at the opposite side.




20c. Open and close the doors to make sure they are aligned and shut correctly. If necessary, adjust the screws for a good fit. Refer to the hinge sticker on the door for adjustment.

20d. Stick the rubber bumpers (QQ) at the outer corners of both doors (P) where they meet with the partition panels (J and K).

 Hardware Used




21. Lift the fireplace insert carefully into the back of the assembled mantel and center it in the opening. DO NOT drag the insert across the bottom panel (B) as it may scratch the unit.

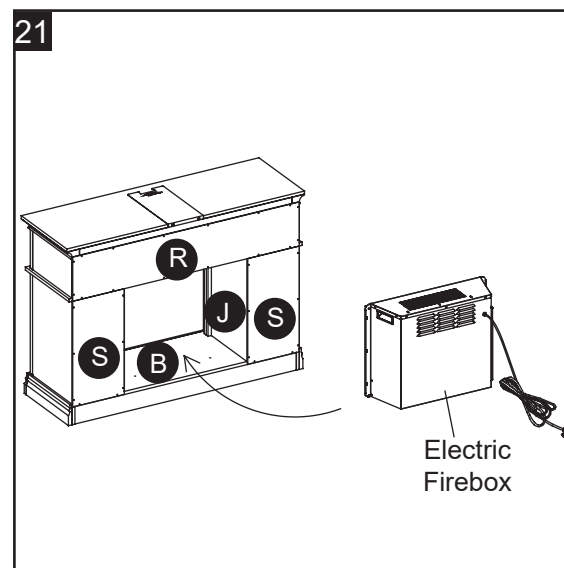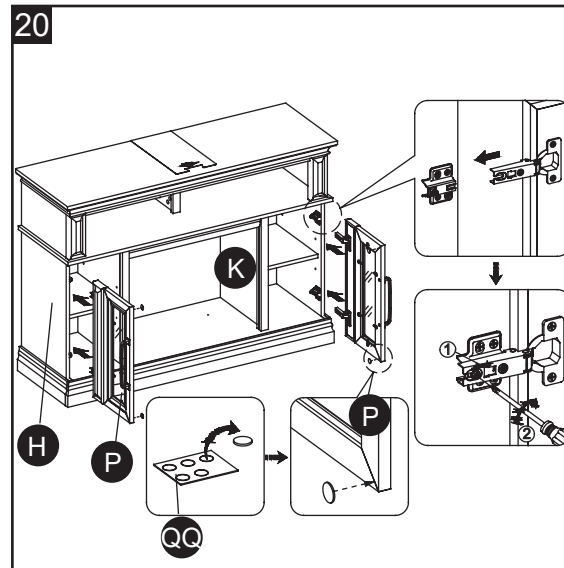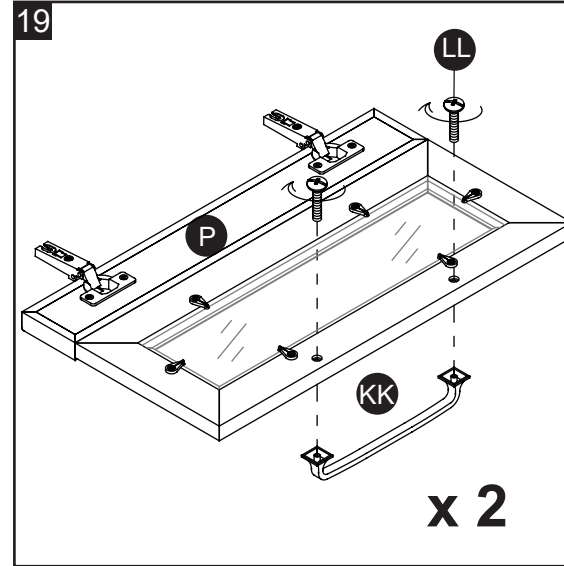

ASSEMBLY INSTRUCTIONS

22. Using the pilot holes as a guide, align and attach L-shaped metal braces (MM) to the bottom panel (B) by screwing one washer head screw (DD) in each.

Hardware Used


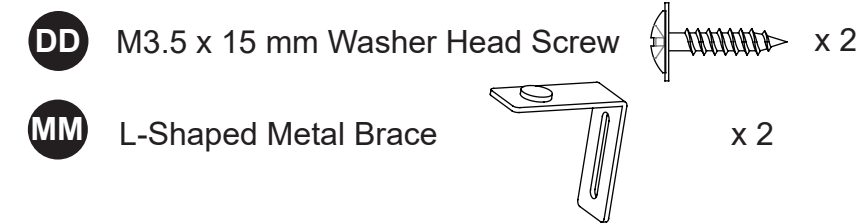


23a. Remove the paper backing from the acrylic stopper (PP), then properly align the acrylic stopper into the cut-out on the acrylic stopper template on the front of the top panel (A). Press down on the acrylic stopper to help adhesion.

23b. At the back of top panel (A), grip the heads of plastic tacks with pliers, with twisting motion pull tacks loose to remove the acrylic stopper template.

NOTE: You must install the acrylic TV stopper to prevent TV from tipping when placing your flat panel television on the top panel.

Hardware Used

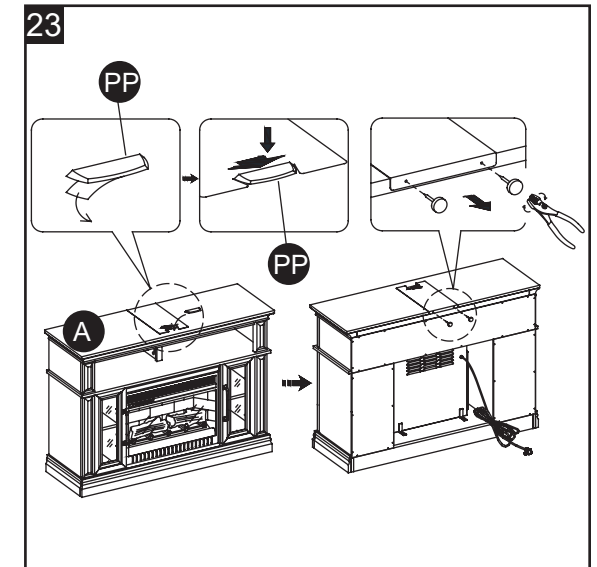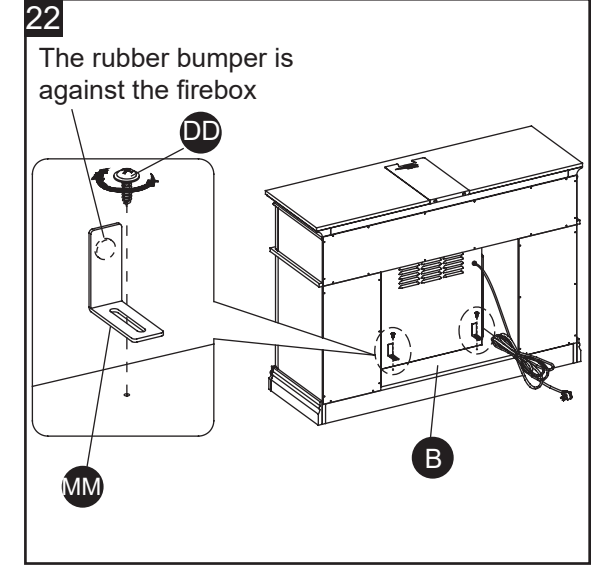

ASSEMBLY INSTRUCTIONS

Installing the tipping restraint hardware


NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction, different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

- 24a. With assistance, position the assembled fireplace console at the desired location against a wall. In case of uneven floor, floor levelers are provided at the bottom of the mantel. If necessary, adjust the floor levelers by hand to correct tilting and/or level the doors, until the unit is level.
- 24b. Follow the instructions printed on the plastic bag containing the tipping hardware to attach the tip-over restraint hardware to the unit and the wall.
- 24c. Connect the fireplace to the power transformer. Follow the operating manual for the electric fireplace insert to control your fireplace.


Hardware Used



Tipping Restraint
Hardware Kit

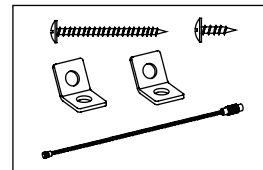

x 2

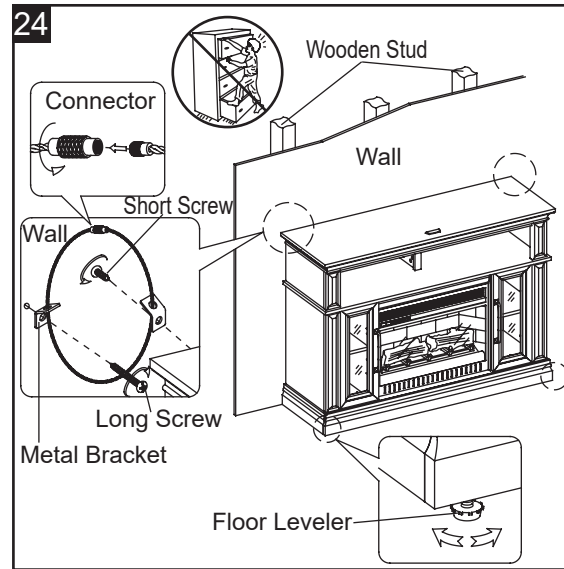

CARE AND MAINTENANCE

A touch-up pen has been provided to minimize the small nicks or scratches that may occur during assembly or shipping.

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes is not necessary. Should you choose to use polishes, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

CARING FOR WOOD FURNITURE

- It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.
- Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

CLEANING THE FIREPLACE TRIM

Clean the metal trim using a soft cloth, slightly dampened with citrus oil based product and buff with a clean soft cloth. DO NOT use brass polish or household cleaners as these products will damage the metal trim. Citrus oil based products can be obtained at supermarkets or hardware stores.

ONE-YEAR LIMITED WARRANTY


This product is warranted to the original purchaser. If there is a failure in this unit due to defects in materials or workmanship, the manufacturer will repair or replace this item at our discretion without charge. Warranty is void if product has been assembled incorrectly, misused, abused by overloading, altered in any way or damaged due to accident. This warranty is not transferable and does not cover chipping, flaking, scratches, rust, dents, or other damages to the surfaces of this product. Responsibility of the manufacturer is limited to repair or replacement of this product. The manufacturer is not responsible for consequential, incidental, or other damages or losses resulting from product failure.

This warranty is in lieu of all other expressed warranties. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.


PIEZAS DE REPUESTO

Si necesita piezas de repuesto, llame a nuestro departamento de servicio al cliente: 1-866-942-5362, 8:30 a.m. - 4:30 p.m., PST, lunes - viernes.

PARTE	DESCRIPCIÓN	PIEZA#
A	Panel superior	*WSLWFP48-5-01-TP
B	Panel inferior	*WSLWFP48-5-02-BP
C	Estante central	*WSLWFP48-5-03-CS
D	Panel de lado superior	*WSLWFP48-5-04-USP
E	Moldura del panel de saldo superior	*WSLWFP48-5-05-USPM
F	Panel divisorio superior	*WSLWFP48-5-06-UPP
G	Moldura de panel superior divisorio	*WSLWFP48-5-07-UPPM
H	Panel inferior de lado izquierdo	*WSLWFP48-5-08-LLSP
I	Panel inferior de lado derecho	*WSLWFP48-5-09-LRSP
J	Panel inferior divisorio izquierdo	*WSLWFP48-5-10-LLPP
K	Panel inferior divisorio derecho	*WSLWFP48-5-11-LRPP
L	Bastidor superior	*WSLWFP48-5-12-TS
M	Travesaño central	*WSLWFP48-5-13-MC
N	Moldura frente inferior	*WSLWFP48-5-14-BFM
O	Bastidor inferior trasero	*WSLWFP48-5-15-BBS
P	Puerta	*WSLWFP48-5-16-D
Q	Estante ajustable	*WSLWFP48-5-17-AS
R	Panel tresero superior	*WSLWFP48-5-18-UBP
S	Panel tresero interior	*WSLWFP48-5-19-LBP
T	Puerta de vidrio	*WSLWFP48-5-20-DG
	Bisagra de puerta con tornillos	*WSLWFP48-5-21-DHS
	Herraje completo	*WSLWFP48-5-CH
	Inserto de chimenea completo	FB23-2D-IR
	Control remoto 6-button	00RC006B-VSE

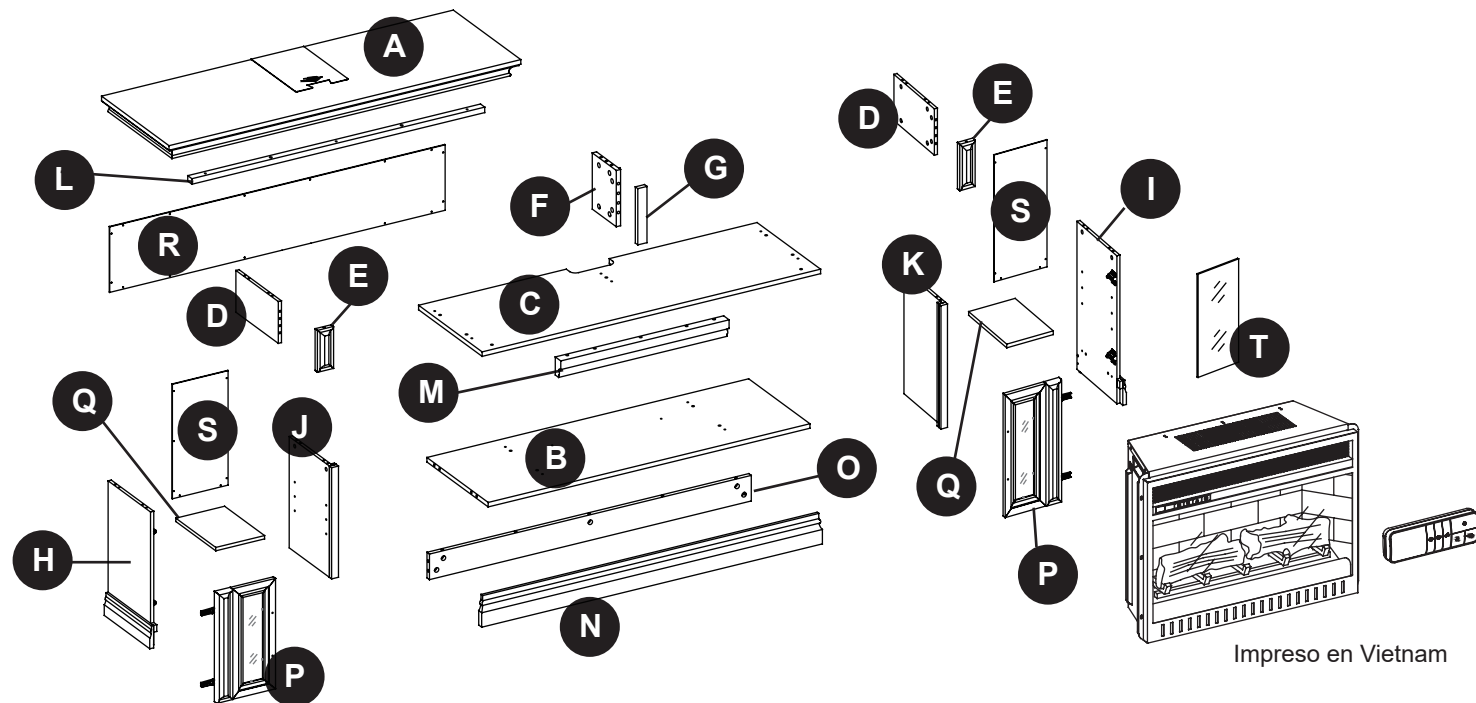

Impreso en Vietnam

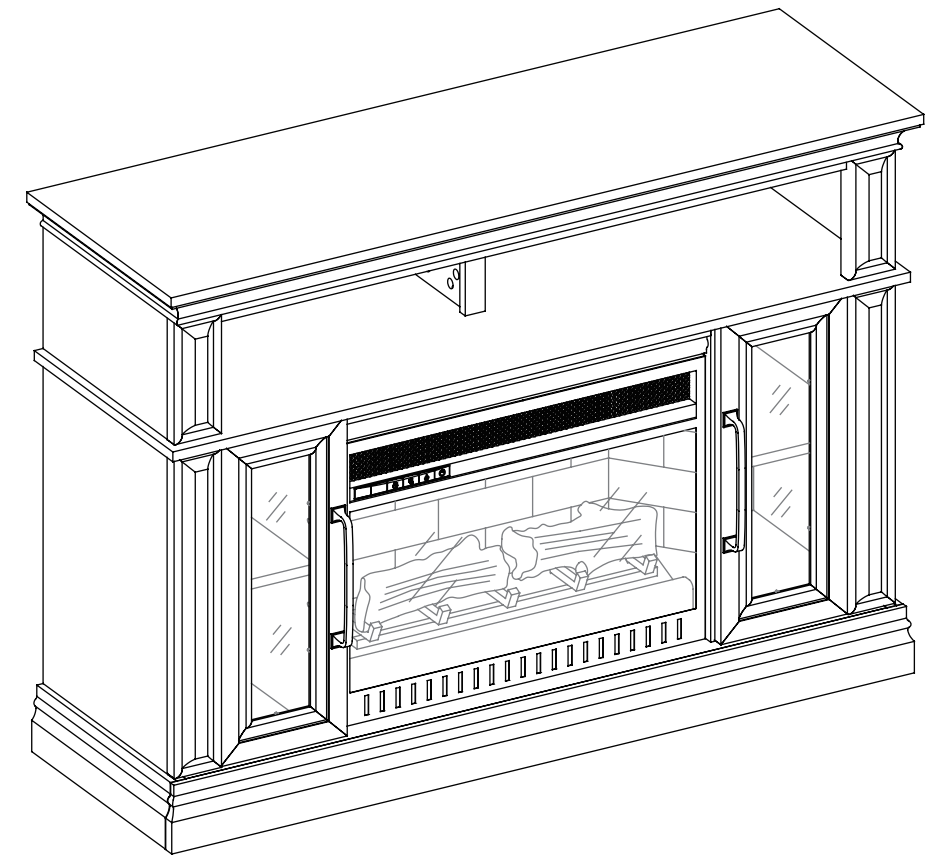

Directrices en video On-line

Visite www.guides.sellpoints.com para una explicación paso a paso sobre cómo manejar la chimenea. Introduzca el siguiente número del producto en la página web.

WSLWFP48-5

Artículo # 1031289

Consola con chimenea eléctrica infrarroja de 48"

MODELO # WSLWFP48-5

ADJUNTE EL COMPROBANTE AQUÍ

Número de serie _____ Fecha de compra _____




Comuníquese con nosotros en caso de remplazo de piezas o asistencia: 1-866-942-5362
Huso horario del Pacífico: 8:30 a.m. - 4:30 p.m., PST, lunes a viernes
o visite la página web: www.whalenfurniture.com

ÍNDICE

Montaje De Las Clavijas De Madera.....	18
Contenido Del Paquete.....	19
Contenido De Las Herramientas.....	20
Información De Seguridad.....	21
Preparación.....	21
Instrucciones De Montaje.....	22
Cuidado Y Mantenimiento.....	31
Garantía De Un Año.....	31
Piezas De Repuesto.....	32


MONTAJE DE LAS CLAVIJAS DE MADERA

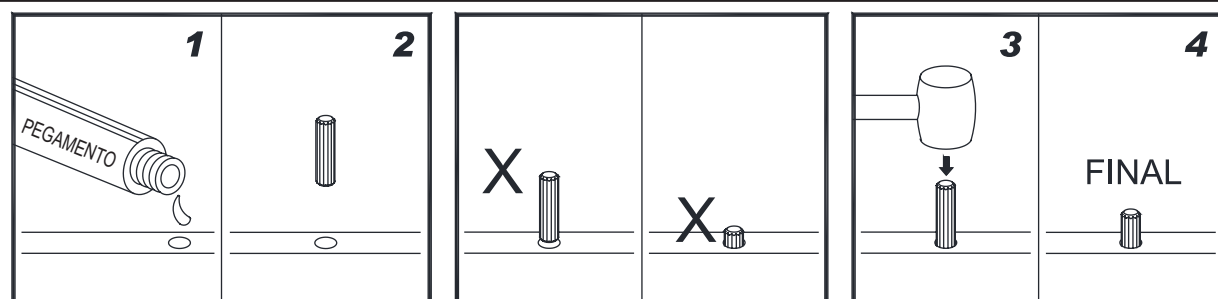

1. Aplique pegamento a cada clavija antes de introducir la clavija en el agujero. Se puede retirar el exceso de pegamento con un paño húmedo.
2. Introduzca la clavija al menos hasta la mitad dando golpecitos suaves con un mazo de goma en caso necesario.


NOTA: ES MUY IMPORTANTE EL USO DE PEGAMENTO CON LAS CLAVIJAS.

AJUSTE DEL SISTEMA DE UNIÓN EXCÉNTRICA

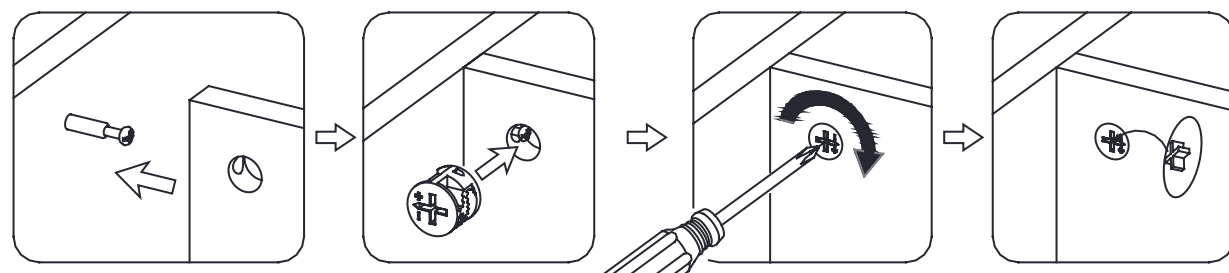






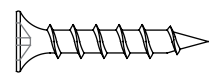
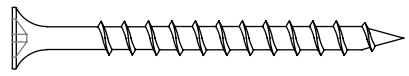
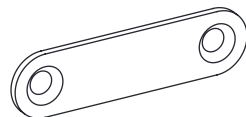
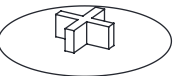
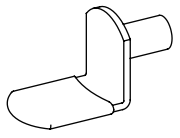






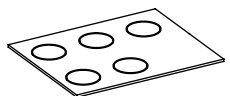


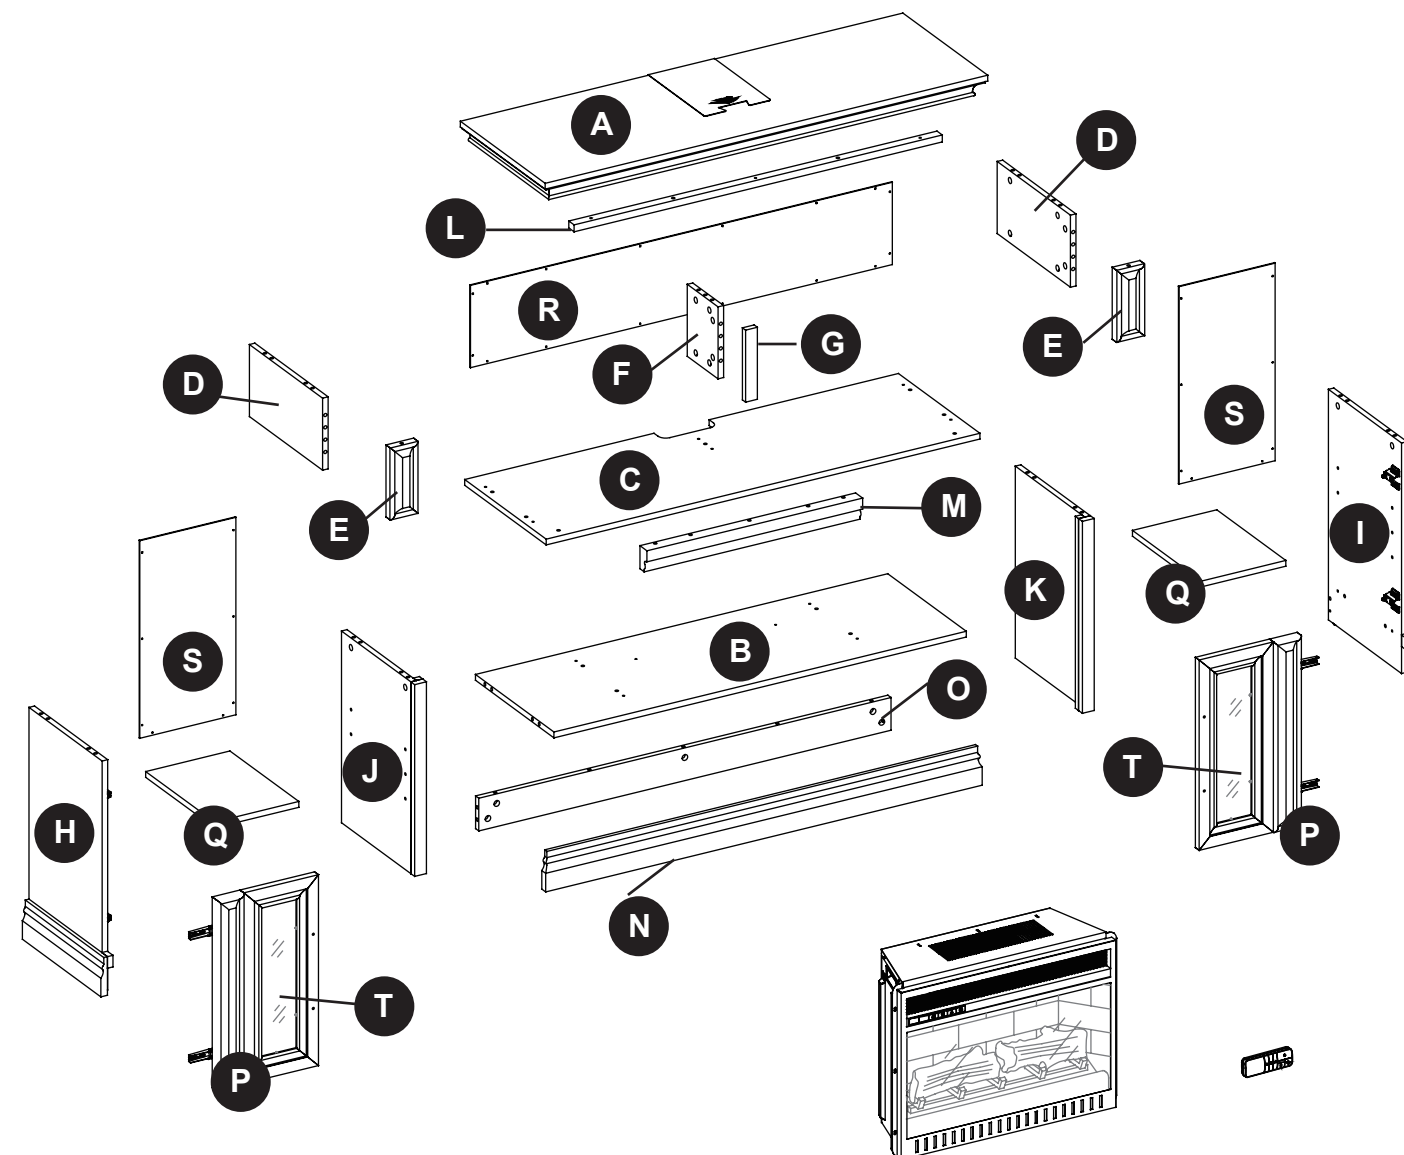
1. Atornille el perno en la inserción roscada del panel. Una ambos paneles; asegúrese que el perno se introduce en el agujero pre-perforado en el panel para la leva de fijación.
2. Introduzca la leva de fijación en el agujero grande pre-perforado del panel. Asegúrese que la flecha en la parte frontal de la leva se encuentre y señale al perno.
3. Utilice un destornillador Philips y haga girar la leva según las agujas del reloj para fijar en su sitio al perno.
4. Conecte la cobertura de la leva de fijación a la ranura transversal de la leva para sellar el sistema.

CONTENIDO DEL PAQUETE

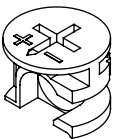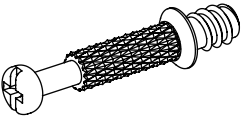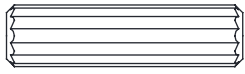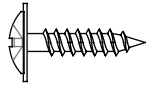

PARTE	DESCRIPCIÓN	CANTIDAD	PARTE	DESCRIPCIÓN	CANTIDAD
A	Panel superior	1	L	Bastidor superior	1
B	Panel inferior	1	M	Travesaño central	1
C	Estante central	1	N	Moldura frente inferior	1
D	Panel de lado superior	2	O	Bastidor inferior trasero	1
E	Moldura del panel de saldo superior	2	P	Puerta	2
F	Panel divisorio superior	1	Q	Estante ajustable	2
G	Moldura de panel superior divisorio	1	R	Panel tresero superior	1
H	Panel inferior de lado izquierdo	1	S	Panel tresero interior	2
I	Panel inferior de lado derecho	1	T	Puerta de vidrio (previamente pegada)	2
J	Panel inferior divisorio izquierdo	1		Chimenea	1
K	Panel inferior divisorio derecho	1		Control remoto con batería	1

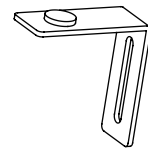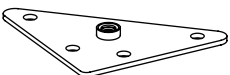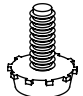CONTENIDO DE LAS HERRAMIENTAS (tamaño real)

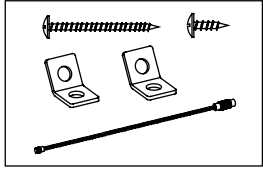AA 	BB 	CC 	DD 	EE 
Leva de fijación	Perno de fijación	M8 x 30 mm Clavija de madera	M3.5 x 15 mm Tornillo de cabeza de arandela	Tornillo de M3.5 x 15 mm
Cant. 41+2 extra	Cant. 41+2 extra	Cant. 46+2 extra	Cant. 34+1 extra	Cant. 12+1 extra
FF 	GG 	HH 	II 	JJ 
Tornillo de M4 x 25 mm	Tornillo de M4 x 50 mm	Soporte de metal	Cobertura de la leva de fijación	Clavo de estante
Cant. 3+1 extra	Cant. 4+1 extra	Cant. 2	Cant. 26+1 extra	Cant. 8+1 extra
KK 	LL 	MM 	NN 	OO 
Asa	Perno de asa 22 mm	Soporte de metal en L	Unión angular	Nivelador de piso
Cant. 2	Cant. 4	Cant. 2	Cant. 2	Cant. 2
PP 	QQ 	RR 	SS 	TT 
Tope acrílico	Tope de goma	Pegamento	Plumón de retoque	Juego de restricción de movimiento
Cant. 1	Cant. 4+1	Cant. 1	Cant. 1	Cant. 2


! INFORMACIÓN DE SEGURIDAD

Lea atentamente este manual antes de la manipulación del producto.

- Mantenga a los niños alejados del producto.
- Utilice esta unidad solo para su fin original. No use los estantes como escaleras.
- Para evitar daños, monte el producto en una superficie resistente, nivelada y con protección.
- Se necesita dos personas para montar la unidad.
- Asegúrese de que todos los pernos y tornillos se encuentras correctamente ajustados antes del uso de la unidad.
- Revise de forma periódica los pernos y tornillos y reajústelos en caso necesario.
- No empuje el mueble, sobre todo en un suelo enmoquetado. Pida ayuda para llevar el producto al destino deseado. Antes de su transporte, retire los estantes.

PARA LA MAYORÍA DE TELEVISIONES PANTALLA PLANA
DE 147.3 cm / 58 pulgadas
MÁXIMA CARGA 31.8 kg / 70 lb

POSICIONE LA TELEVISIÓN
ATRAS DEL TOPE

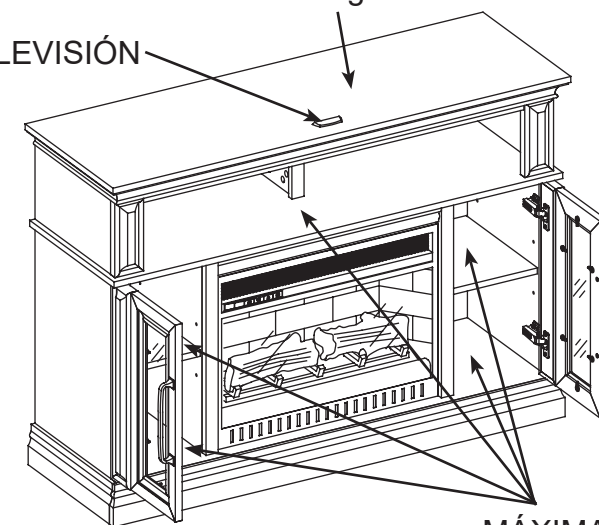

MÁXIMA CARGA 22.7 kg / 50 lb

! ATENCIÓN

El uso de esta unidad está pensado para televisores CRT. Utilice este producto solo con televisores planos y con equipos de audio/video que se correspondan con las indicaciones recomendadas de tamaño y peso. Nunca use equipos de TV u otro que sean más pesados o más grandes que lo recomendado para el panel plano. Para evitar inestabilidad, ponga la TV en el centro de la unidad; El televisor no debe sobresalir por los lados de la unidad. Los equipos que no estén posicionados adecuadamente o que superen las recomendaciones máximas podrían caerse o romper la unidad, causando posibles heridas graves.

PREPARACIÓN

Antes del montaje, asegúrese de que tiene todas las piezas. Compare las piezas con las listadas anteriormente. Si no encuentra alguna pieza, o alguna tiene algún defecto, no intente montar la unidad.




Tiempo estimado de montaje: 60 minutos


Herramientas necesarias para el montaje (no incluidas): Desarmador estrella, localizador de travesaños, taladro, broca de 1/8 pulgada. y lápiz para marcar.

INSTRUCCIONES DE MONTAJE

- 1a. Abra la unidad y examine si cuenta con todas las piezas necesarias. Monte la unidad en un suelo alfombrado o sobre un cartón vacío para evitar así cualquier desperfecto.
- 1b. Pegue dos clavijas (CC) al interior de los agujeros del bastidor superior (L) y ajústelo al panel superior (A) con tres tornillos (FF).


Herraje Utilizado

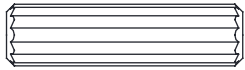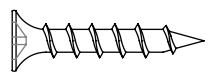
CC	Clavija de madera		x 2
FF	Tornillo de M4 x 25 mm		x 3
RR	Pegamento		x 1

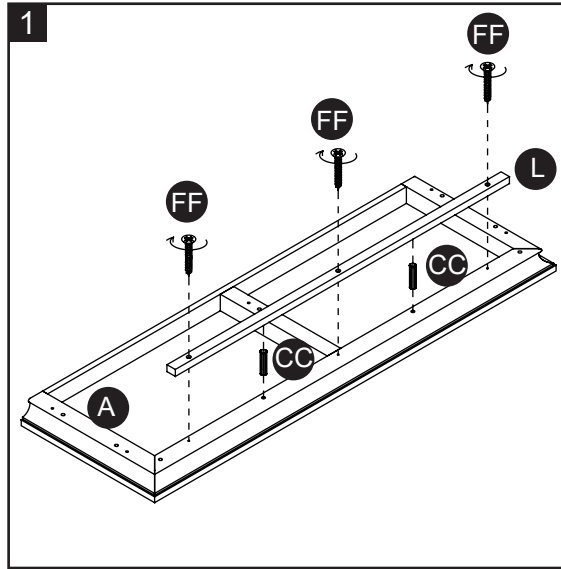

2. Atornille los 24 pernos (BB) en los pequeños agujeros designados en el panel superior (A), panel inferior (B), paneles inferiores de lado (H e I), molduras superiores de los lados (E) y la moldura para el panel superior divisorio (G). Ajústelos correctamente con el destornillador Phillips.

Herraje Utilizado

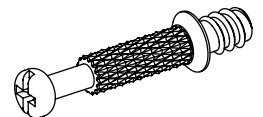
BB	Perno de fijación		x 24
-----------	-------------------	--	------

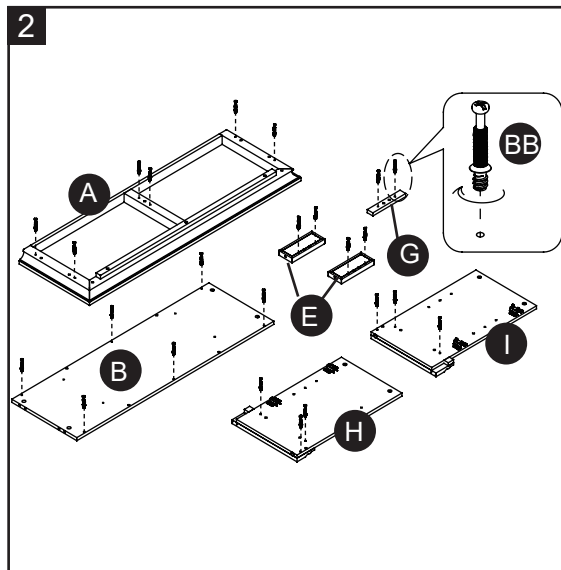

3. Atornille los 11 pernos (BB) en los agujeros pequeños designados en el estante central (C). Ajuste correctamente con el desarmador estrella.

Herraje Utilizado




BB	Perno de fijación		x 11
-----------	-------------------	---	------

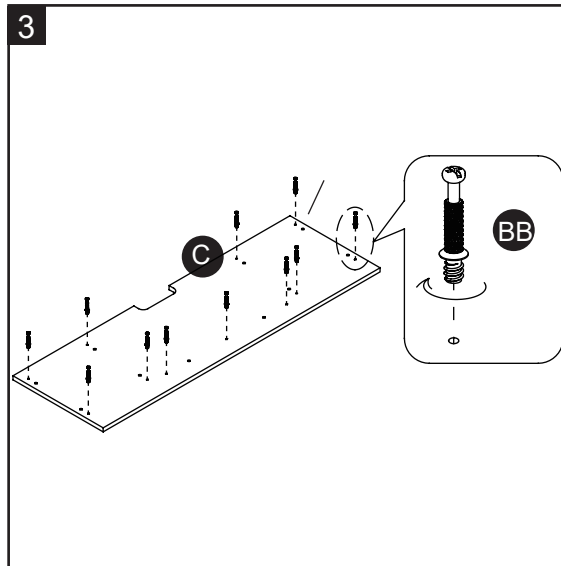


INSTRUCCIONES DE MONTAJE

4. Pegue dos clavijas de madera (CC) al interior de los agujeros en el medio del travesaño (M). Alinee y ajuste el travesaño (M) al estante central (C) empleando tres levas de fijación (AA).




Herraje Utilizado

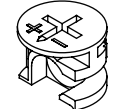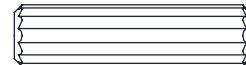
AA	Leva de fijación		x 3
CC	Clavija de madera		x 2
RR	Pegamento		x 1

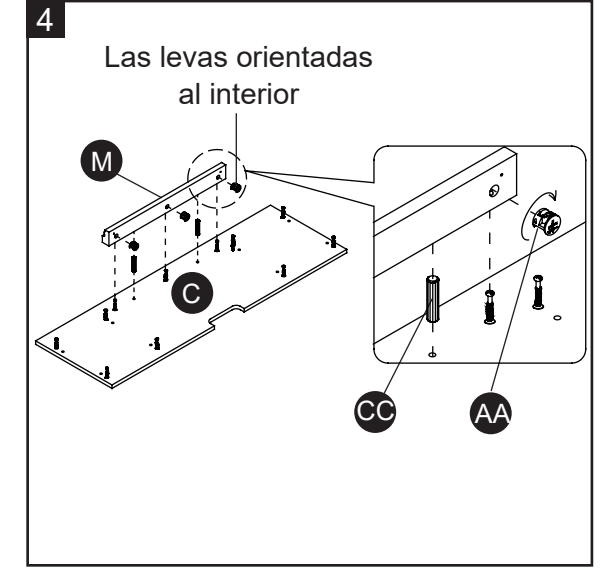

5. Pegue cuatro clavijas de madera (CC) al interior de los agujeros de la moldura frontal (N) y bastidor inferior trasero (O) y conéctelos al panel inferior panel (B) empleando seis levas de fijación (AA).

Herraje Utilizado

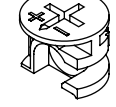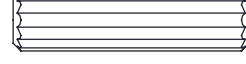AA	Leva de fijación		x 6
CC	Clavija de madera		x 4
RR	Pegamento		x 1


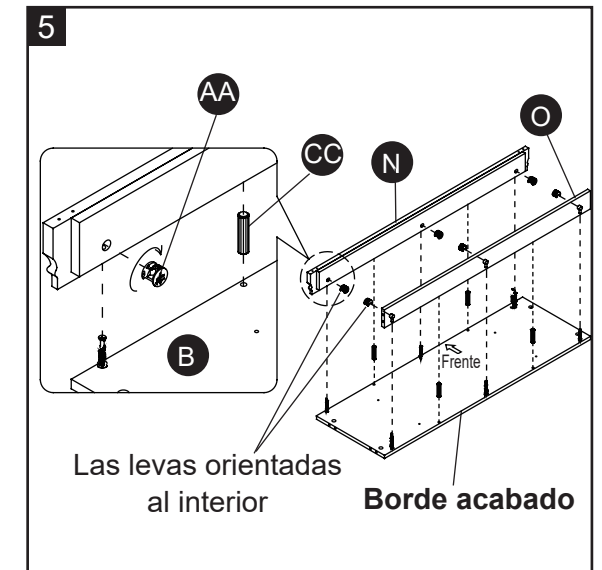



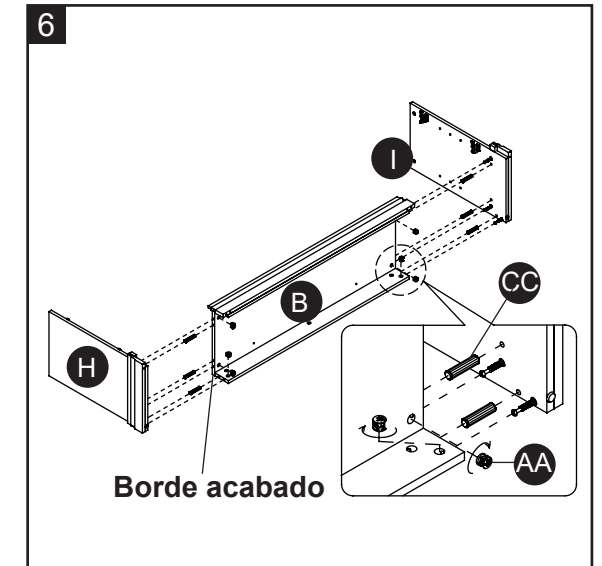
- 6a. Pegue seis clavijas de madera (CC) al interior de los agujeros del montaje previo en ambos bordes.

- 6b. Alinee los agujeros grandes en ambos paneles inferiores de lado (H e I) con las clavijas de madera ya insertadas y presiónelas hasta encajar. Conecte ambos paneles de lado (H e I) usando seis levas de fijación (AA).

Nota: para garantizar un ensamble correcto en pasos futuros, el borde acabado del panel inferior (B) debe apuntar hacia abajo.

Herraje Utilizado

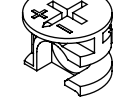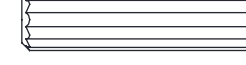
AA	Leva de fijación		x 6
CC	Clavija de madera		x 6
RR	Pegamento		x 1




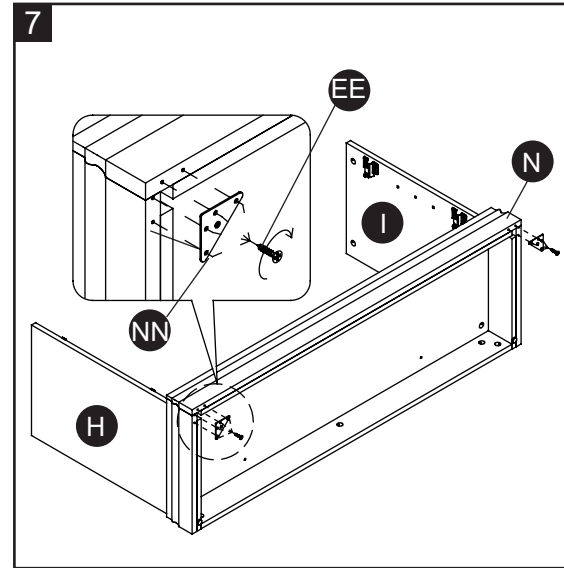
INSTRUCCIONES DE MONTAJE

7. Con los agujeros piloto como guía, ajuste dos uniones angulares (NN) en la junta donde la moldura inferior frontal (N) se encuentra con los paneles inferiores de lado (H e I), usando cuatro tornillos cortos (EE) por unión.

Herraje Utilizado

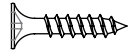EE Tornillo de M3.5 x 15 mm  x 8


NN Unión angular  x 2



8. Atornille dos niveladores de piso (OO) a las uniones angulares ya instaladas (NN).

Herraje Utilizado


OO Nivelador de piso  x 2

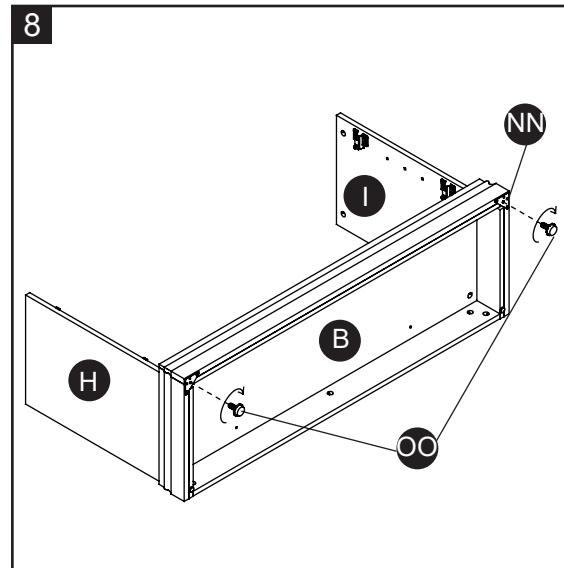


9. Pegue cuatro clavijas de madera (CC) al interior de los agujeros en ambos paneles divisorios (J y K) y conéctelos al panel inferior (B) con cuatro tornillos largos (GG).

Herraje Utilizado

CC Clavija de madera  x 4

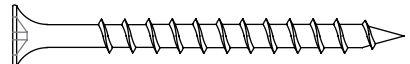GG Tornillo de M4 x 50 mm  x 4

RR Pegamento  x 1

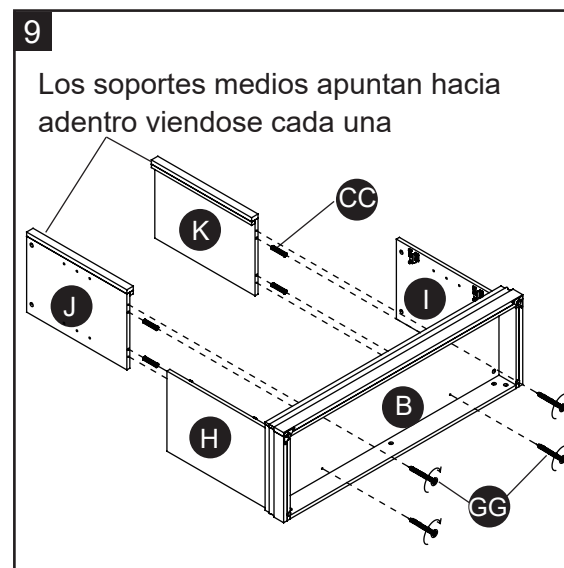

INSTRUCCIONES DE MONTAJE

10a. Pegue ocho clavijas de madera (CC) a los agujeros superiores de los paneles inferiores de lado (H e I) y a los paneles divisorios inferiores (J y K).


10b. Pida ayuda para posicionar el estante central (C) en las clavijas de madera ya insertadas (CC) y conéctelo en el lugar correcto usando ocho levas de fijación (AA).

Herraje Utilizado

AA Leva de fijación  x 8

CC Clavija de madera  x 8


RR Pegamento  x 1

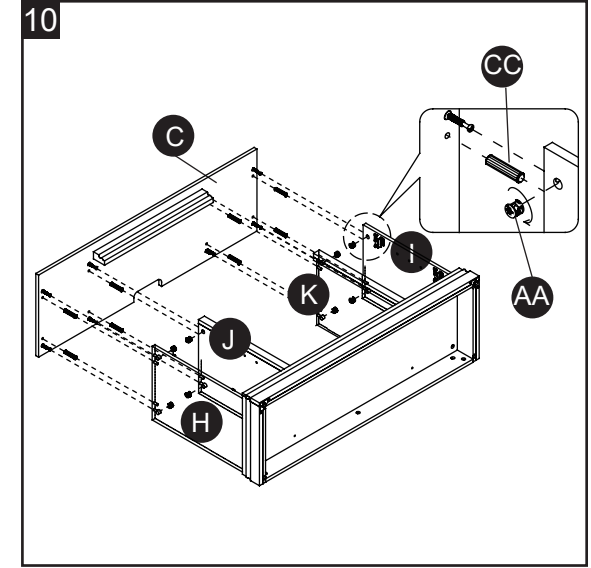

11. Atornille seis pernos de fijación (BB) en los pequeños agujeros designados en el estante central (C). Ajuste con el desarmador estrella.

Herraje Utilizado

BB Perno de fijación  x 6

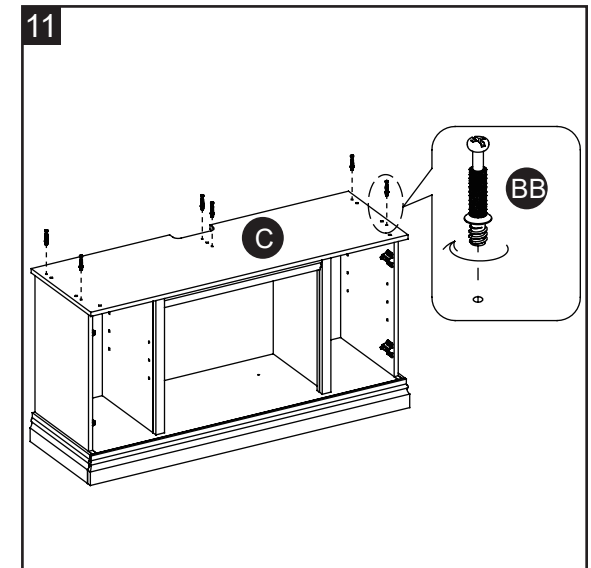


12. Pegue dos clavijas de madera (CC) al interior de los agujeros en cada panel superior de lado (D) y conéctelo a la moldura del panel superior de lado (E) empleando dos levas de fijación (AA).

Herraje Utilizado

AA Leva de fijación  x 4

CC Clavija de madera  x 4




RR Pegamento  x 1

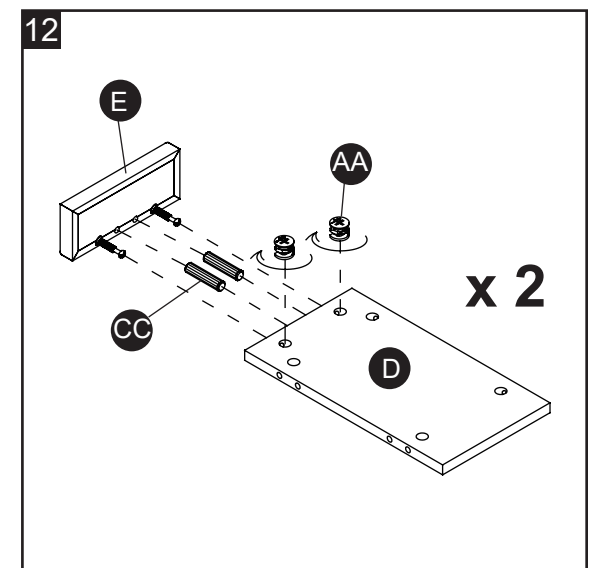


INSTRUCCIONES DE MONTAJE

13. Pegue dos clavijas de madera (CC) al interior de los agujeros del panel divisorio superior (F) y conéctelo a la moldura del panel divisorio superior (G) empleando dos levas de fijación (AA).




Herraje Utilizado

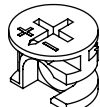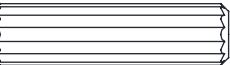
AA	Leva de fijación		x 2
CC	Clavija de madera		x 2
RR	Pegamento		x 1

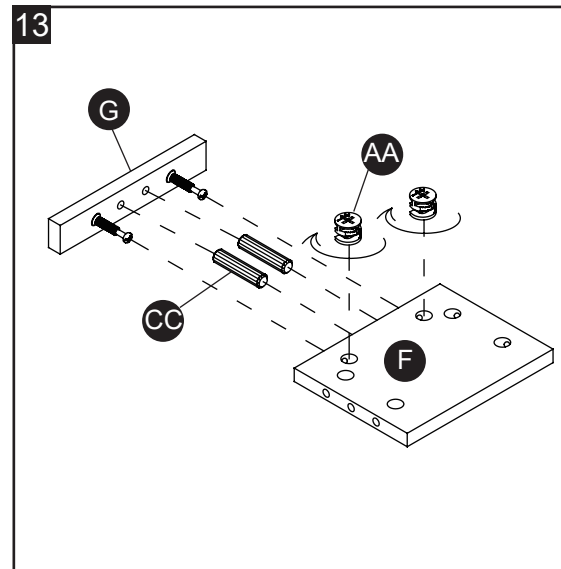

14. Pegue siete clavijas de madera (CC) al fondo del interior de los agujeros de los paneles superiores de lado (D), molduras del panel superior de lado (E) y el panel divisorio superior (F) y conéctelos al estante central (C) usando seis levas de fijación (AA).

Herraje Utilizado

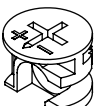
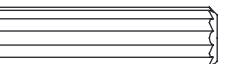

AA	Leva de fijación		x 6
CC	Clavija de madera		x 7
RR	Pegamento		x 1

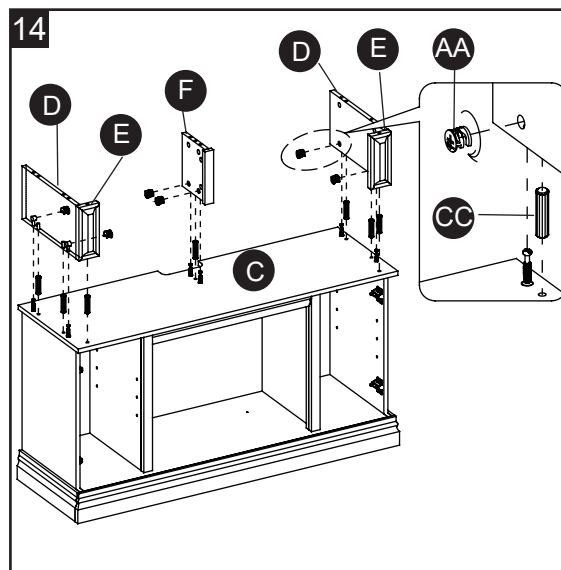


15a. Pegue siete clavijas de madera (CC) a la parte superior del interior de los agujeros de ambos paneles superiores de lado (D), molduras del panel superior de lado (E) y el panel divisorio superior (F).

15b. Pida ayuda para posicionar el panel superior (A) en las clavijas de madera ya insertadas (CC) y conéctelo usando seis levas de fijación (AA).

Herraje Utilizado

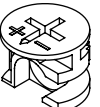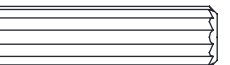

AA	Leva de fijación		x 6
CC	Clavija de madera		x 7
RR	Pegamento		x 1

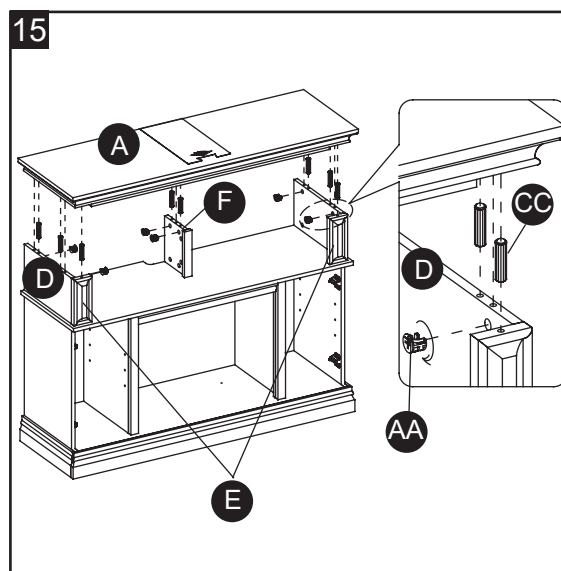


INSTRUCCIONES DE MONTAJE

16. Pida ayuda para tumbar la unidad montada por sus esquinas. Conecte dos soportes de metal (HH) a las juntas donde el travesaño central (M) se encuentra con los paneles divisorios inferiores (J y K) con cuatro tornillos cortos (EE).

Herraje Utilizado

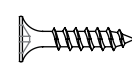EE	Tornillo de M3.5 x 15 mm		x 4
HH	Soporte de metal		x 2

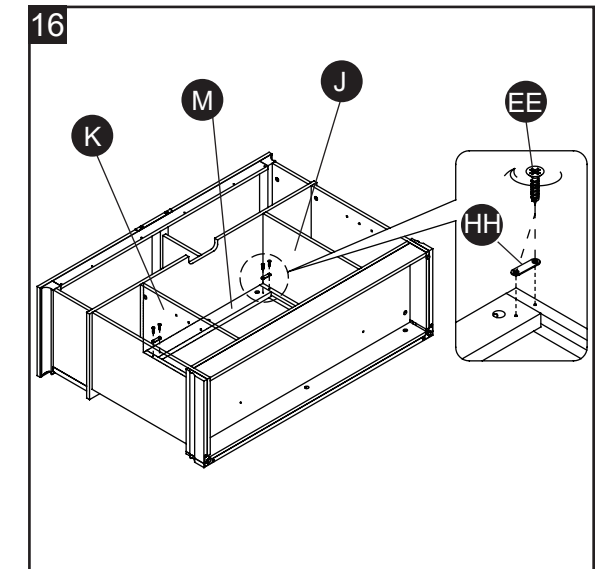


17a. Tome el panel trasero superior (R) y alinee los agujeros perforados con los agujeros piloto en la parte trasera del bastidor trasero del panel superior (A). Conecte el panel trasero superior (R) en el lugar adecuado con los tornillos de cabeza de arandela proporcionados (DD).

17b. Alinee y conecte dos paneles traseros inferiores (S) a los paneles inferiores de lado (H e I) y a los paneles divisorios inferiores (J y K) con los tornillos de cabeza de arandela proporcionados (DD), usando los agujeros como guía.

Herraje Utilizado

DD	Tornillo de cabeza de arandela M3.5 x 15 mm		x 32
-----------	---	---	------

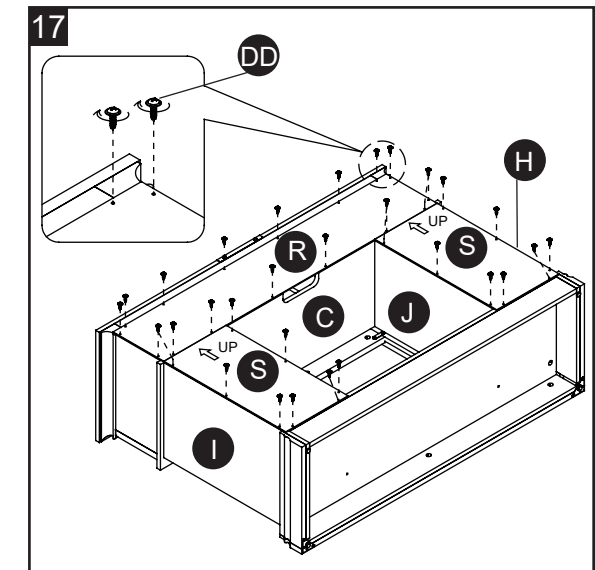
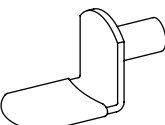



18a. Levante con cuidado la unidad.

18b. Inserte cuatro clavos de estante (JJ) en los agujeros deseados dentro de cada lado del compartimento. Asegúrese de que coloca los cuatro clavos de estante al mismo nivel para que el estante no se incline. Incline y apoye los estantes ajustables (Q) en los clavos de estante (JJ).

18c. Inserte las coberturas de la leva de fijación (II) en las levas de fijación visible (AA) para esconder las levas.

Herraje Utilizado


II	Cobertura de la leva de fijación		x 26
JJ	Clavo de estante		x 8

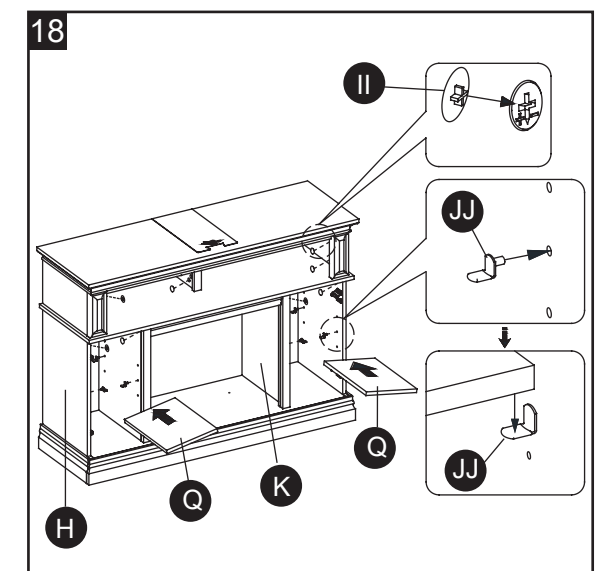

INSTRUCCIONES DE MONTAJE

19. Conecte un asa (KK) en la parte frontal de cada puerta (P) con los pernos de asa proporcionados (LL).

Herraje Utilizado

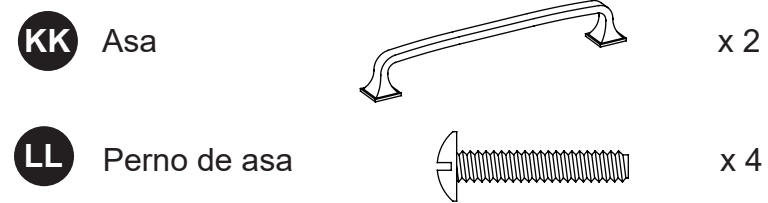

20a. Tome una puerta (P) y conecte el brazo de bisagra extensible a las bases de la bisagra instaladas en el panel inferior de lado izquierdo (H). Afloje el perno en la parte trasera de la base de la bisagra para una colocación sencilla. Alinee e inserte la ranura en U en el brazo de la bisagra bajo la cabeza del perno en la parte posterior de la base de la bisagra. Asegúrese de que ambas bisagras de las puertas se mueven y funcionan de manera correcta. Apriete el perno en la base de la bisagra para asegurar la bisagra en su sitio.

20b. Repita el mismo procedimiento para colocar la otra puerta (P) en el lado opuesto.




20c. Abra y cierre las puertas para asegurarse de que están alineadas correctamente. En caso necesario, ajuste los tornillos. Mire la pegatina de la bisagra en la puerta para un ajuste.

20d. Coloque los tope de goma (QQ) en las esquinas de ambas puertas (P) donde estas se encuentran con los paneles divisorios (J y K).

Herraje Utilizado




21. Coloque el hogar con cuidado en la parte posterior del producto ya montado y céntralo. NO arrastre el hogar por el panel inferior (B) ya que puede rayar la unidad.

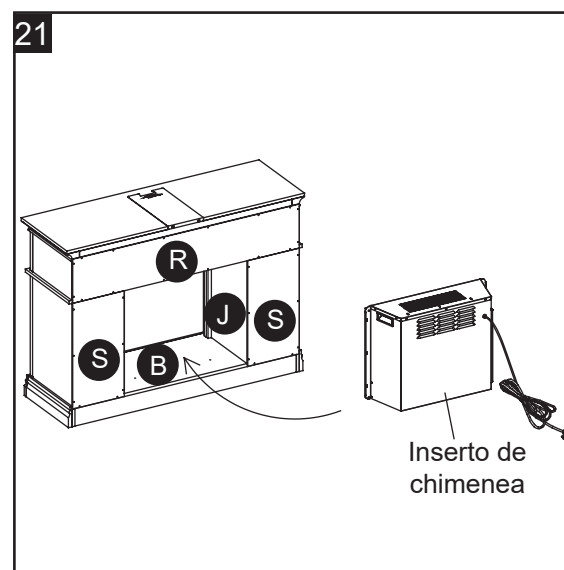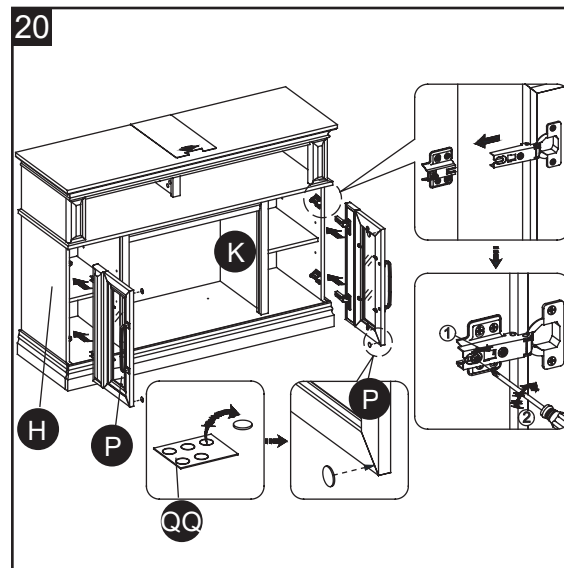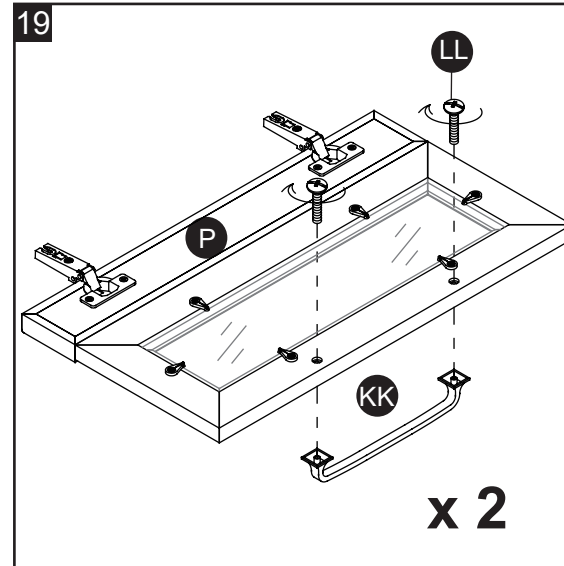

INSTRUCCIONES DE MONTAJE

22. Use los agujeros piloto como guía, alinee y conecte los soportes de metal en L (MM) al panel inferior (B) atornillando un tornillo de cabeza de arandela (DD) en cada uno.

Herraje Utilizado


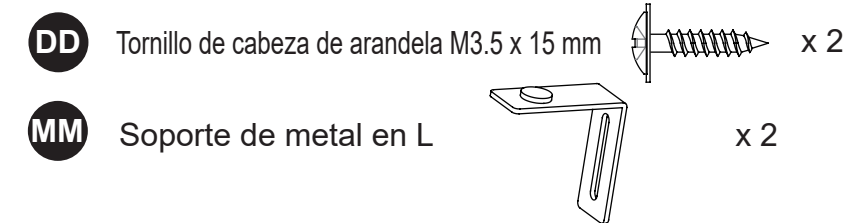


23a. Quite el papel trasero del tope acrílico (PP), alinee correctamente el tope acrílico en la muesca del molde para el tope situado en la parte frontal del panel superior (A). Presione el tope acrílico para ayudar el pegado.

23b. En la parte trasera del panel superior (A), agarre las cabezas de las chinchetas con unos alicates, con un movimiento de torsión para quitar el molde del tope.

NOTA: Tiene que instalar el tope acrílico para TV para prevenir que la TV se desequilibre cuando coloque su TV plana en el panel superior.

Herraje Utilizado

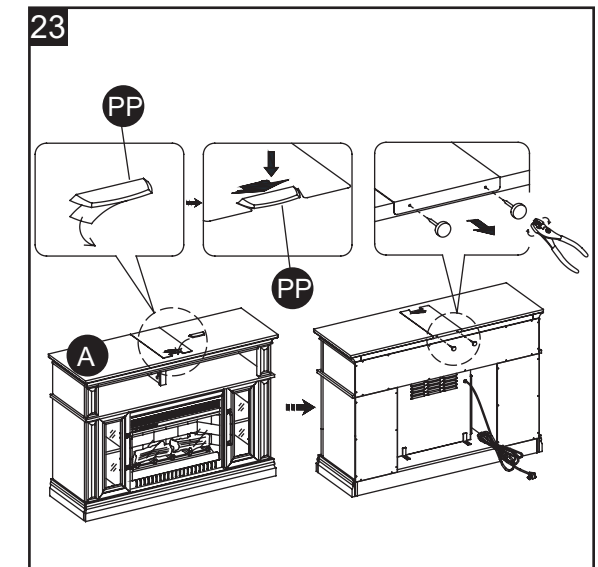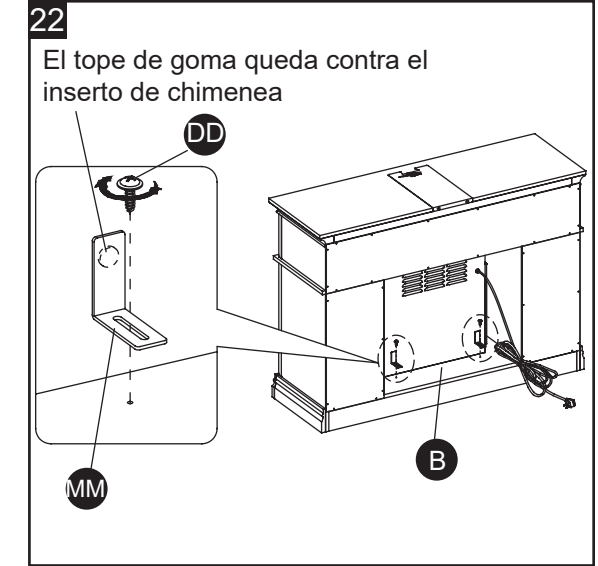

INSTRUCCIONES DE MONTAJE

Instalar las herramientas de controladores de inclinación


NOTA: La ferretería de restricción de movimiento se incluye para la construcción de pared con vigas de madera. Se debe sujetar a un barrote de pared. Dependiendo de la construcción de su pared, es posible que se requiera ferretería diferente. Póngase en contacto con su ferretería local para obtener ayuda. Niños pequeños pueden resultar lastimados por muebles inclinados. Debe instalar el juego de restricción de movimiento con la unidad en función, para prevenir la inclinación de la unidad, causando cualquier accidente o daño. El tope de movimiento es solo una protección, no hay sustituto para la supervisión adulta. El tope de movimiento no es contra terremoto. Si deseara añadir la seguridad adicional contra terremotos, deben ser comprados e instalados por separado.

- 24a. Con ayuda, coloque la chimenea en el lugar deseado pegado a la pared. En caso de un suelo desnivelado, coloque niveladores de suelo al final de la unidad. En caso necesario, ajuste los niveladores a mano para corregir balanceos y/o nivele las puertas hasta que todo sea uniforme.
- 24b. Siga las instrucciones impresas en la bolsa de plástico que contiene los juegos de restricción de movimiento para colocar las herramientas en la unidad y en la pared.
- 24c. Conecte la chimenea a la corriente eléctrica. Siga el manual de manejo para la chimenea eléctrica para controlar su chimenea.


Herraje Utilizado



Juego de restricción de movimiento

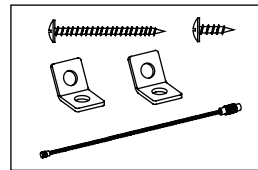

x 2

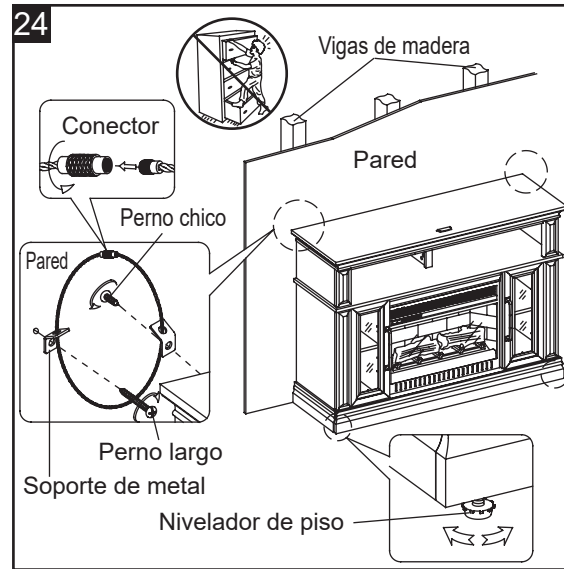

CUIDADO Y MANTENIMIENTO

Un plumón de retoque se ha proporcionado para minimizar las muescas pequeñas o rayaduras que puedan ocurrir durante el montaje o el envío.

- Use una toalla suave y limpia para evitar daños y rayaduras.
- El uso de cera para pulir muebles no es necesario. Si desea usar cera pruebe en un área que no sea visible para revisar su funcionamiento.
- Usar solventes de cualquier tipo puede dañar el acabado del mueble.
- Nunca use agua para limpiar la unidad, ya que le puede dañar el acabado.
- Siempre utilice protección para vasos cuando los coloque sobre la unidad.
- Los derrames de líquidos se deben limpiar inmediatamente, con una toalla suave evitando tallar.
- Siempre utilizar protectores en caso de poner cosas calientes. El calor puede provocar una reacción química en el acabado y dañarlo.
- En caso que su unidad sea manchada durante el uso le recomendamos hablar a un profesional para que le ayude.
- Revisar los pernos y tornillos periódicamente y apriételos si es necesario.

CUIDADO DE MUEBLES DE MADERA

- Mantener la madera a una temperatura adecuada. Temperaturas extremas y cambios de humedad pueden causar diferentes daños en la madera como el encogimiento o desvanecimiento. Mantener la madera lejos de la exposición directa al sol debido a daños en el artículo.
- El cuidado y limpieza adecuado extenderá la vida útil del producto. Si sigue estas directrices la vida útil del producto se alargará.

LIMPIEZA DE MOLDURAS DE LA CHIMENEA

Limpie las molduras de metal con un paño suave, sobre todo voy a hablar del aceite. NO use. El abrillantador se puede adquirir en los supermercados o tiendas especializadas. Y en el sector privado.

GARANTÍA DE UN AÑO

La garantía se aplica al comprador original. En caso de defecto, el productor se encarga de los costes y la reparación o replazo. La garantía queda inutilizable si el montaje es erróneo, dado mal uso o sobrecarga, o dañado por algún accidente. No es transferible y no permite el desgaste, mal uso entre otros del producto. La responsabilidad del proveedor es limitada. El proveedor no se hace cargo de errores futuros en el artículo. Esta garantía se basa en otras. Algunos estados no permiten beneficios tras esto.