




LOT NUMBER: _____
DATE PURCHASED: __/__/__

60" Audio Video Tower

Model # ATD60H-13AX

ATD60H-13AXGR

 CN Patent CN200920267469.6

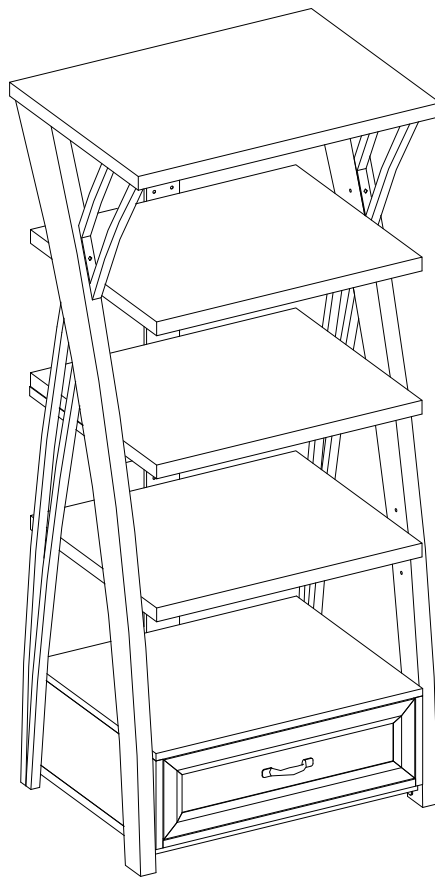

ADULT ASSEMBLY REQUIRED

If you have any questions regarding assembly or if parts are missing, DO NOT return this item to the store where it was purchased. Please call our customer service number and have your instructions and parts list ready to provide the model name, part name or factory number:

1-866-942-5362

Pacific Standard Time: 8:30 a.m. - 4:30 p.m., Monday - Friday

Or visit our web site 24 hours a day, 7 days a week for product assistance at

www.whalenfurniture.com


Or e-mail your request to **parts@whalenfurniture.com**

**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**

Date 2018-07-24 Rev. 0001-A Factory: BESBEA

MAXIMUM RECOMMENDED WEIGHT LOADS

 MANUFACTURER: Whalen Furniture Manufacturing
CATALOG: 60" Audio Video Tower
MODEL # ATD60H-13AX / ATD60H-13AXGR
MADE IN CHINA

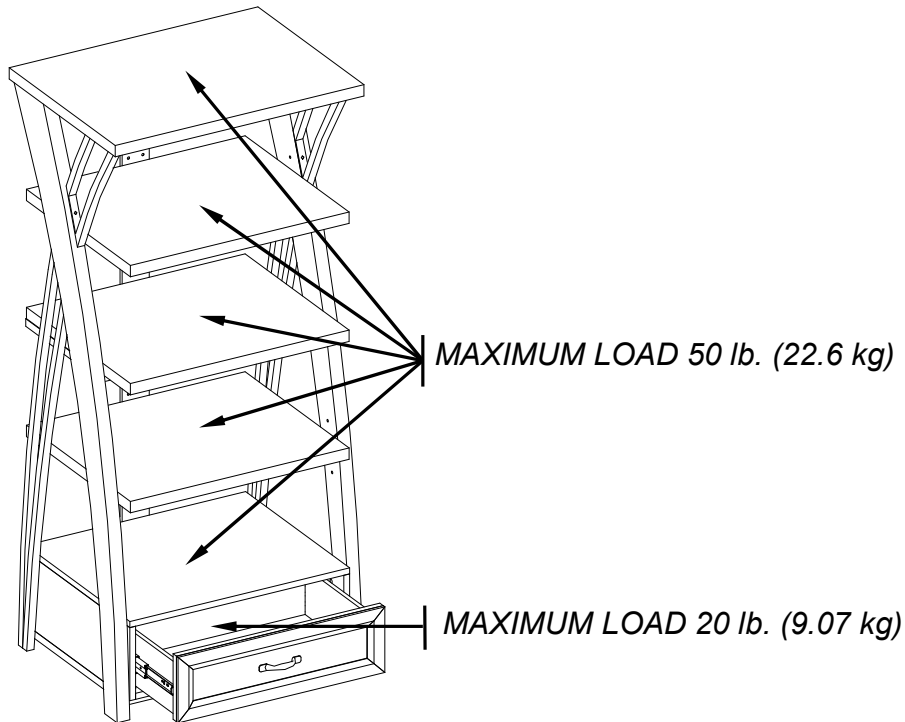

WARNING

THIS UNIT IS INTENDED FOR USE ONLY WITH THE MAXIMUM WEIGHTS INDICATED. USE WITH LOAD HEAVIER THAN THE MAXIMUM WEIGHTS INDICATED MAY RESULT IN INSTABILITY, CAUSING POSSIBLE INJURY.

 
GENERAL INFORMATION, TIPS and TRICKS

1. Please read the Assembly Instructions prior to assembling this product.
2. Remove all hardware from the box and sort by size.
3. Check to see that all hardware and parts are present BEFORE assembling.
4. Ask a friend to assist you with the assembly of this furniture.
5. To avoid damage, assemble the product on a sturdy, level and protective surface.
6. Please wait until all steps are completed before fully tightening bolts.
7. Make sure all bolts are tightly fastened before the unit is used.


This product is sold with one set of Tipping Restraint Hardware Kit. You must install the Tipping Restraint Hardware between the wall and the tower to prevent any accidents or damages. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. The restraint is only a deterrent and is not a substitute for proper adult supervision. Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

Parts and Hardware List


Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

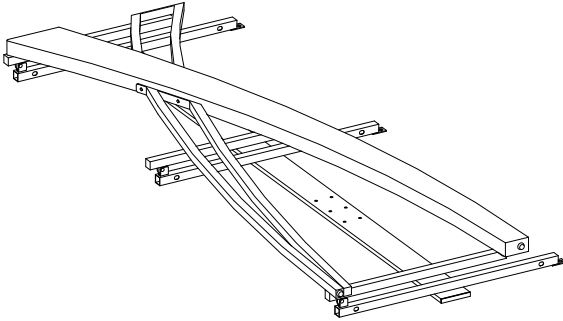


A- Left Leg and Spine Assembly (Qty. 1)

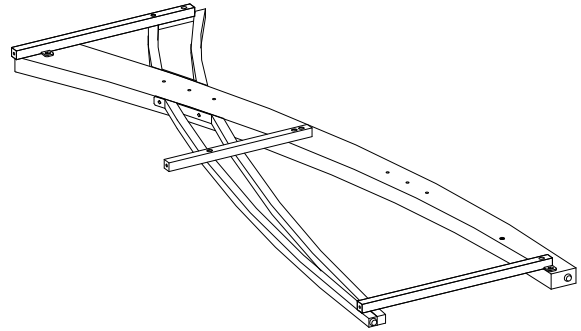 


B- Right Leg (Qty. 1)

 


C- Shelf Front Stretcher (Qty. 3)

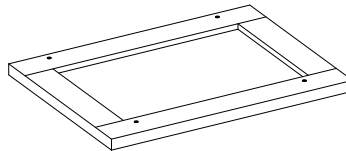 


D- Top Panel (Qty. 1)

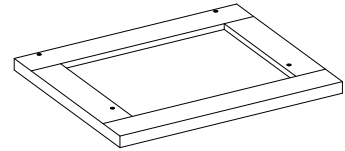 


E- Middle Fixed Shelf (Qty. 1)

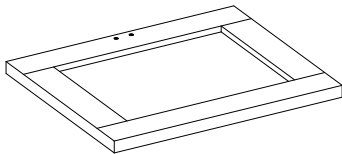 


F- Middle Upper/Lower Shelf (Qty. 2)

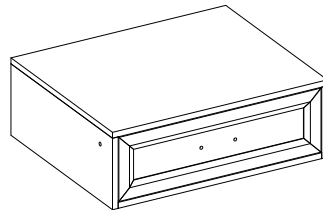 


G- Drawer Box (Qty. 1)

 


H- Cable Wheel (Qty. 2)

 

 
(1) 1/4-20 UNC-2A x 1/2 lg. Bolt
(Qty. 21+1 extra)



 
(2) 1/4-20 UNC-2A x 1 1/4 lg. Bolt
(Qty. 14+1 extra)



 (3) Shelf Pin
(Qty. 4+1 extra)



 (4) Handle with Bolts (Qty. 1)




(5) Metal Bracket (Qty. 2)



4 mm Hex Wrench (Qty. 2)



 
Touch-up Pen (Qty. 1)

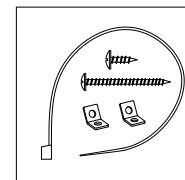

Tipping Restraint Hardware Kit (Qty. 1)
(Inside Plastic Bag)

Tools required: Hex wrench (provided) and Phillips screwdriver (not provided).

 
Assembly Instructions

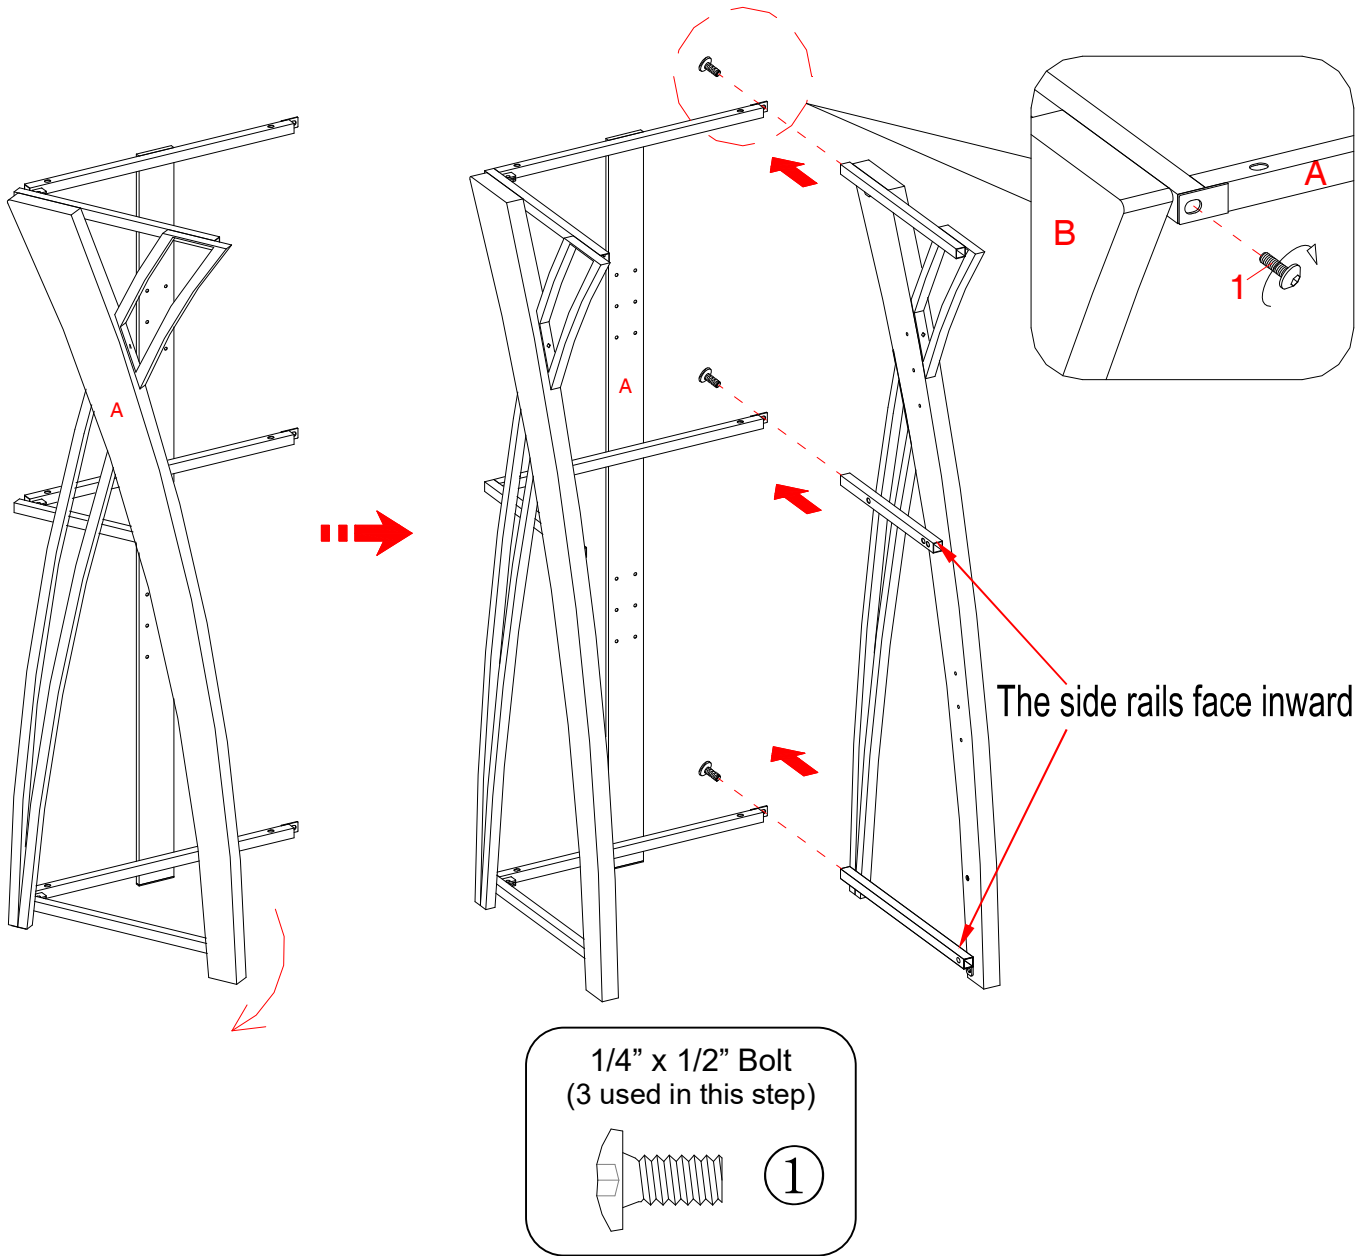

NOTE: Please do not fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.


1. Unpack the unit and confirm that you have all the hardware and required parts.
2. Hold the Left Leg and Spine Assembly (A) upright and simply swing the left leg outward. Align and attach the side rails of Right Leg (B) to the back rails of Spine Assembly (A) with three 1/2" Bolts (1).

 Assembly Instructions

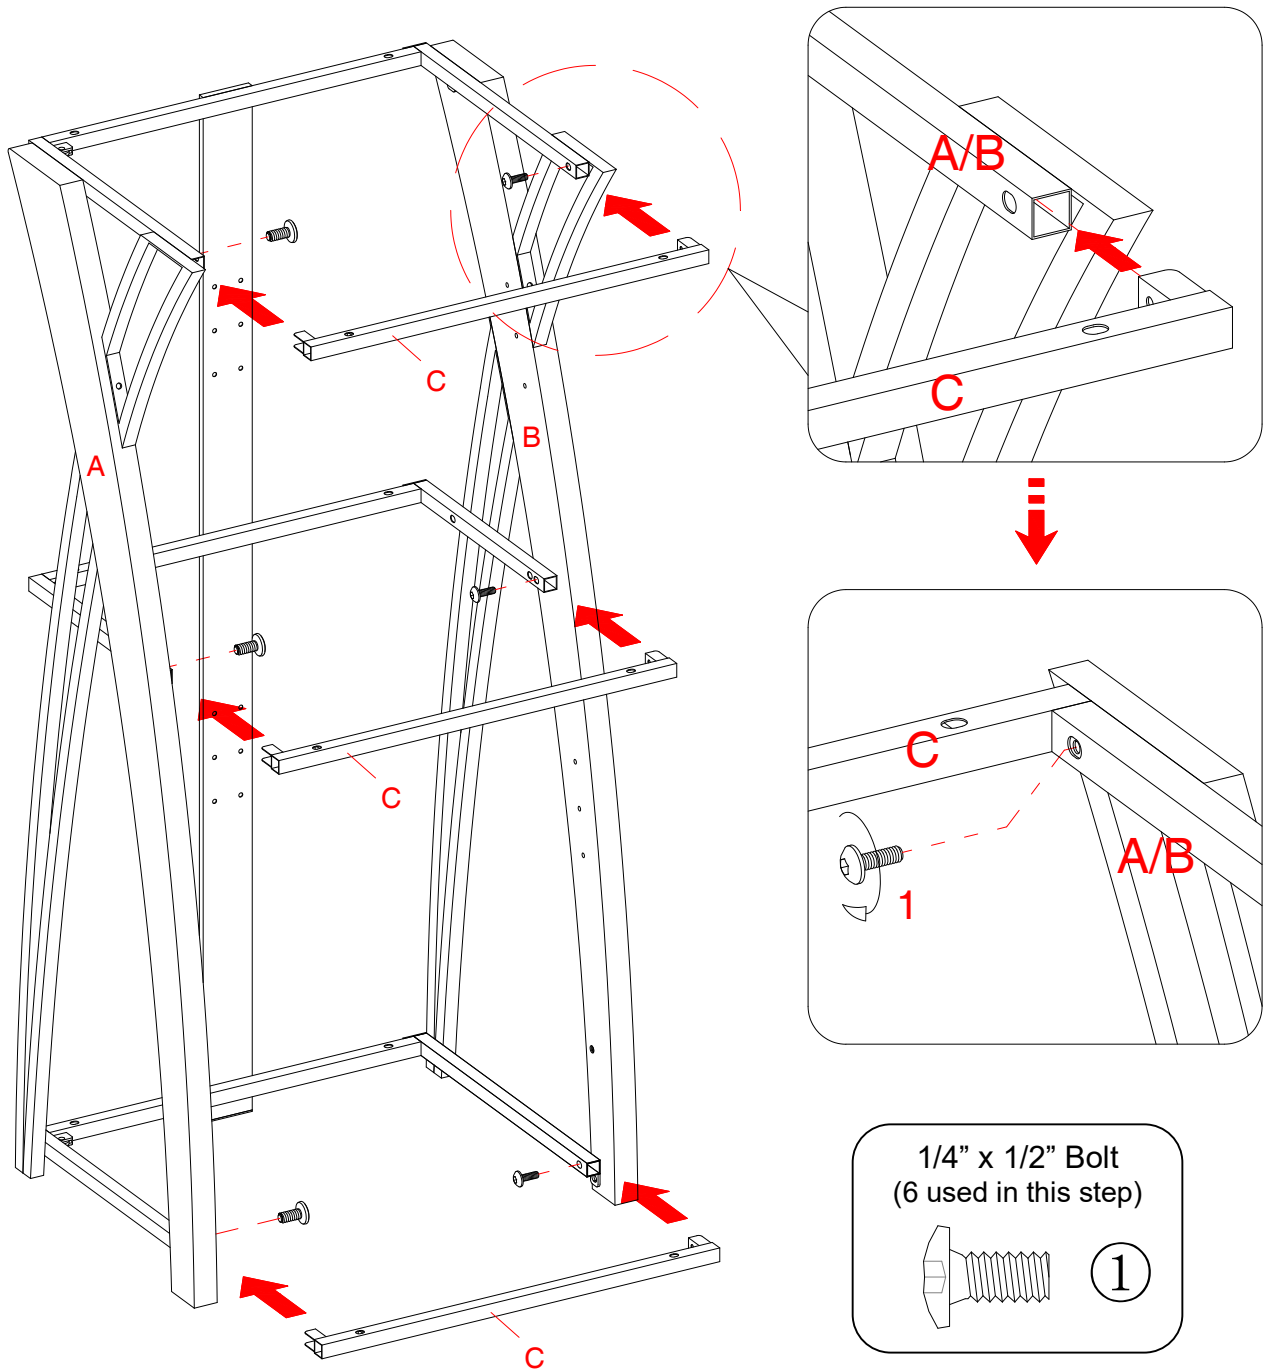


3. Fit the U-shaped bracket on the three Front Stretchers (C) into the side rails of the leg assemblies with six 1/2" Bolts (1).

 Assembly Instructions

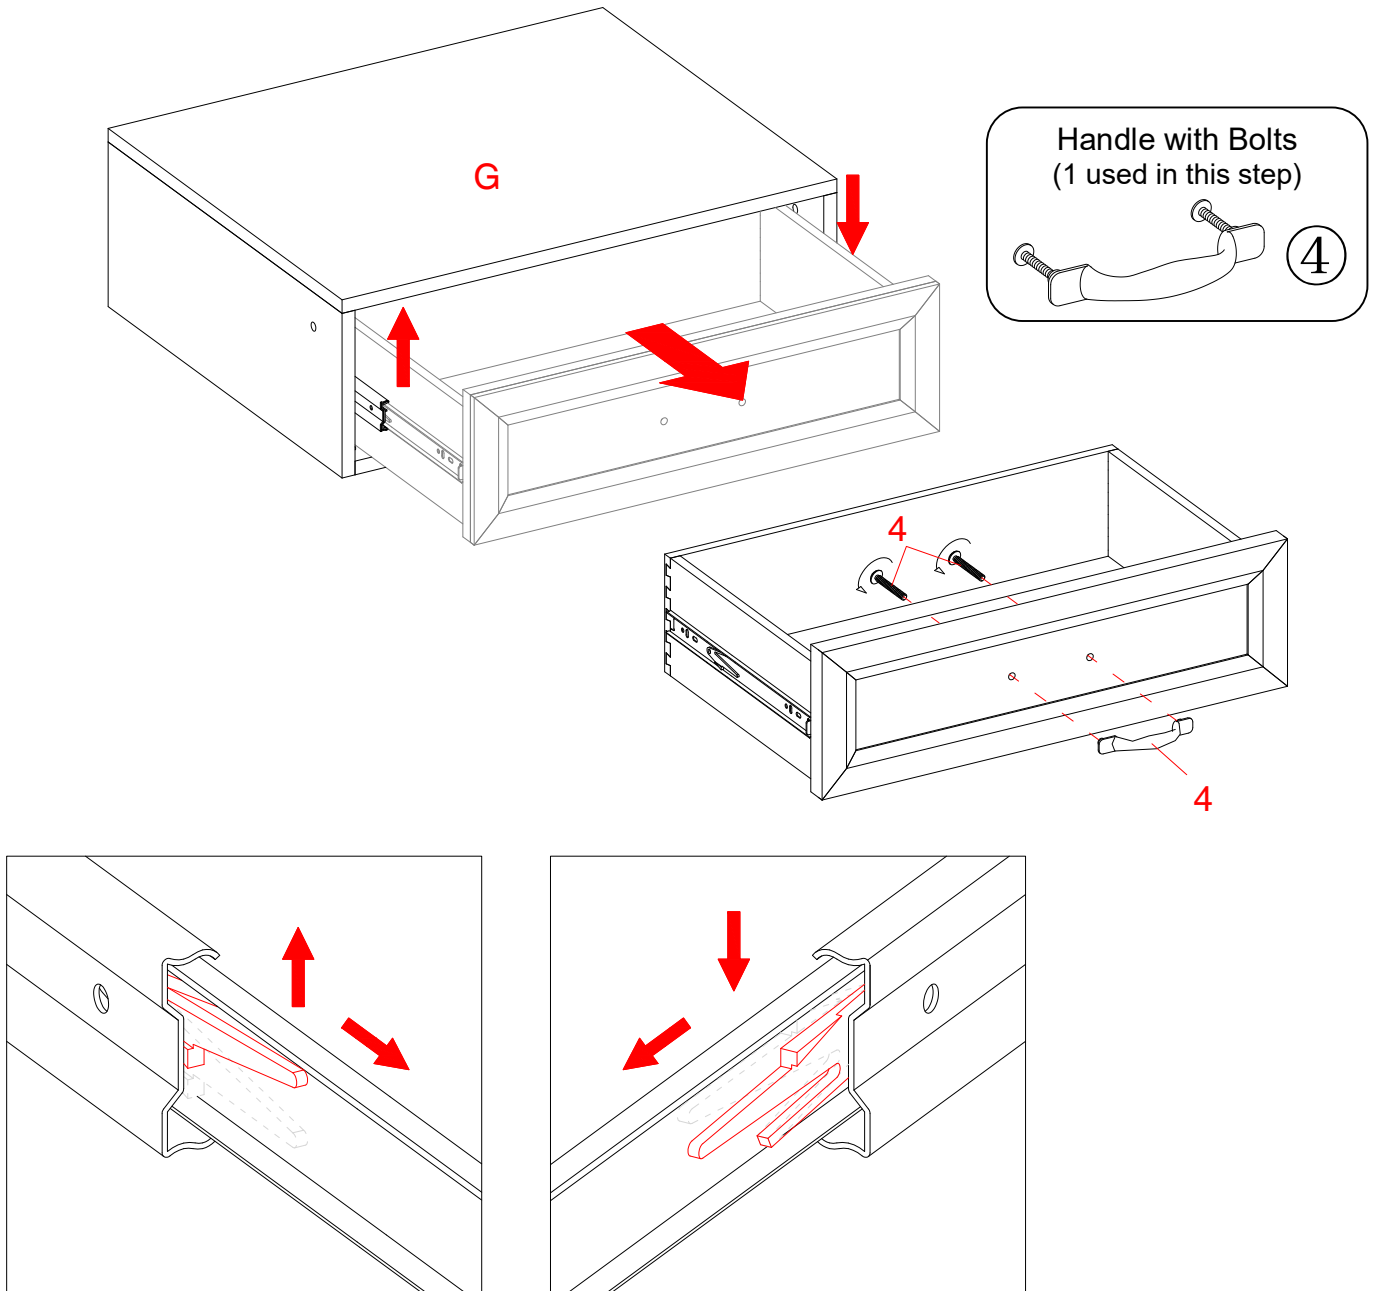

4. Locate the Drawer Box (G) on a scratch free surface as shown.
5. Pull the utility drawer all the way out, then simultaneously push the plastic release lever of the ball bearing slide up on one side and down on the other side, and then pull the drawers completely out.
6. Remove the bolts in the Handle (4), then use the bolts to attach the Handle to the outside of the utility drawer.

 
Assembly Instructions

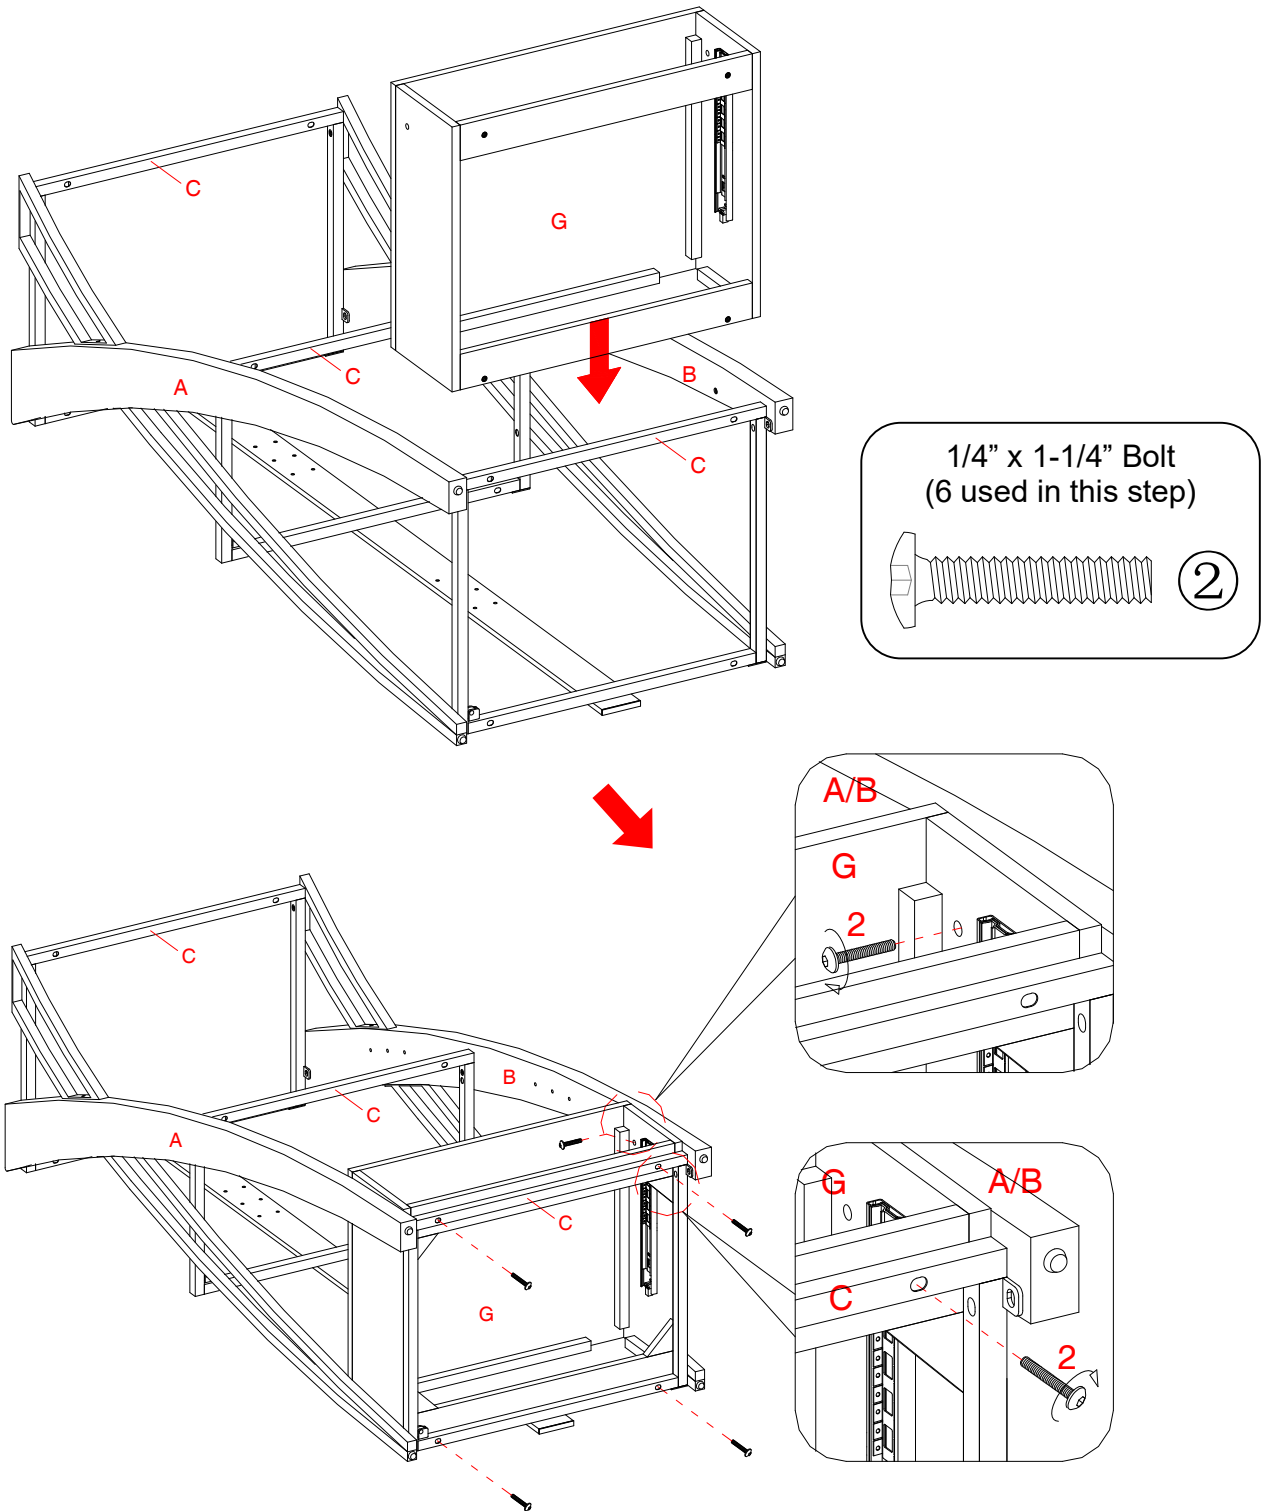


7. Turn the assembled tower frame at its back edge.

8. Fit the Drawer Box (G) between the legs and press firmly to the bottom metal frame. Fasten the Drawer Box (G) in place with six 1-1/4" Bolts (2).

 Assembly Instructions

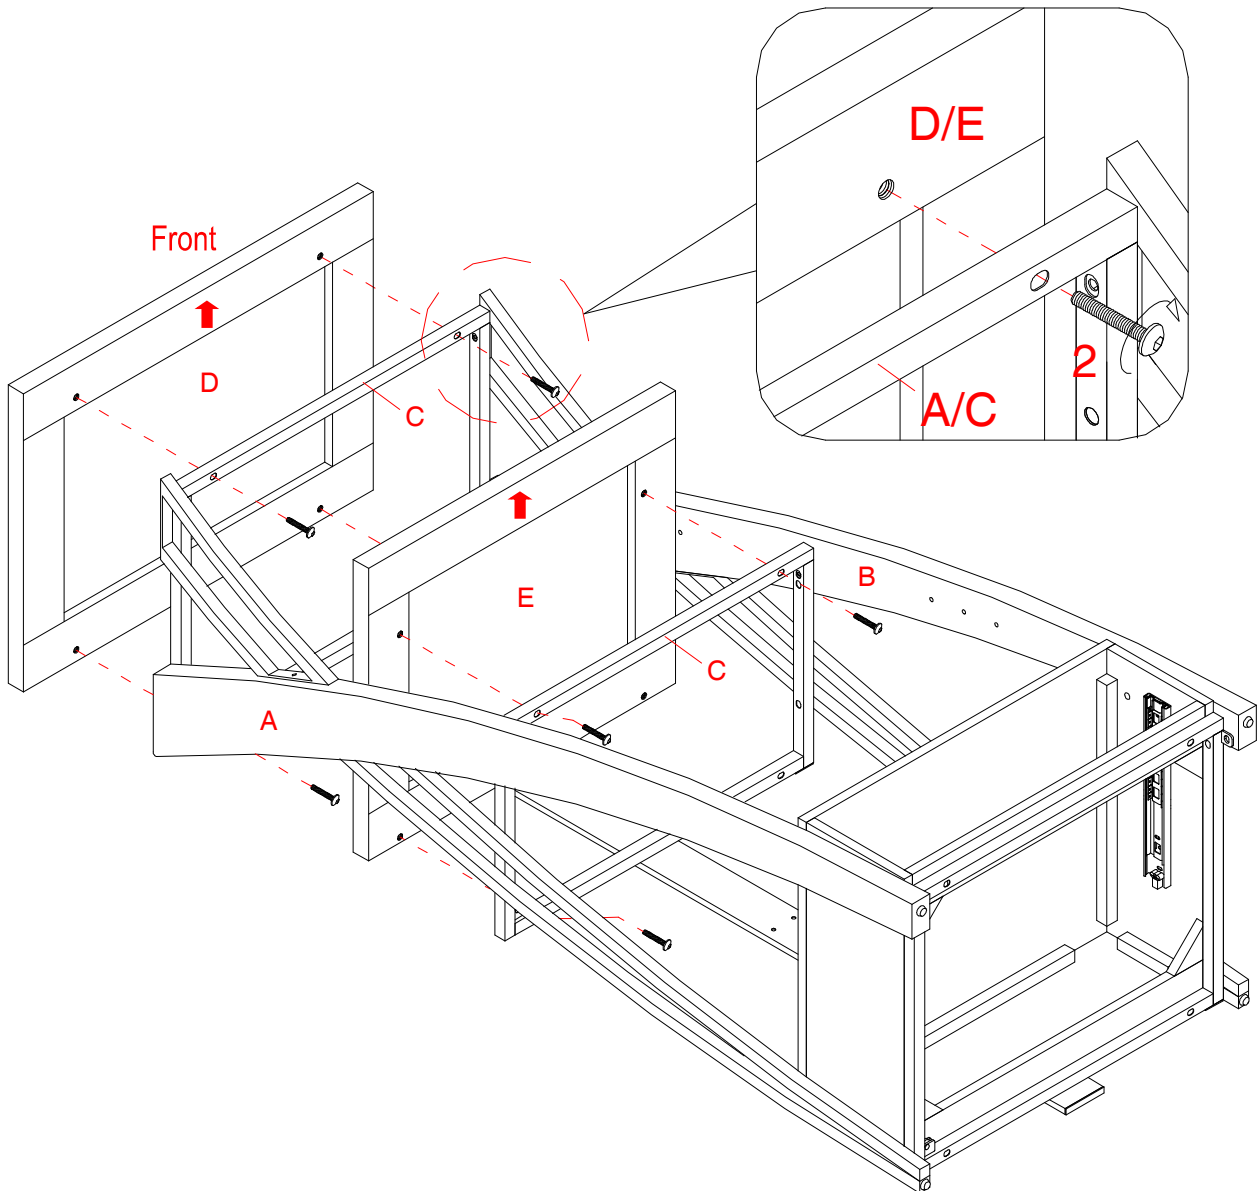


 1/4" x 1-1/4" Bolt
(8 used in this step)

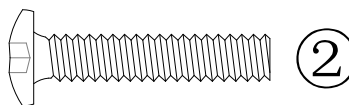


9. Fit the Top Panel (D) and Middle Fixed Shelf (E) onto the assembled shelf frames properly so that the threaded inserts underneath shelf overlap the drilled holes on the Shelf Frames. Insert four 1-1/4" Bolts (2) through the drilled holes and securely screw into each shelf.

 
Assembly Instructions

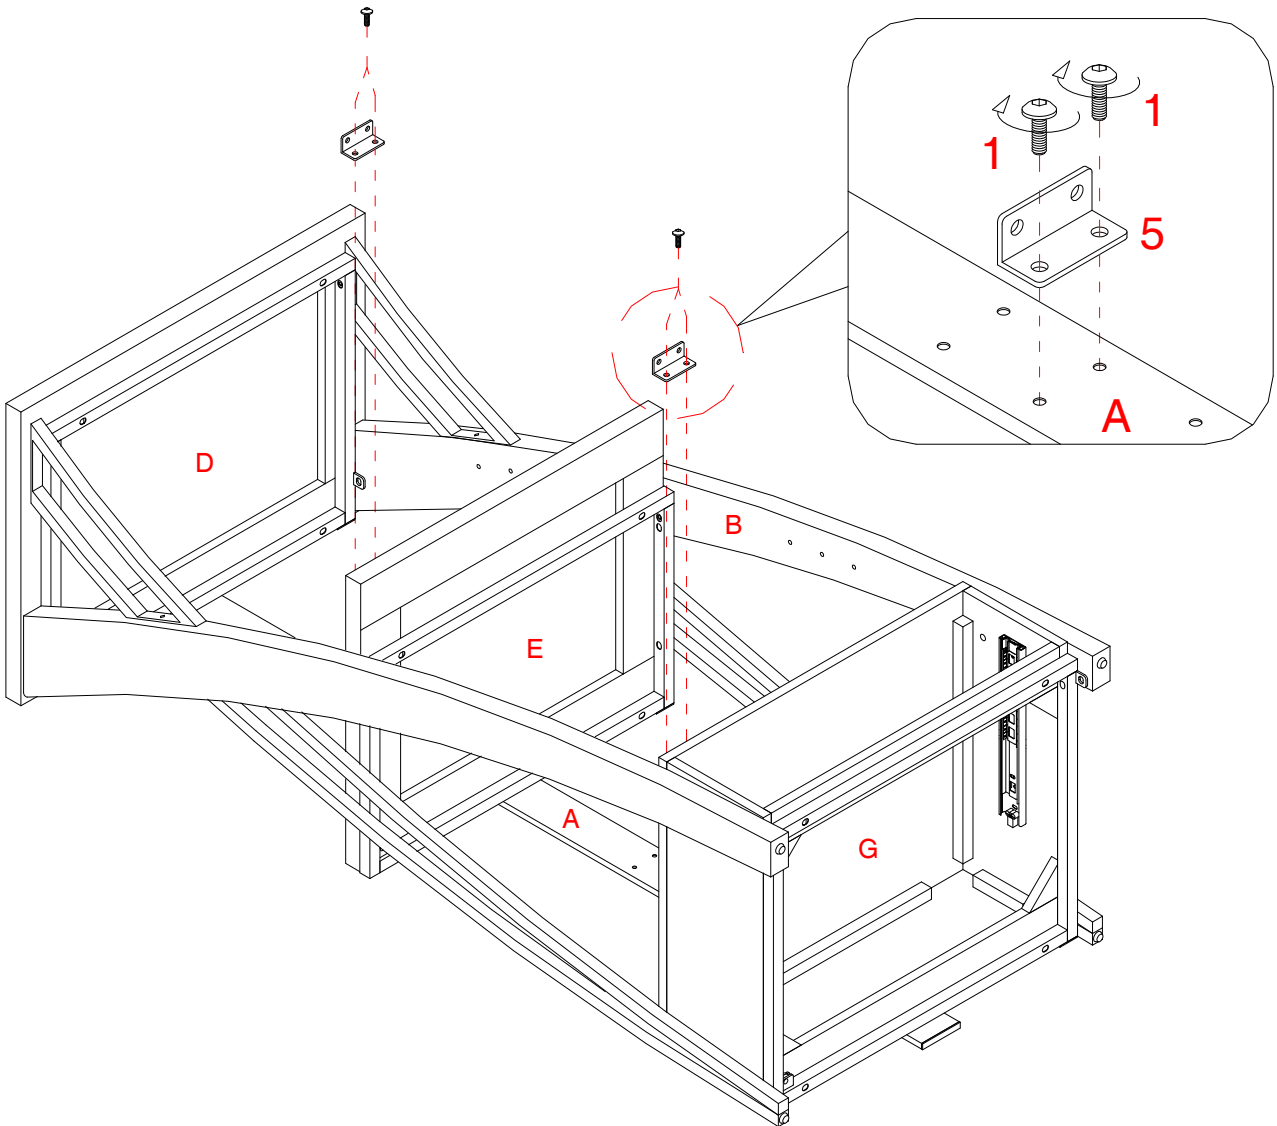

1/4" x 1/2" Bolt
(4 used in this step)

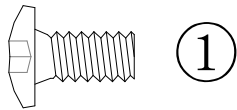 




Metal Bracket
(2 used in this step)

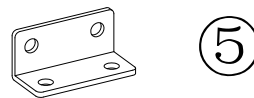 

10. Fasten two Metal Brackets (5) to the Spine (A) at the desired height using four 1/2" Bolts (1). Make sure that the right-angle side of Metal Bracket will face upward when the unit is turned upright.


NOTE: The shelf holder location is adjustable. Choose the upper hole sets to increase the lower shelf space.

   Assembly Instructions

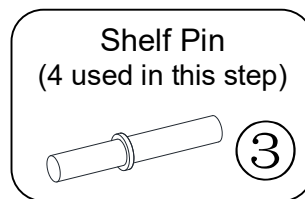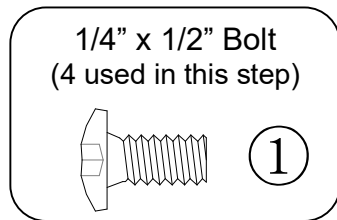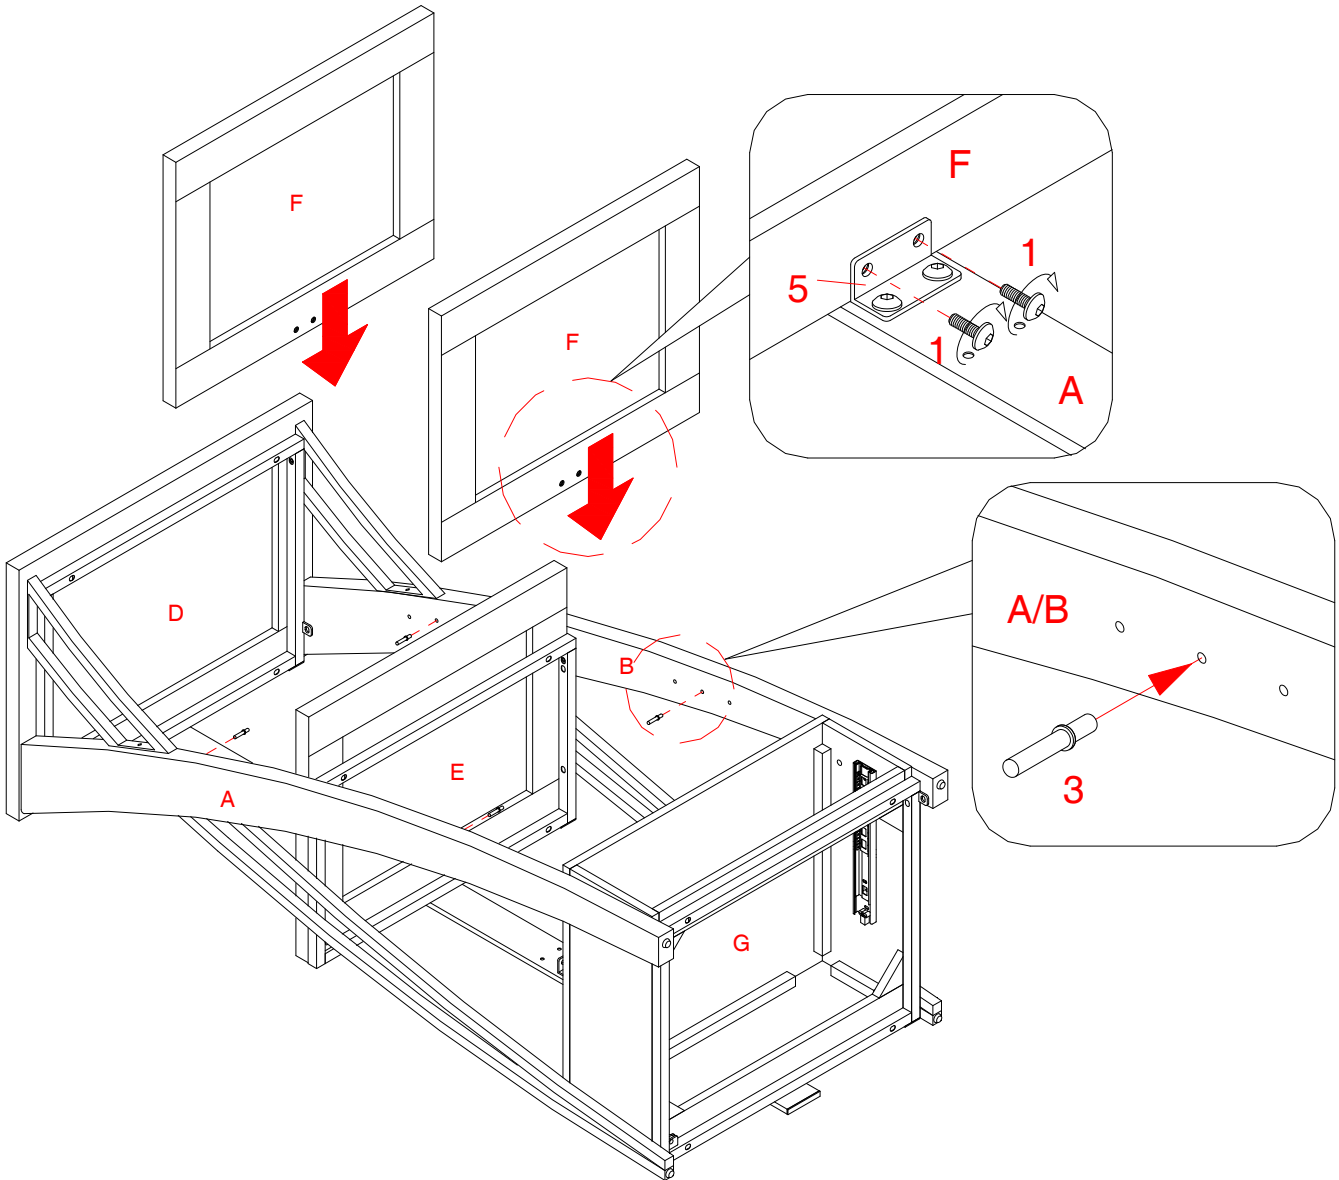

11. Insert four Shelf Pins (3) into the proper hole sets on the inner side of legs. Be sure the Shelf Pins and the installed Metal Brackets (5) are at the same level, so that they will hold the Shelves (F) properly.
12. Rest the Shelves (F) onto the installed Shelf Pines (3) and Metal Brackets (5). Fasten the Shelves (F) in place with two 1/2" Bolts (1) per bracket.

 
Assembly Instructions

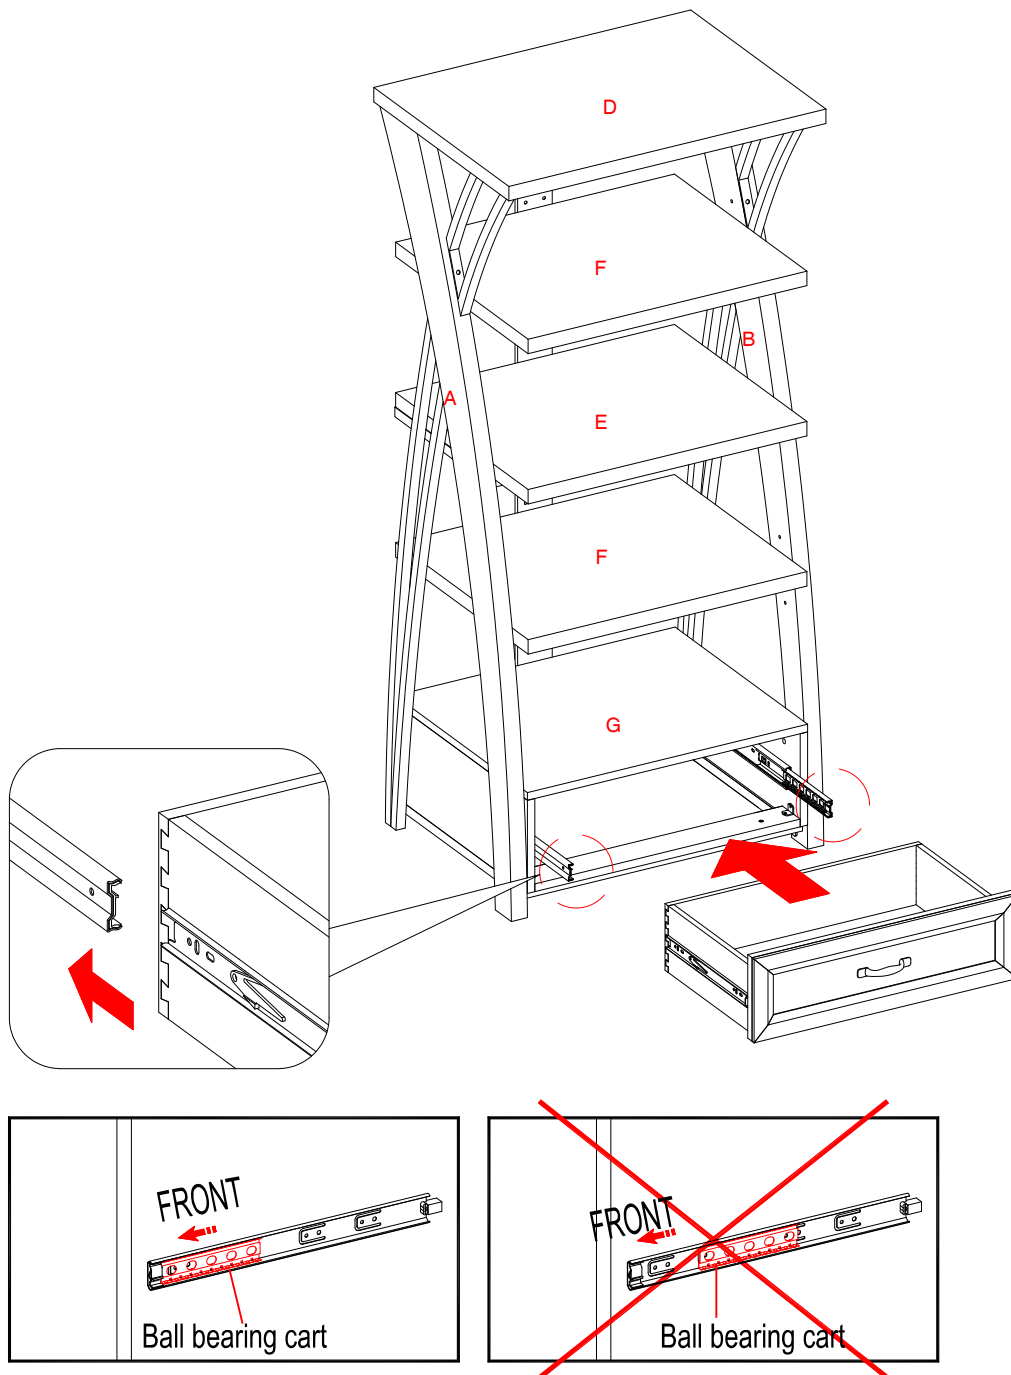

13. Go back and securely tighten all the bolts with the enclosed hex wrench. Ask for assistance to stand the unit upright.


14. Insert the removed drawer into the Drawer Box (G). To place the drawer back, simply push the ball bearing cart all the way to the end of the slides (in both sides), and then align the slide runners on the drawer with the slide tracks on the unit and push it carefully inside until it stops.
NOTE: If the drawer does not go in smoothly, please take it out and repeat the step.

 Assembly Instructions

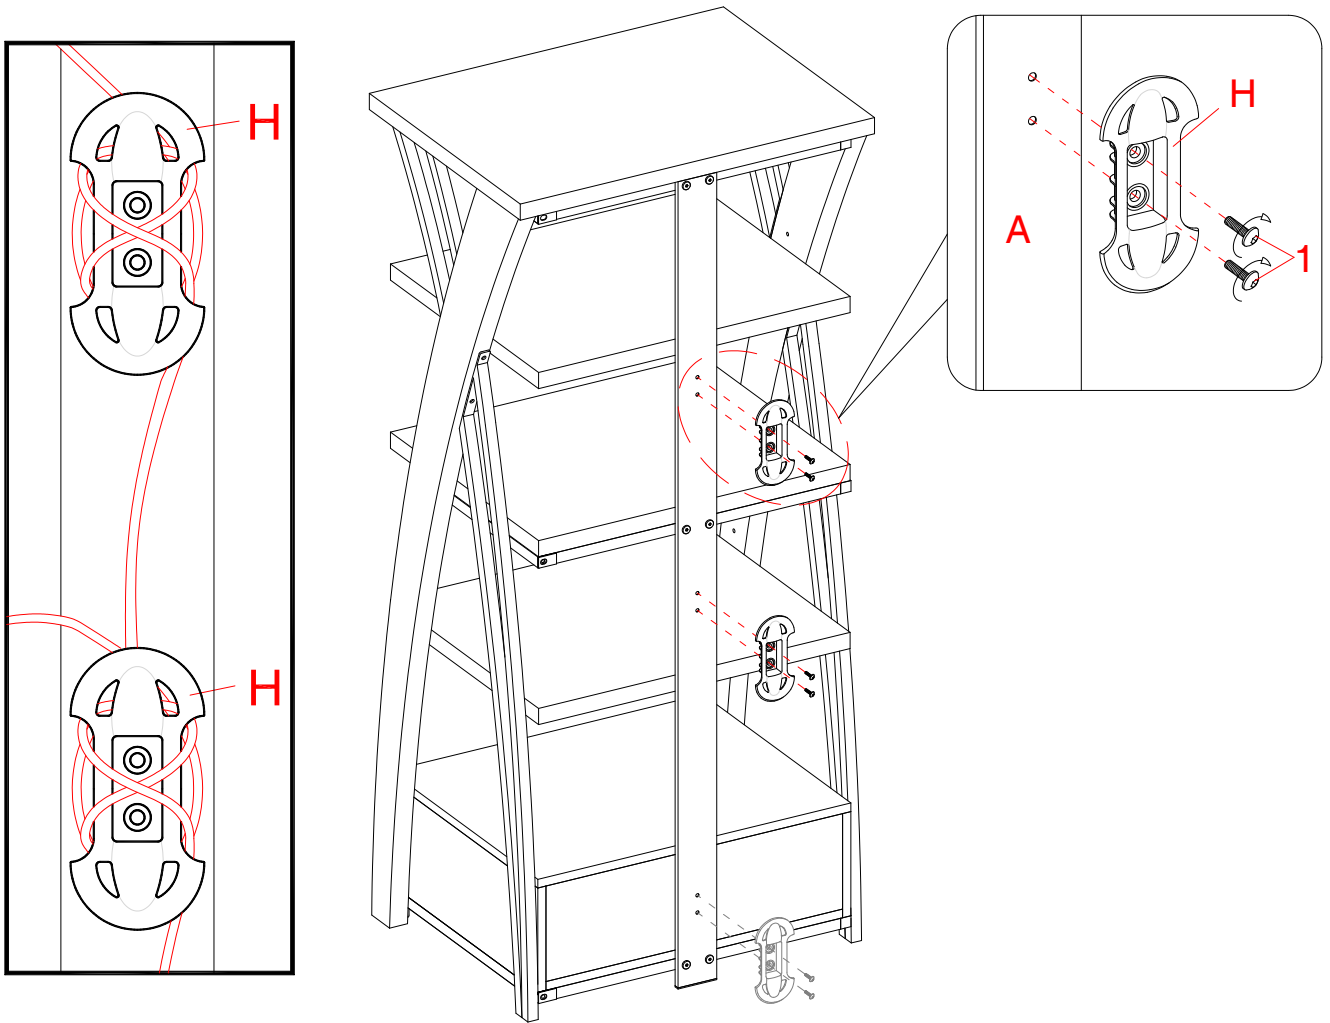

Back view

 
1/4" x 1/2" Bolt
(4 used in this step)

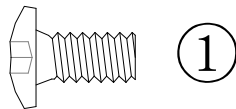

15. Attach two Cable Wheels (H) to the backside of the Spine (A) with four 1/2" Bolts (1). Tighten the bolts with the enclosed hex wrench.

NOTE: You can use the Cable Wheels to help keep your entertainment center's cables and cords organized.

 Assembly Instructions

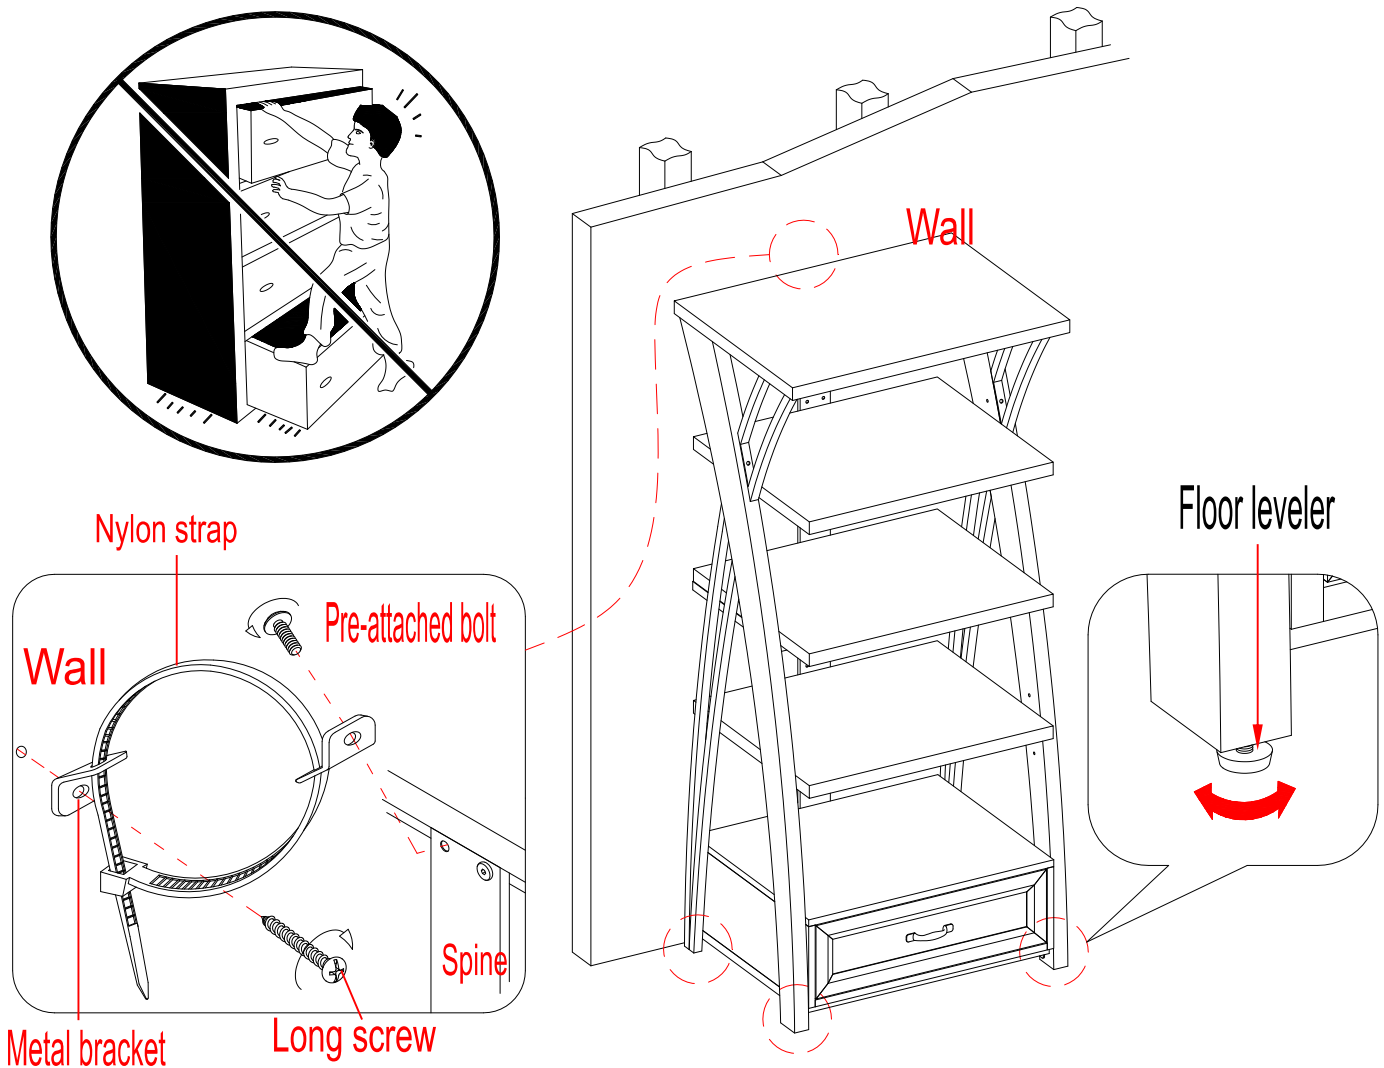

Tools required: Hex wrench (provided), Phillips screwdriver, mallet, power drill, and 1/8" drill bit.

16. Position the assembled unit at the desired location against a wall. If necessary, adjust the pre-attached Floor Levelers at the bottom of the Legs to level the unit. Now, follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware to attach the tip-over restraint to the unit and the wall.

NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction, different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the Tipping Restraint Hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

17. The unit is now ready for use.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

Further Advice about Wood Furniture Care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

A touch-up pen has been provided to minimize the small nicks or scratches that may occur during assembly or shipping.

We hope you enjoy your purchase for many years.
Thank you for your purchase!

QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.

Customer Service: 1-866-942-5362
8:30 a.m. - 4:30 p.m., PST, Monday to Friday
www.whalenfurniture.com