

## Dalton Park 5pc Dining Set

**Better Homes  
& Gardens®**



Stock #: BH12-084-499-04

Lot Number: \_\_\_\_\_

Date Purchased: \_\_\_\_\_

Date 2017-08-18 Rev. 0001-B Factory: ZHIVIE

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.  
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



DO NOT RETURN THE PRODUCT TO THE STORE; individual stores do not stock parts. If a part is missing or damaged, call our toll-free customer service line. We will gladly ship your replacement parts FREE of charge.

**NEED HELP?** For help with assembly or if you are missing a part, please visit **Whalen Furniture** at [www.whalenstyle.com](http://www.whalenstyle.com) or call 866-942-5362 (8:30 a.m. to 4:30 p.m., PST, Monday - Friday). Or e-mail to: [parts@whalenfurniture.com](mailto:parts@whalenfurniture.com).  
For returns, visit [www.walmart.com](http://www.walmart.com) and follow the steps to return a product.

## Dalton Park 5pc Dining Set

**Better Homes  
& Gardens®**

### Get Ready!

 
We assembled every piece ourselves to make sure it's truly easy.

- Please read all the instructions before starting.
  - Carefully unpack and identify each part, component, and piece of hardware to make sure you have everything you need for assembly.
- Lay out each part on a soft, uncluttered surface.




**Warning:** Includes small parts with sharp edges that could be hazardous to children.

### Counter Height Dining Set Parts

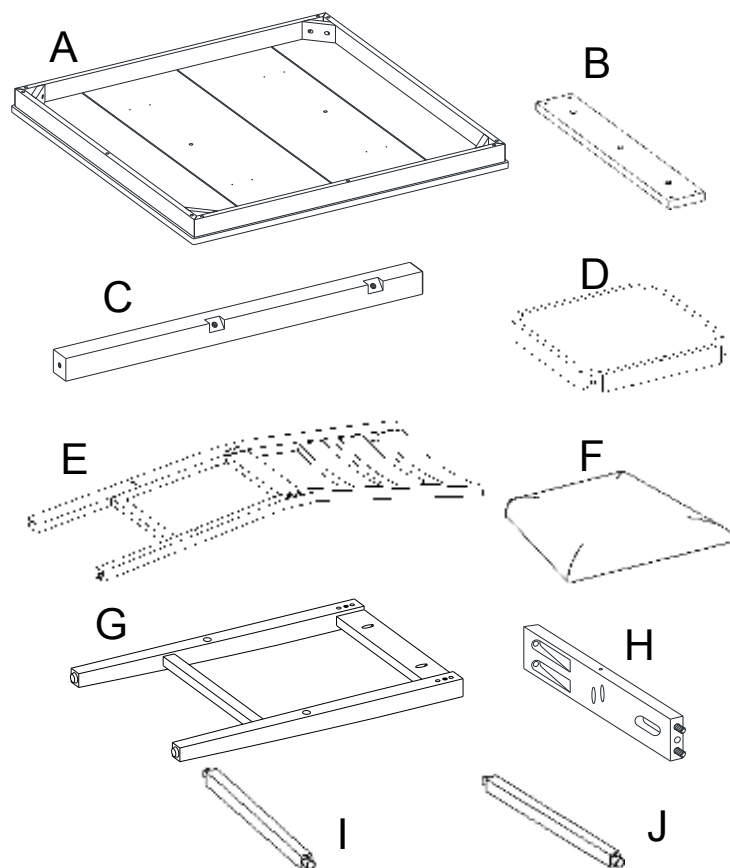

### Counter Height Dining Set Hardware

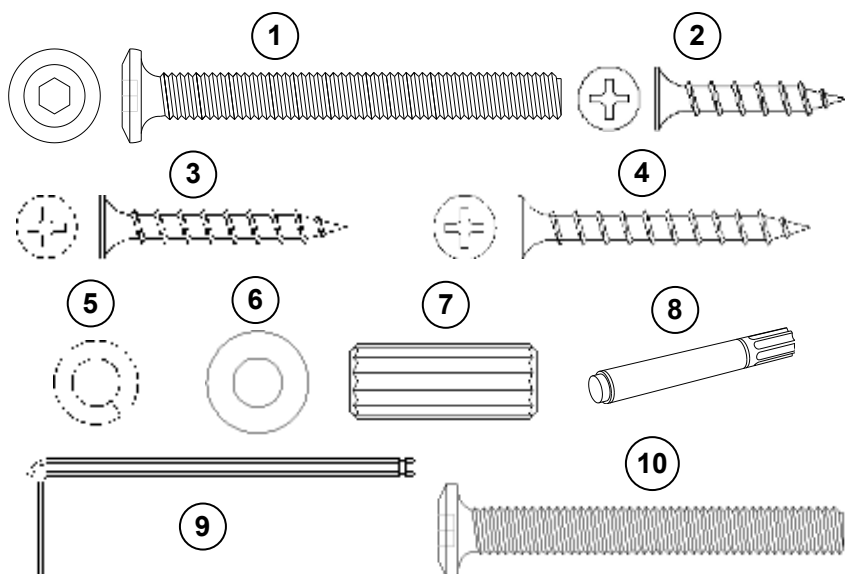 

COMPONENTS		
	PART	QTY.
A	Table Top	1
B	Mounting Panel	2
C	Table Leg	4
D	Shelf Frame	2
E	Chair Backrest	4
F	Cushion	4
G	Front Leg Assembly	4
H	Side Rail	8
I	Left Side Stretcher	4
J	Right Side Stretcher	4
HARDWARE		
1	M6x55mm Bolt	12+1 extra
2	M4x25mm Screw	8+1 extra
3	M4x32mm Screw	16+1 extra
4	M4x38mm Screw	16+1 extra
5	Lock Washer	36+1 extra
6	Flat Washer	36+1 extra
7	Wood Dowel	2
8	Touch-up Pen	1
9	M4 Hex Wrench	2
10	M6x50mm Bolt	24+1 extra

**NEED HELP?** For help with assembly or if you are missing a part, please call **Whalen Furniture Manufacturing** 866-942-5362 (8:30 a.m. to 4:30 p.m., PST, Monday - Friday) or e-mail to: [parts@whalenfurniture.com](mailto:parts@whalenfurniture.com).


## Dalton Park 5pc Dining Set

 **Better Homes  
& Gardens®**

### Step 1:

#### HARDWARE

PART



1

M6x55mm Bolt x 8

PART



5

Lock Washer x 8

 
PART



6


Flat Washer x 8

PART



9

 Hex Wrench x 1

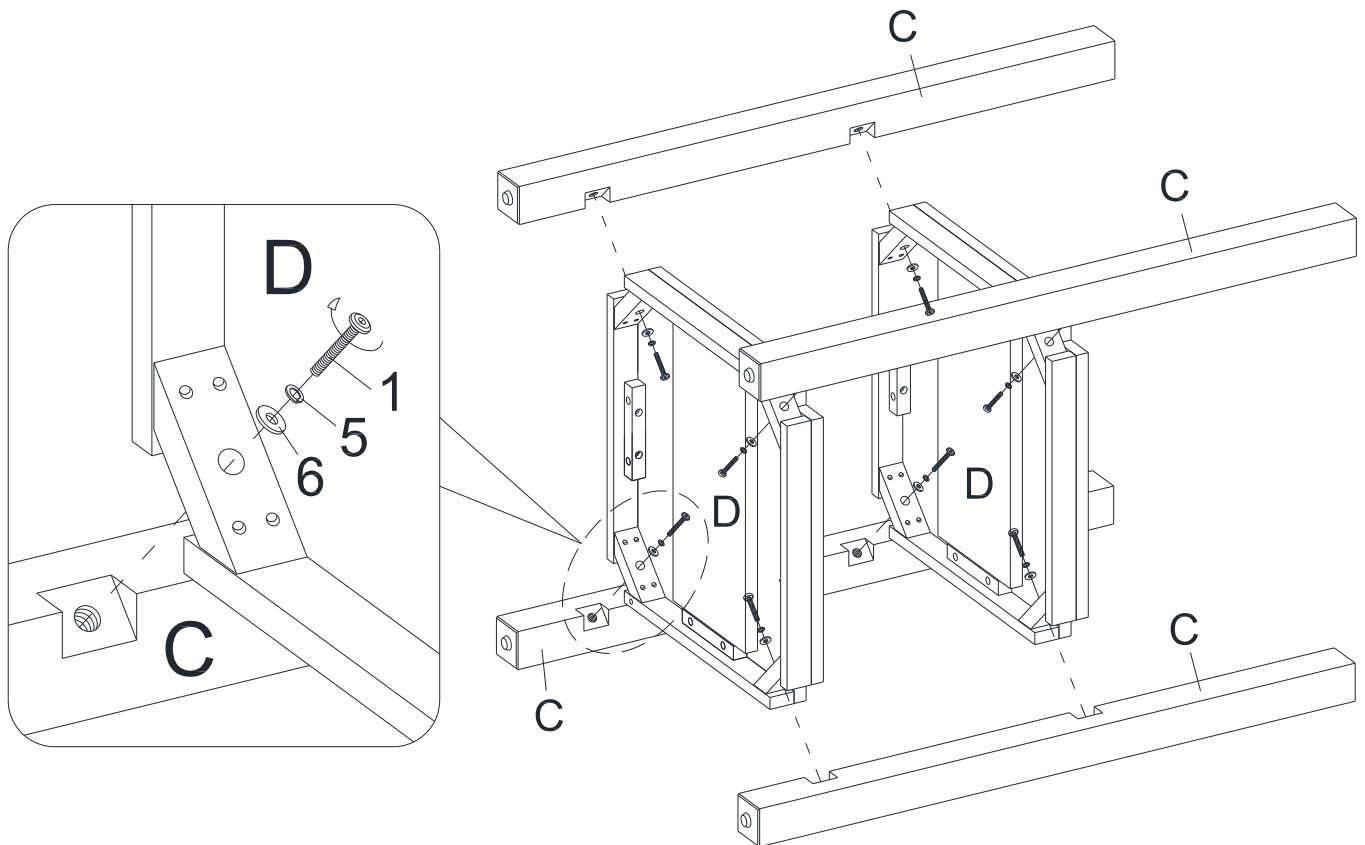

- Unpack the unit and confirm that you have all the hardware and required parts.
- Align and attach the Shelf Frames (D) to the cutouts of Table Legs (C). Make certain the aprons on Shelf Frames will face the floor after assembly. Insert the 55 mm Bolts (1) with Lock Washers (5) and Flat Washers (6) through the corner blocks and screw into the threaded inserts in the Legs. Tighten the bolts with the enclosed hex wrench .

### Step 2:

 
#### HARDWARE

PART

PART

PART

PART



①

M6x55mm Bolt x 4



⑤

Lock Washer x 4



 
⑥

Flat Washer x 4



⑨

Hex Wrench x 1

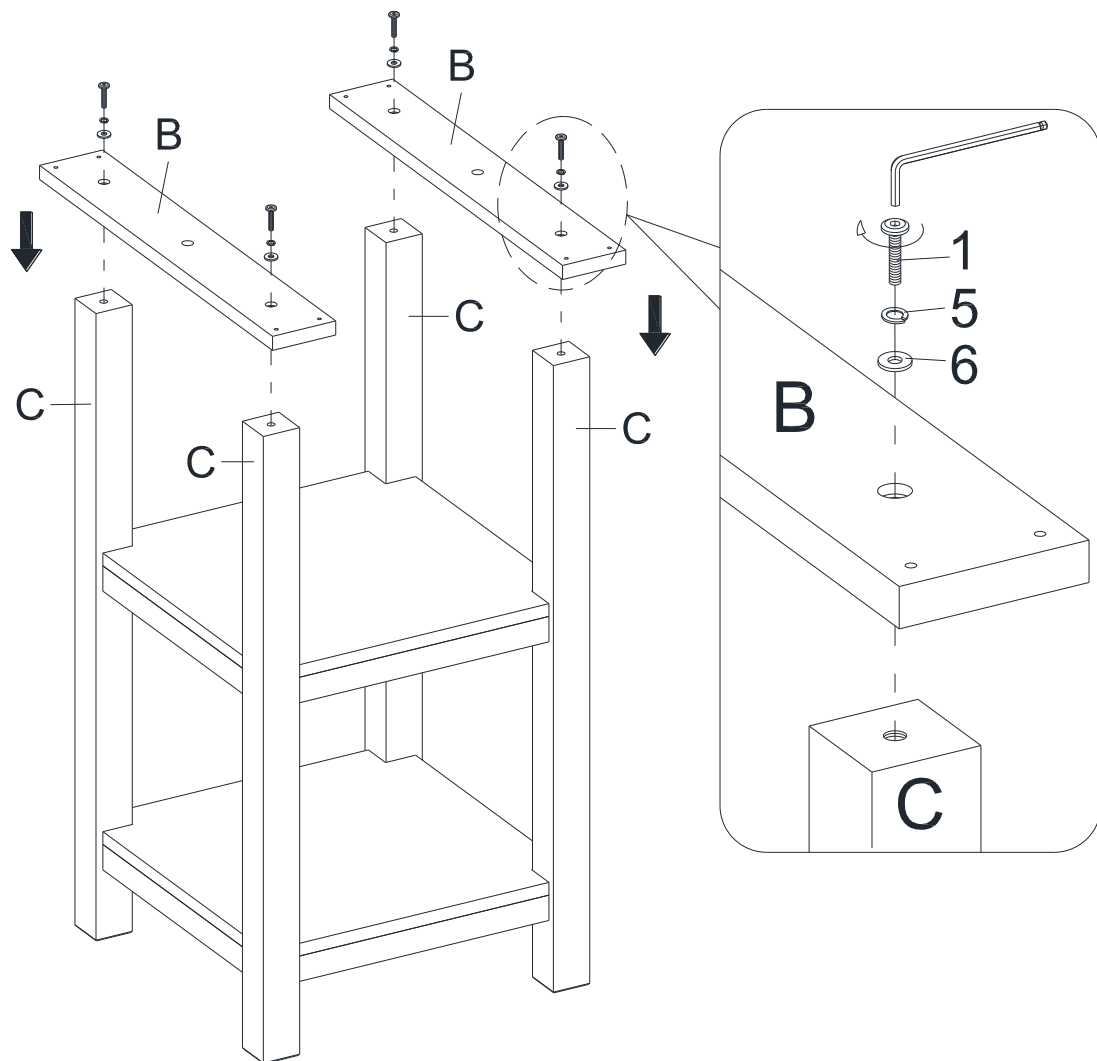

- Stand the previous assembly upright.
- Align and attach the Mounting Panels (B) onto the top of Table Legs (C) using four 55 mm Bolts (1) with Lock Washers (5) and Flat Washers (6) through the countersunk holes on the Mounting Panels and screw into the threaded inserts in the Table Legs. Tightly fasten the bolts with the enclosed hex wrench.

### Step 3:

## HARDWARE

### PART

 


M4 x 25mm Screw x 8

### PART



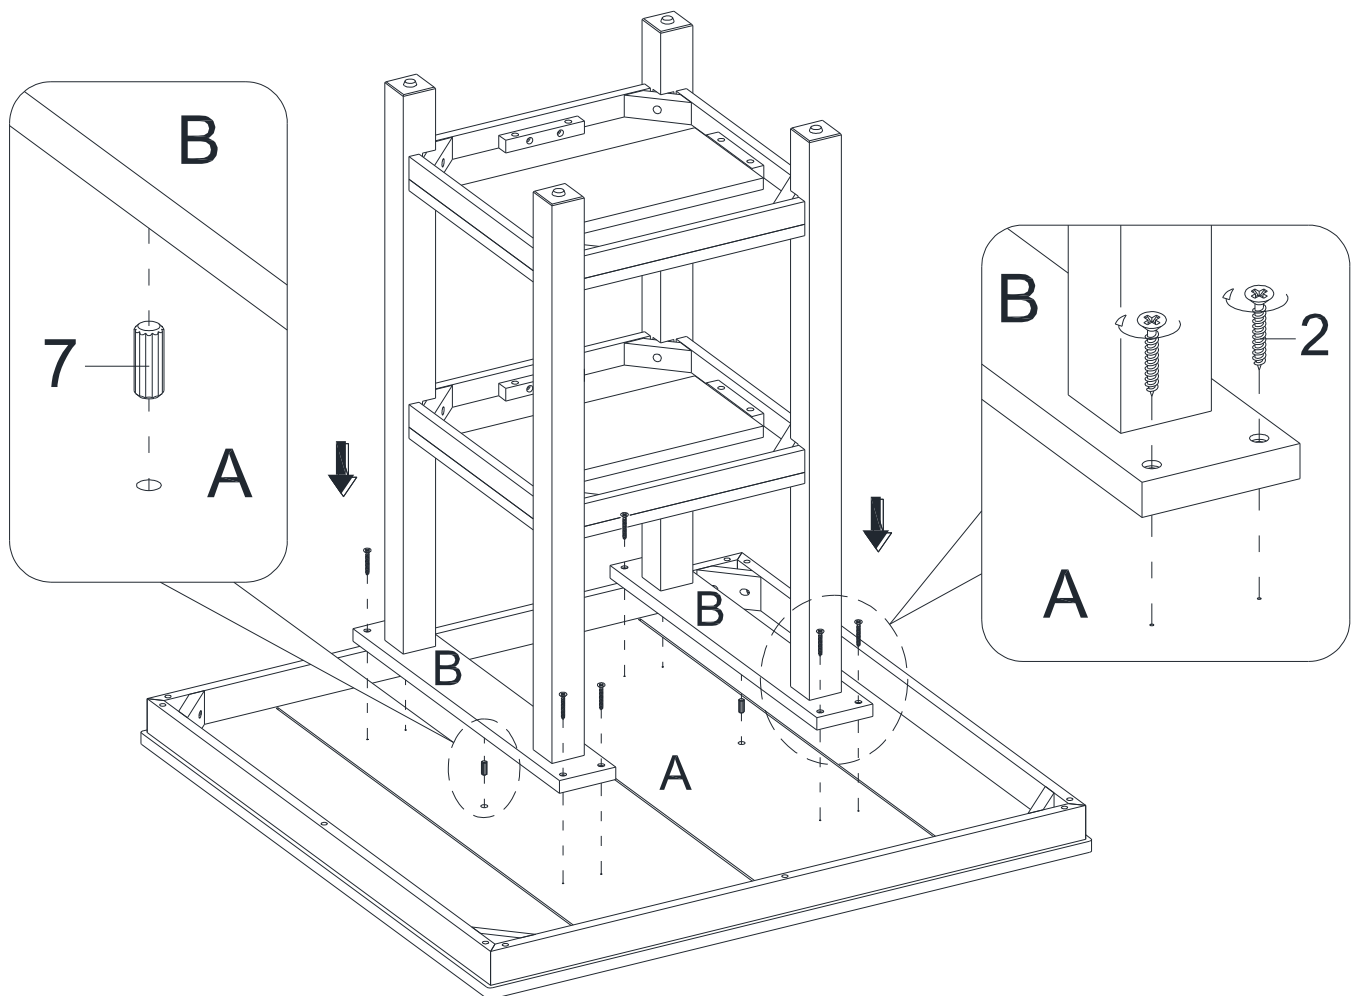



Wood Dowel x 2




- Position the Table Top (A) upside down on a level and protective surface as shown.
- Insert 2 Wood Dowels (7) into the middle holes on the Table Top (A). Flip the assembled frame upside down and position the Mounting Panels (B) onto the inserted Wood Dowels.
- Center and attach the Mounting Panels (B) to the Table Top (A) by inserting and screwing eight 25mm Screws (2) through the pre-drilled holes on the Mounting Panels. Tightly fasten the screws with a Phillips Screwdriver.
- Ask for assistance to stand the Table upright.

## Step 4:
 
### HARDWARE

 PART	PART	PART	PART
			
10	5	6	4
M6 x 50mm Bolt x 6	Lock Washer x 6	Flat Washer x 6	M4 x 38mm Screw x 4


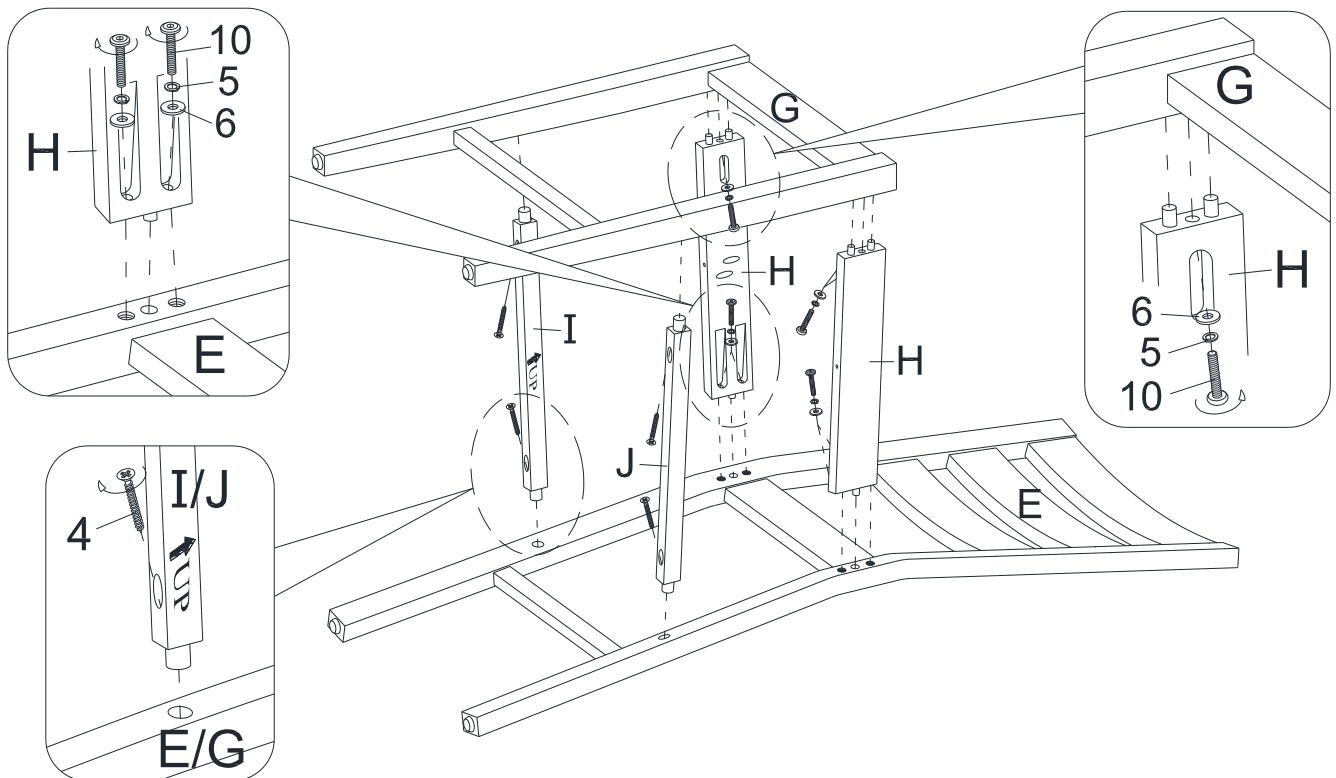 


- Lay one Chair Backrest (E) on a level and protective surface with the threaded inserts facing up.
- Attach two Side Rails (H) onto the Backrest (E) with the end wood dowel fully inserted into the non-threaded hole. Make sure the pre-drilled slant holes face inward. Insert the 50 mm Bolts (10) with Lock Washers (5) and Flat Washers (6) through the slant holes and screw into the threaded inserts included on the Backrest (E). Loosely tighten the bolts with the provided hex wrench .
- Fully insert the tenon of Left and Right Side Stretchers (I and J) into the mortises on the Backrest (E) properly. Make sure the Arrow UP stickers face inward and the slant screw holes on the stretchers will face the floor after assembly. Insert and screw the 38 mm Screws (4) into the pre-drilled holes underneath the stretcher. Loosely tighten with a Phillips screwdriver.
- Repeat the procedure to attach the Front Leg Assembly (G) at opposite end.

**NOTE:** DO NOT fully tighten all the screws and bolts until the chair has been adjusted and all the legs are levelled so that they do not wobble. Once adjusted then go back and tighten while making sure that the unit remains level.

### Step 5:
  
#### HARDWARE

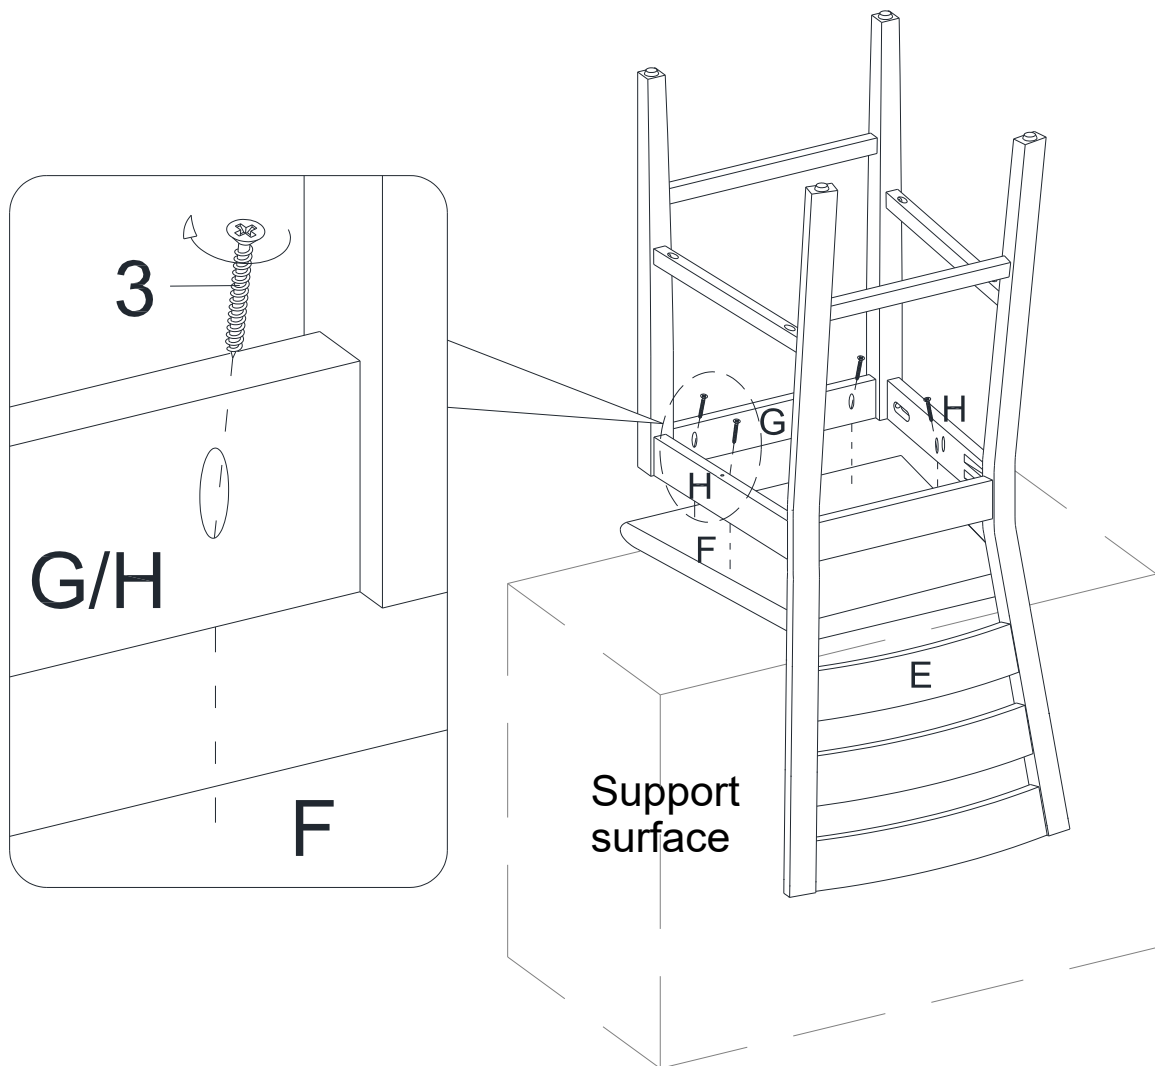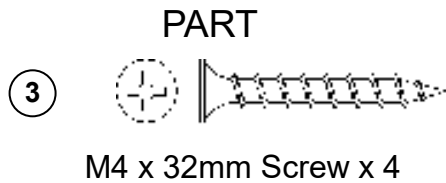


- Stand assembled chair upright on a flat surface. Press down Side Rails (H) to even all legs. Now, tightly fasten all the Bolts and Screws.
- Flip last assembly upside down and attach to the bottom of Cushion (F), secure with four 32mm Screws (3) through the pre-drilled holes on Front Leg Assembly (G) and Side Rails (H). Tighten with a Phillips screwdriver.
- Stand the chair upright.
- Repeat the same procedure to assemble the other chairs.




## Dalton Park 5pc Dining Set
 
# Better Homes & Gardens®

Weight limit:  
400 lbs. /181.4 kgs.

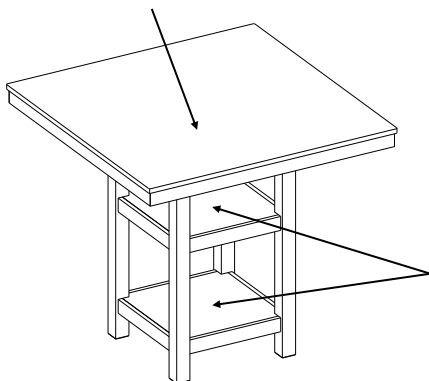

Weight limit:  
300 lbs. /136.1 kgs.

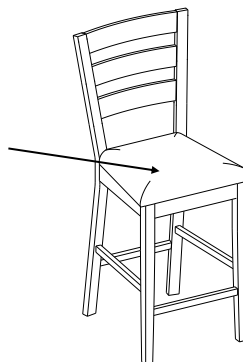 

Weight limit:  
100 lbs. /45.4 kgs.

### WARNINGS

This unit is intended for use only with the maximum weights indicated. Use with products heavier than the maximum weights indicated may result in instability causing possible injury.

### Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test in an inconspicuous area first.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

### Further Advice about Wood Furniture Care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Follow the important and helpful tips that will enhance your furniture as it ages.

A Touch-up Pen has been provided to repair any small nicks or scratches that may occur during assembly or shipping.

**We hope you enjoy your purchase for many years.  
Thank you for your purchase!**

### QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

**Customer Service: 866-942-5362**

**8:30 a.m. - 4:30 p.m., PST, Monday to Friday**

**[www.whalenstyle.com](http://www.whalenstyle.com)**



**DO NOT RETURN THE PRODUCT TO THE STORE;** individual stores do not stock parts. If a part is missing or damaged, call our toll-free customer service line. We will gladly ship your replacement parts **FREE** of charge.

**NEED HELP?** For help with assembly or if you are missing a part, please call **Whalen Furniture Manufacturing** 866-942-5362 (8:30 a.m. to 4:30 p.m., PST, Monday - Friday) or e-mail to: [parts@whalenfurniture.com](mailto:parts@whalenfurniture.com).