



 
LOT NUMBER: \_\_\_\_\_

DATE PURCHASED: \_\_/\_\_/\_\_

# Eastwood 52" Fireplace Console

Model # MNFP52EW26CA

# MNFP52EW26CB

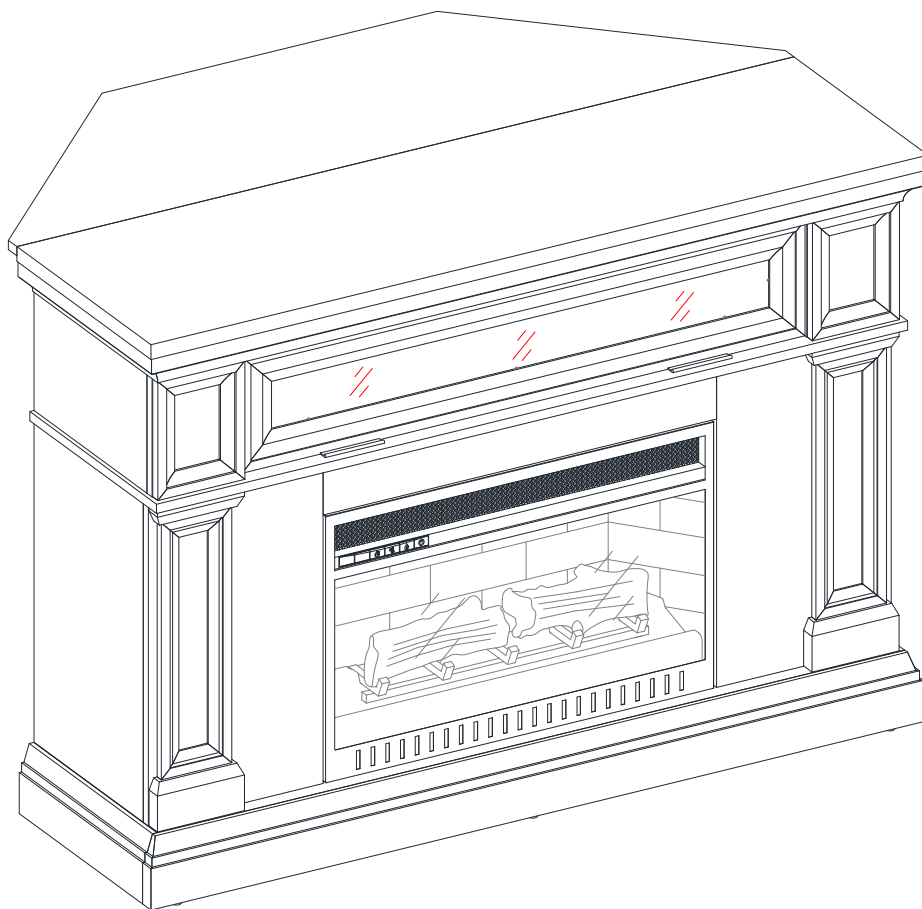

## ADULT ASSEMBLY REQUIRED

If you have any questions regarding assembly or if parts are missing, DO NOT return this item to the store where it was purchased. Please call our toll-free customer service number and have your instructions and parts list ready to provide the model name, part name or factory number:

**1-866-942-5362**

Pacific Standard Time: 8:30 a.m. - 4:30 p.m., Monday - Friday

Or visit our web site 24 hours a day, 7 days a week for product assistance at

**[www.whalenfurniture.com](http://www.whalenfurniture.com)**

Or e-mail your request to **[parts@whalenfurniture.com](mailto:parts@whalenfurniture.com)**

**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.  
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**


Date 2020-05-25      Rev. 0001-A

## IMPORTANT


**Before you begin:** Open, identify and count all parts prior to assembly. Lay out parts on a flat and non-abrasive surface. You will need the parts identified on page 3 and 4 of this instruction manuals.

**NOTE:** IT IS VERY IMPORTANT TO USE GLUE WITH THE DOWELS. EXCESS GLUE CAN BE WIPED OFF WITH A DAMP CLOTH.

 Insert dowel at least half way by tapping lightly with a rubber mallet (not included), IF NECESSARY.

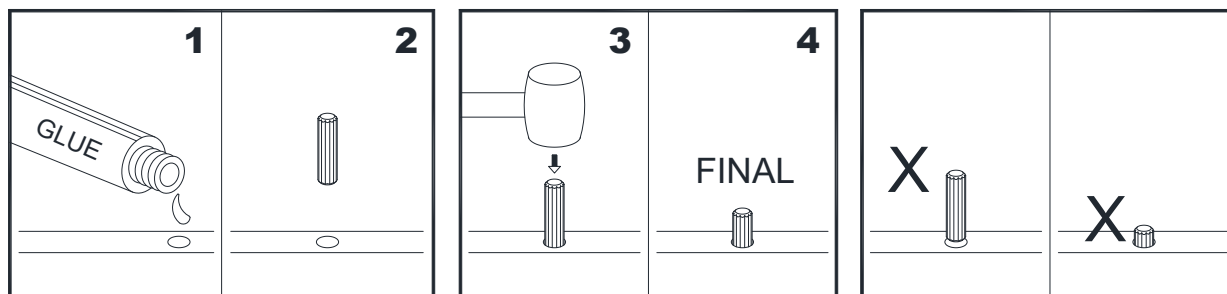

## CAM LOCK SYSTEM OPERATION

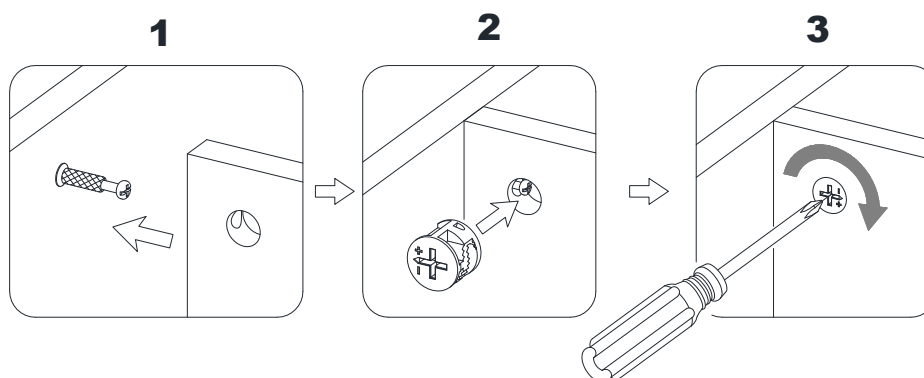 

## HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1. Screw the Cam Bolt into the pre-drilled small holes on the panel. Connect both panels together; making sure the Cam Bolt goes into the pre-drilled hole at the end of the panel with the Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole in the panel. Make sure the arrow on the Cam Lock is pointed towards the Cam Bolt.
3. Once the Cam Bolt is connected inside the Cam Lock, take a Phillips screwdriver (not included) and tighten the Cam Lock clockwise.

You are now ready to assemble the KD unit.

## ! WARNING



 
**Children have died from furniture tip-over.  
To reduce the risk of furniture tip-over:**

- ALWAYS install tip-over restraint provided.
- FOR use with televisions weighing 70 lbs or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


**Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.**

## Parts and Hardware List


Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

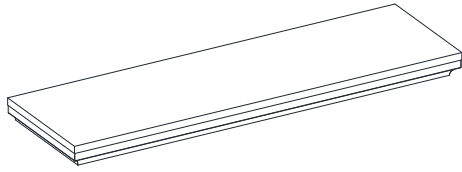


A- Top Panel (Qty. 1)

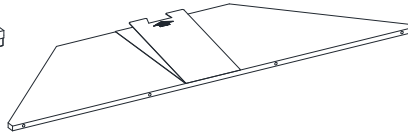 


B- Top Corner Extension (Qty. 1)

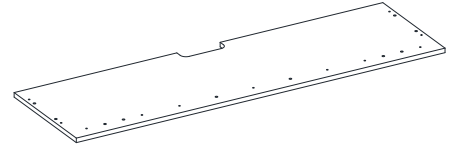 


C- Media Shelf (Qty. 1)

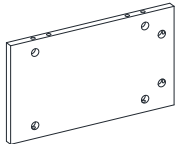 


D- Upper Side Panel (Qty. 2)

 


E- Upper Left Side Molding (Qty. 1)

 


F- Upper Right Side Molding (Qty. 1)

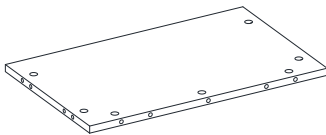 


G- Lower Side Panel (Qty. 2)

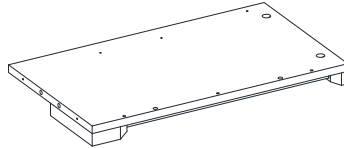 


H- Lower Left Side Molding (Qty. 1)

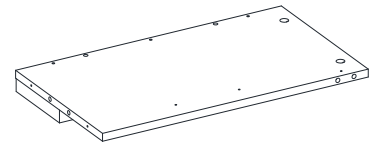 


I- Lower Right Side Molding (Qty. 1)

 


J- Upper Left Partition Panel (Qty. 1)

 


K- Upper Right Partition Panel (Qty. 1)

 

L- Middle Crossbar (Qty. 1)

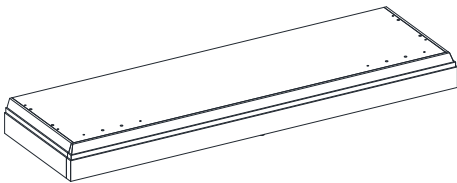 


M- Base (Qty. 1)

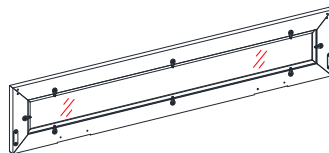 


N- Barrister Door (Qty. 1)



 O- Wood Door Insert (Qty. 1)

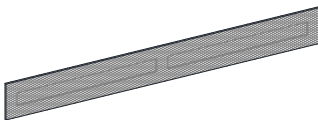

P- Speaker Grill (Qty. 1)

 


Q- Long Corner Support (Qty. 1)




R- Short Corner Support (Qty. 1)



 S- Magnetic Catch Holder (Qty. 2)

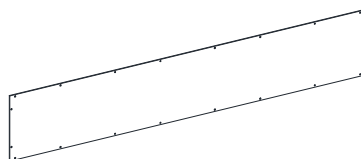


T- Back Panel (Qty. 1)

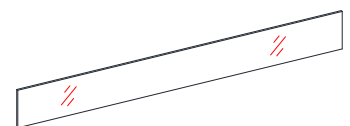 


U- Glass Door Insert (Qty. 1)  
(Pre-attached)

## Parts and Hardware List

 
Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

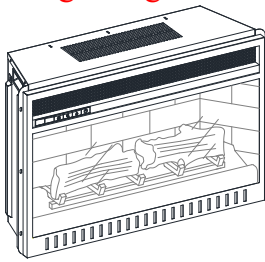


Fireplace Insert  
(Qty. 1)

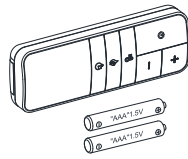 


Remote Control with Battery  
(Qty. 1)

 

 (1) Cam Lock  
(Qty. 41+2 extra)

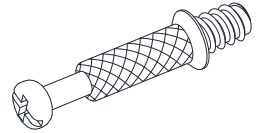

 (2) Cam Bolt  
(Qty. 41+2 extra)



(3) M8 x 30 mm Long Wood Dowel  
(Qty. 50+2 extra)



 
(4) M3.5 x 12 mm Screw  
(Qty. 4+1 extra)



(5) M3.5 x 15 mm Screw  
(Qty. 8+1 extra)




(6) M3 x 15 mm Pan Head Screw  
(Qty. 4+1 extra)




(7) M3.5 x 15 mm  
Washer Head Screw  
(Qty. 20+1 extra)



 
(8) M4 x 25 mm  
Screw  
(Qty. 3+1 extra)



 
(9) M4 x 50 mm  
Screw  
(Qty. 8+1 extra)



 
(10) M8 x 20 mm  
Short Wood Dowel  
(Qty. 2 +1 extra)



 
(11) Magnetic Catch  
(Qty. 2)



 (12) Handle  
(Qty. 2)



 
(13) Mending Plate  
(Qty. 2)



(14) Hook  
(Qty. 2)



 (15) Metal Bracket  
(Qty. 2)



(16) Connector  
(Qty. 5)



 
(17) Floor Leveler  
(Qty. 2)



(18) Acrylic Stopper  
(Qty. 1)




(19) 1/4" x 12 mm Bolt  
(Qty. 10+1 extra)



(20) 1/4" x 32 mm Bolt  
(Qty. 2+1 extra)



 (21) Lock Washer  
(Qty. 2+1 extra)

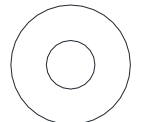

(22) Flat Washer  
(Qty. 2+1 extra)



 
(23) M3.5 x 12 mm Pan Head Screw  
(Qty. 4+1 extra)



Glue  
(Qty. 2)




Touch-up Pen  
(Qty. 1)



Tipping Restraint Hardware Kit (Qty. 2)  
(Included in plastic bag)


**Tools required (not included):** Phillips screwdriver, stud finder, pencil, tape measure, power drill and 1/8" drill bit.

## Assembly Instructions

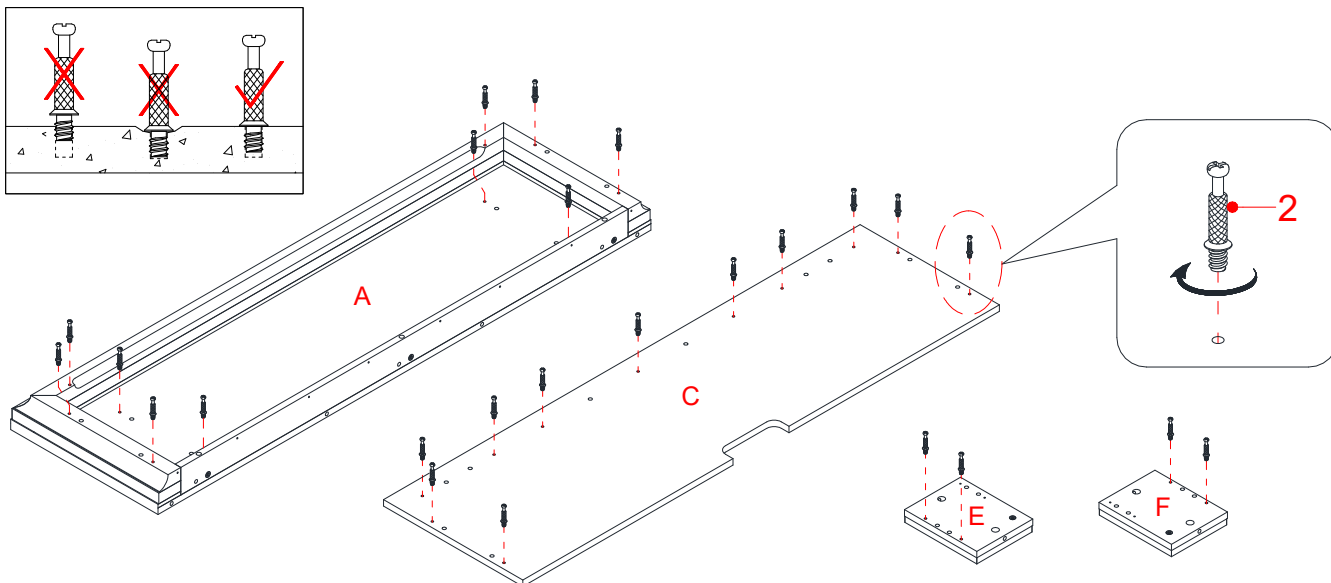 


**NOTE: DO NOT** fully tighten all cam locks and bolts until you finish assembling all parts. Once assembled, go back and fully tighten all cam locks and bolts.

 1. Unpack the unit and confirm that you have all the hardware and required parts. Assemble the unit on a carpeted floor or the empty carton to avoid any scratch.
2. Securely screw the Cam Bolts (2) into the designated small holes on the Top Panel (A), Media Shelf (C) and Upper Side Moldings (E and F) with a Phillips screwdriver. Do Not over tighten the cam bolts.

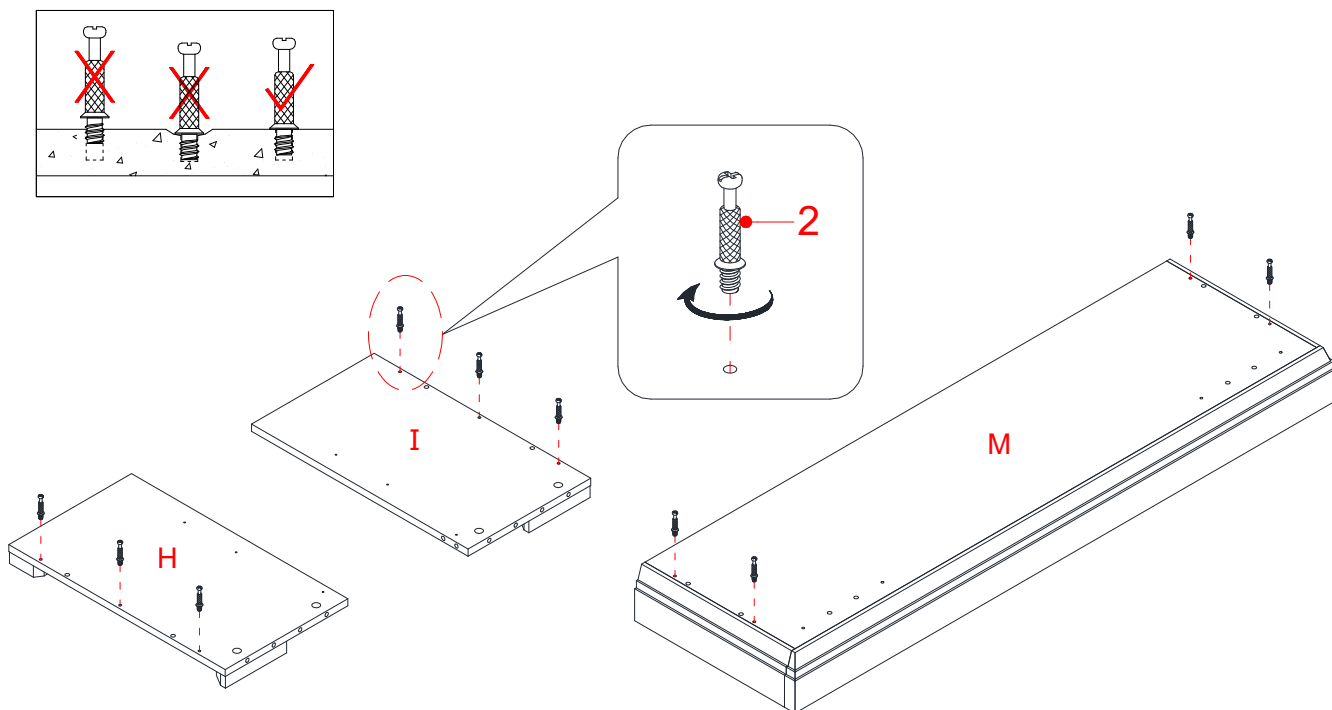


3. Continue to screw the Cam Bolts (2) into the designated small holes on the Lower Side Moldings (H and I) and Base (M).

## Assembly Instructions

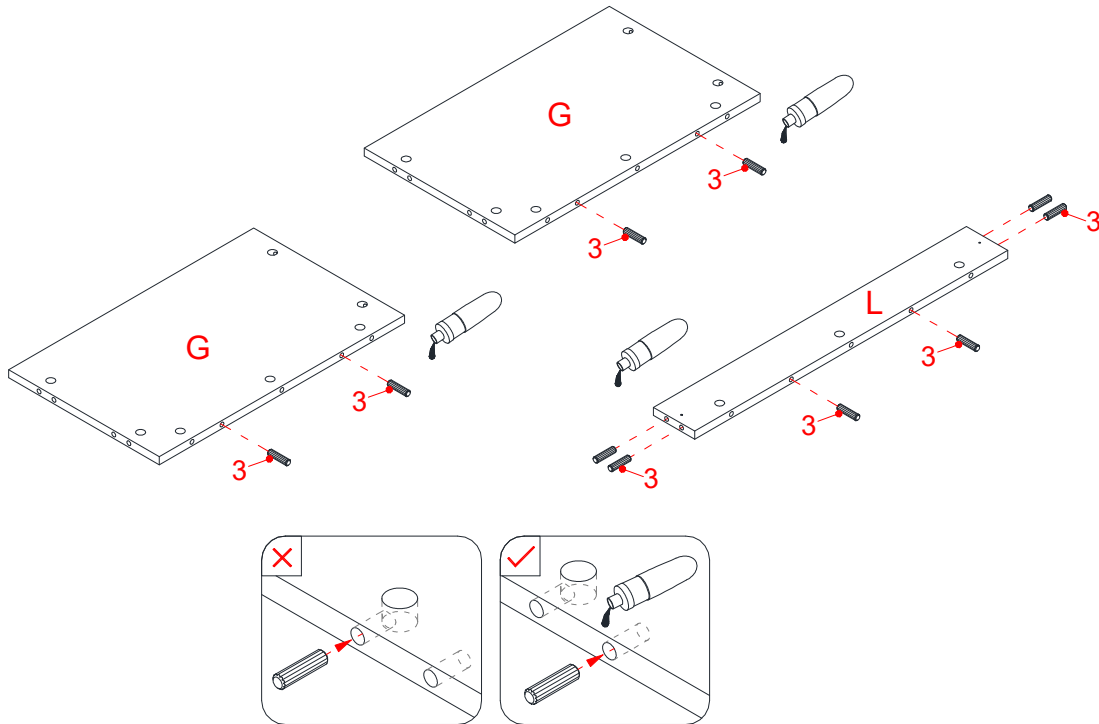 


 4. Glue the Long Wood Dowels (3) into the inner holes on the Lower Side Panels (G) and Middle Crossbar (L) as shown.

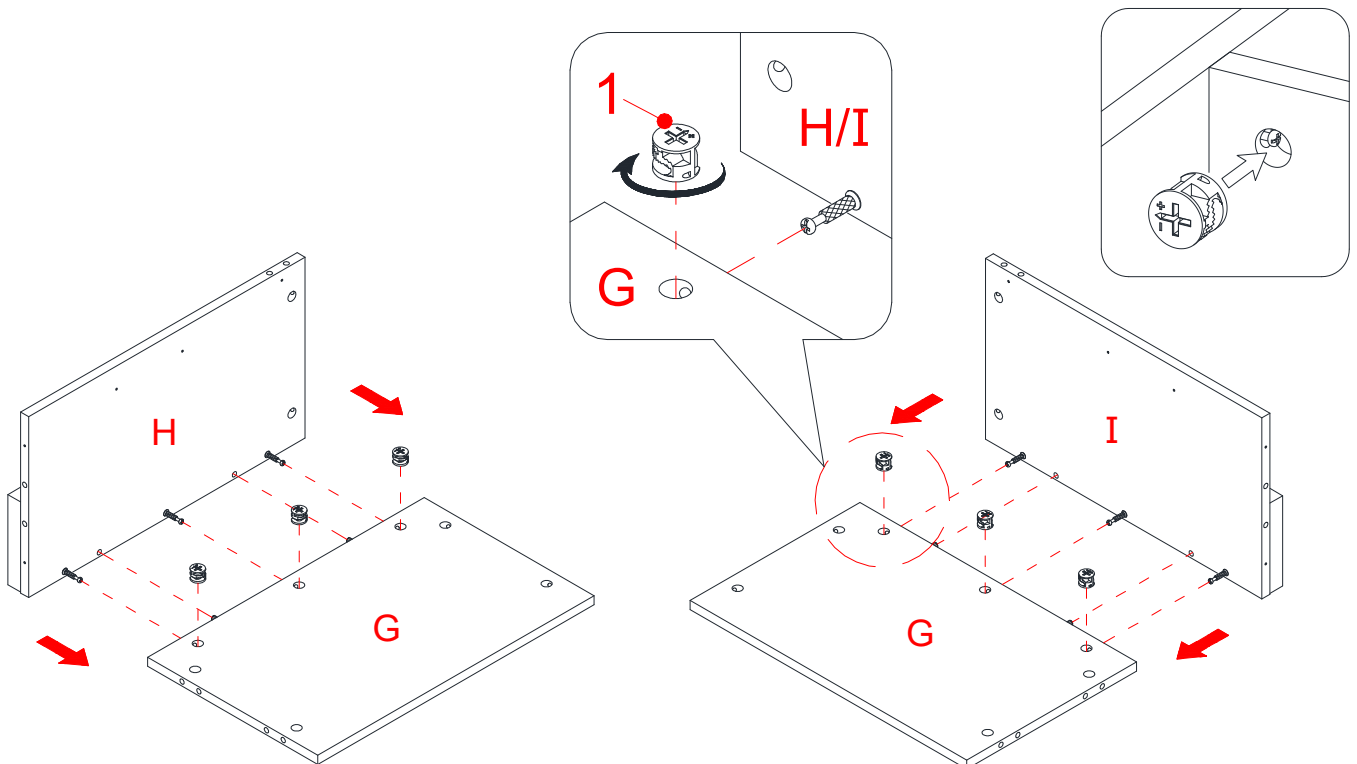


5. Attach one Lower Side Panel (G) to the Lower Left Side Molding (H) by engaging three Cam Locks (1). (Refer to page 2 on Cam Lock system operation supplement).
6. Repeat to attach the other Lower Side Panel (G) to the Lower Right Side Molding (I).

## Assembly Instructions

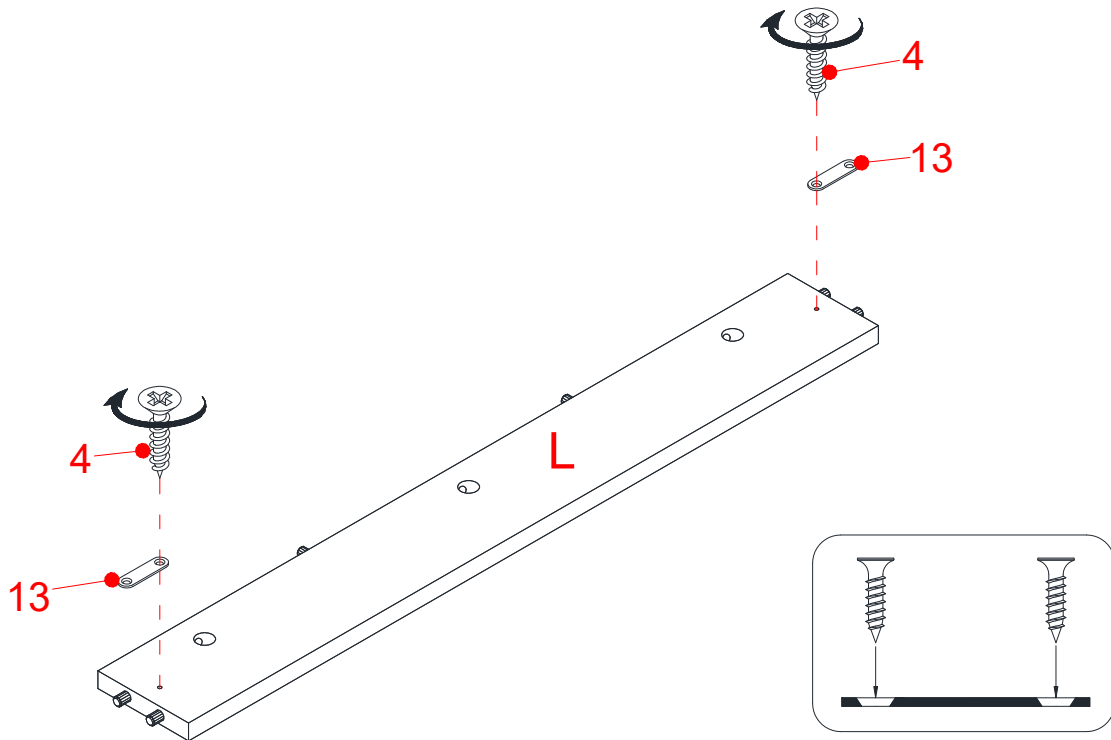 


 7. Using the pilot holes as a guide, attach two Mending Plates (13) to the Middle Crossbar (L) with one 12 mm Screw (4) per plate.

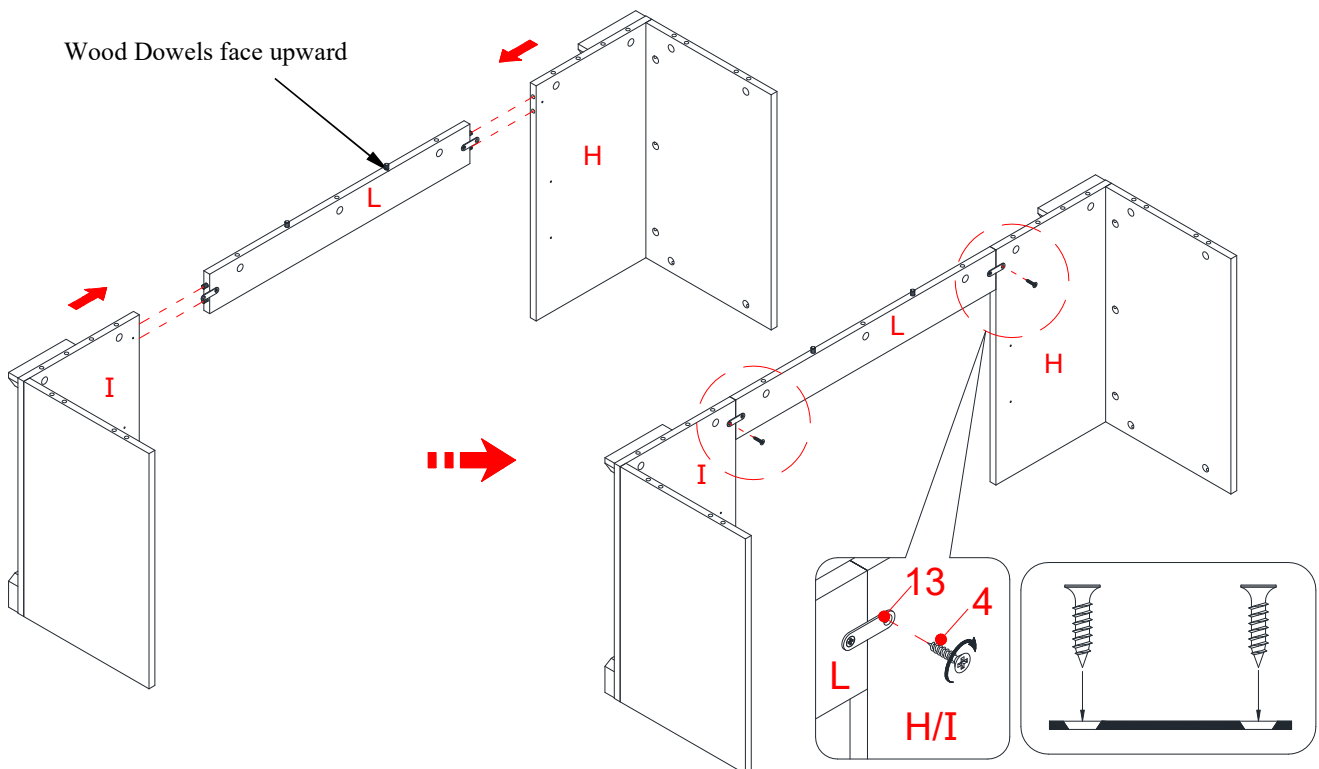


8. Attach the Middle Crossbar (L) between the Lower Side Moldings (H and I) by inserting two 12 mm Screws (4) through the installed Mending Plates (13) and screw into the Lower Side Moldings (H and I).

## Assembly Instructions

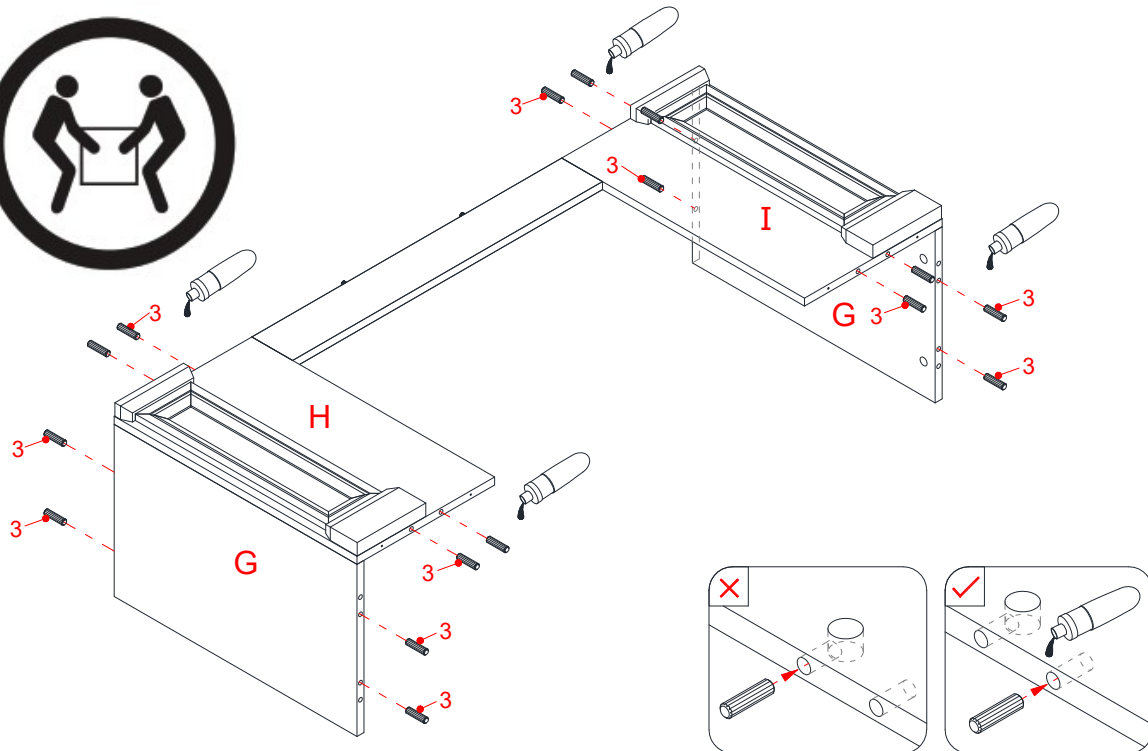 

 
9. Ask for assistance to lay down the assembly at its back edge.
10. Glue the Long Wood Dowels (3) into the inner holes on the Lower Side Panels (G) and Lower Side Moldings (H and I) as shown.

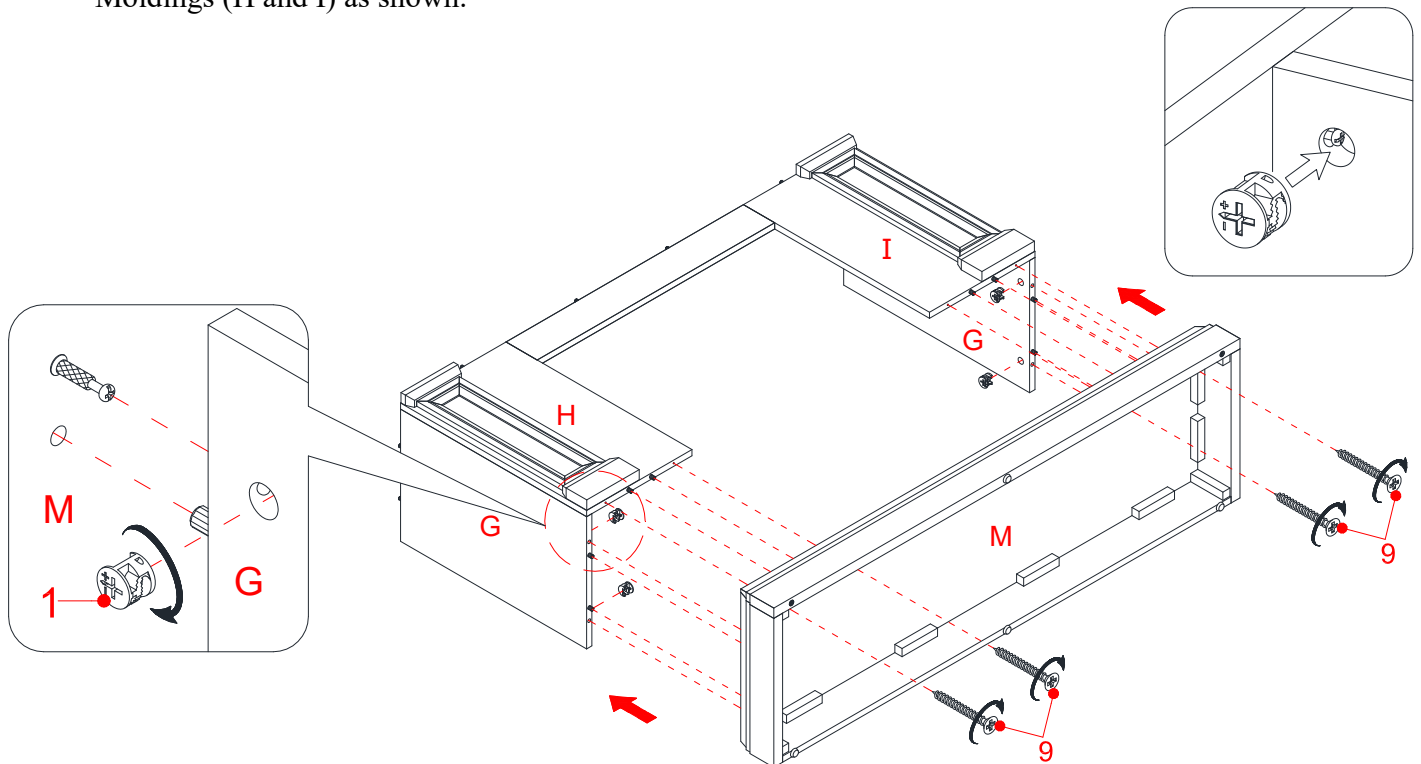


11. Align and attach the Base (M) to the Lower Side Panels (G) by engaging four Cam Locks (1).
12. Continue to fasten the Base (M) to the Lower Side Moldings (H and I) with four 50 mm Screws (9).



## Assembly Instructions

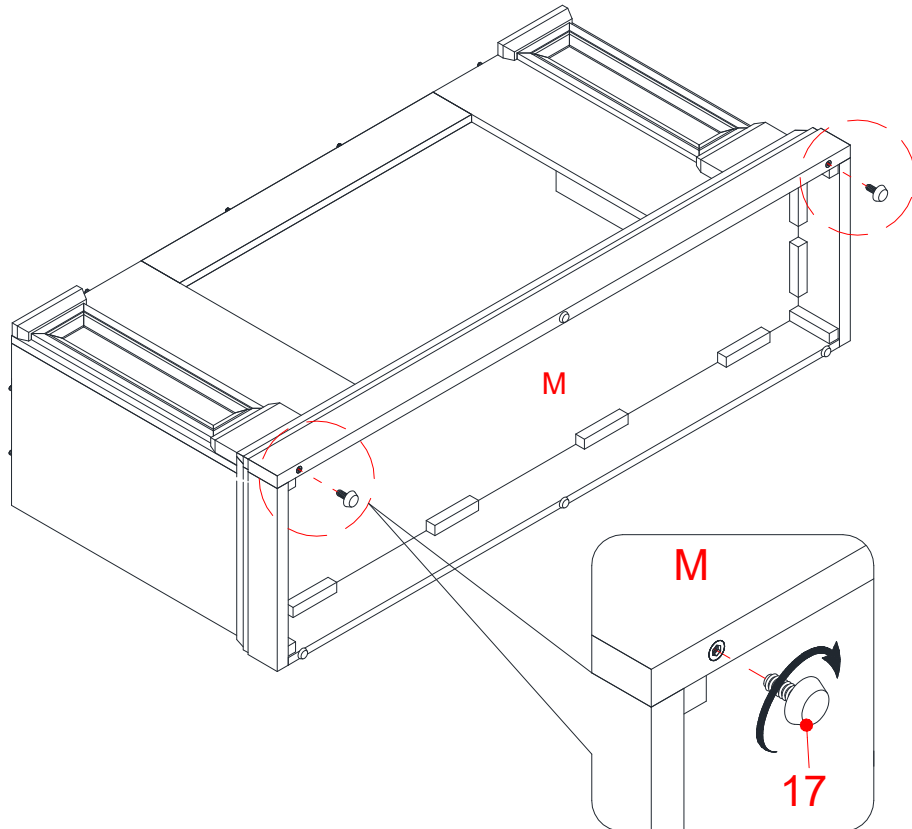 

 
13. Screw two Floor Levelers (17) into the threaded holes on the Base (M).

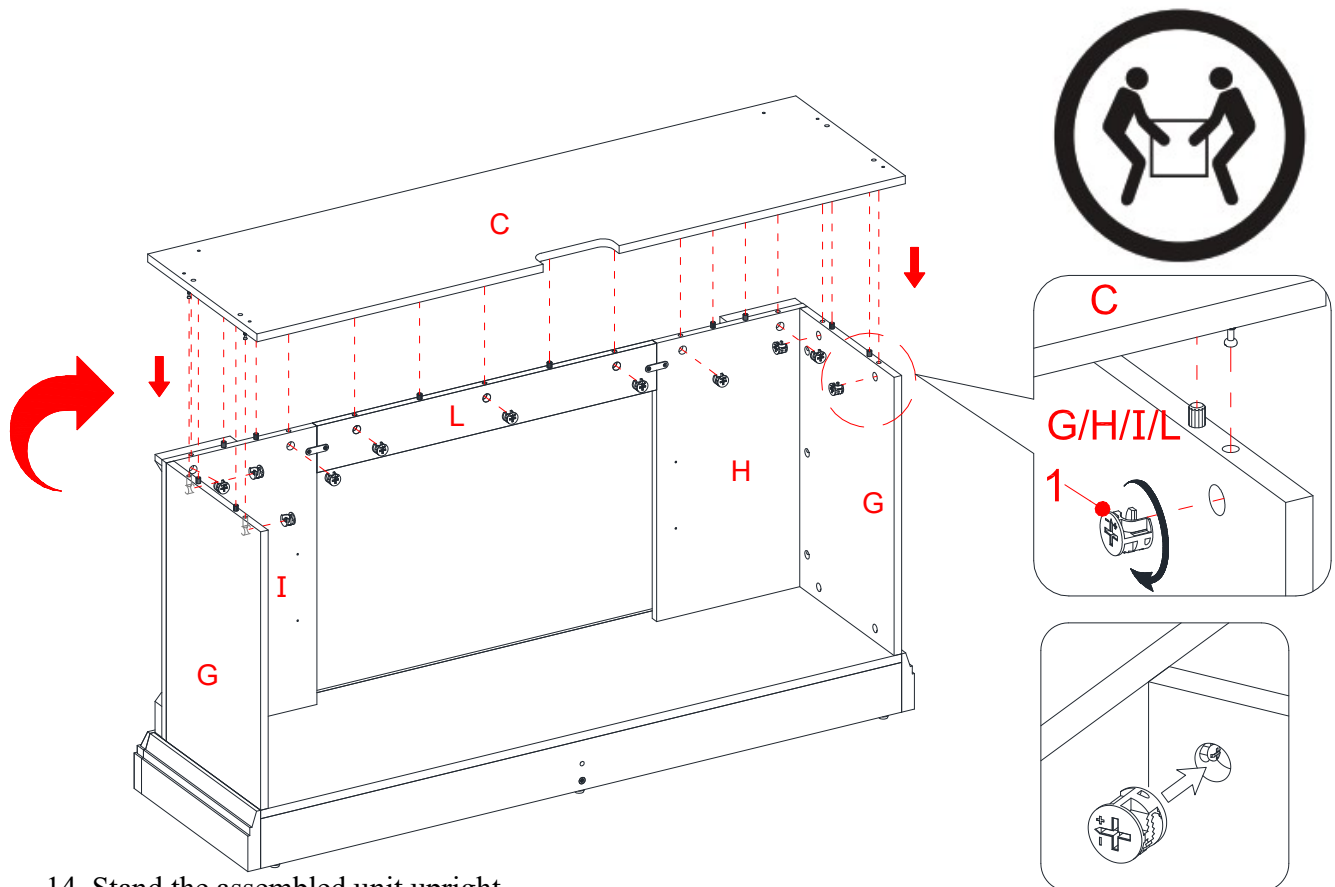


14. Stand the assembled unit upright.

15. Place the Media Shelf (C) onto the inserted wood dowels on the vertical panels (G, H and I) and Middle Crossbar (L) properly and fasten it in place by engaging eleven Cam Locks (1).

## Assembly Instructions

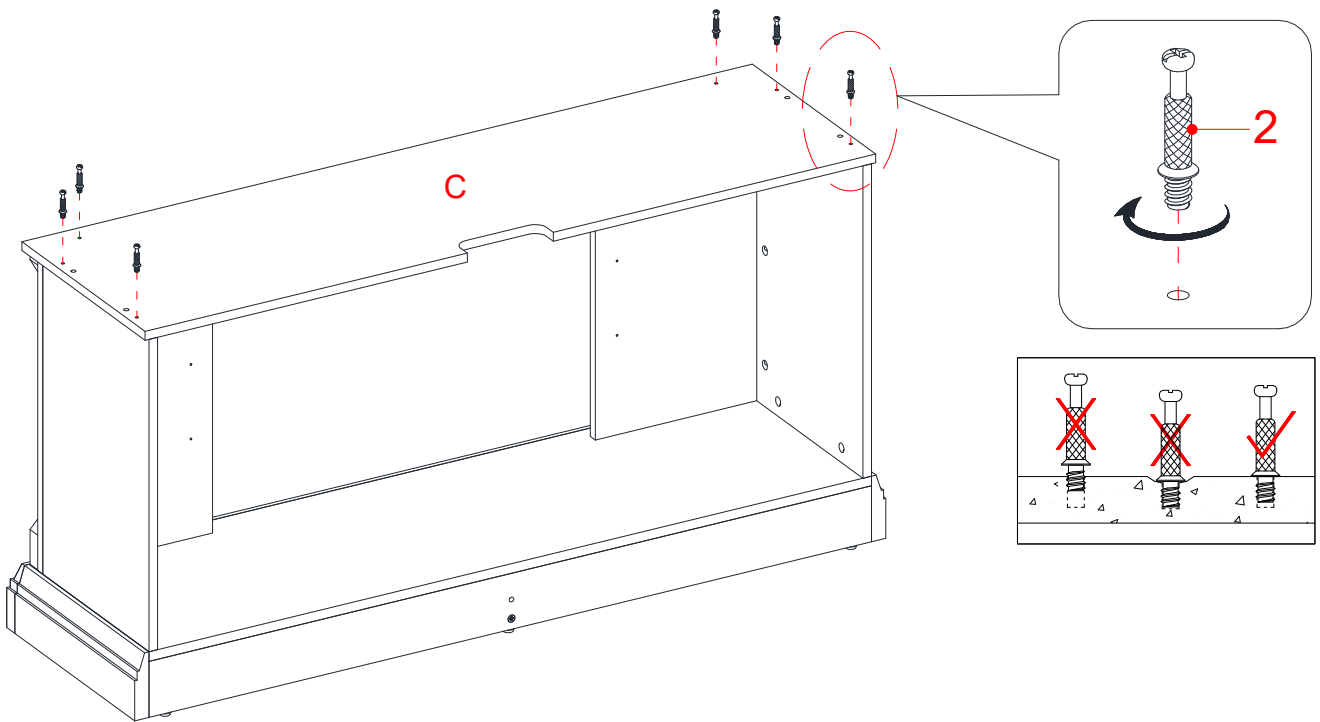 


 16. Securely screw six Cam Bolts (2) into the designated small holes on the Media Shelf (C) using a Phillips screwdriver.

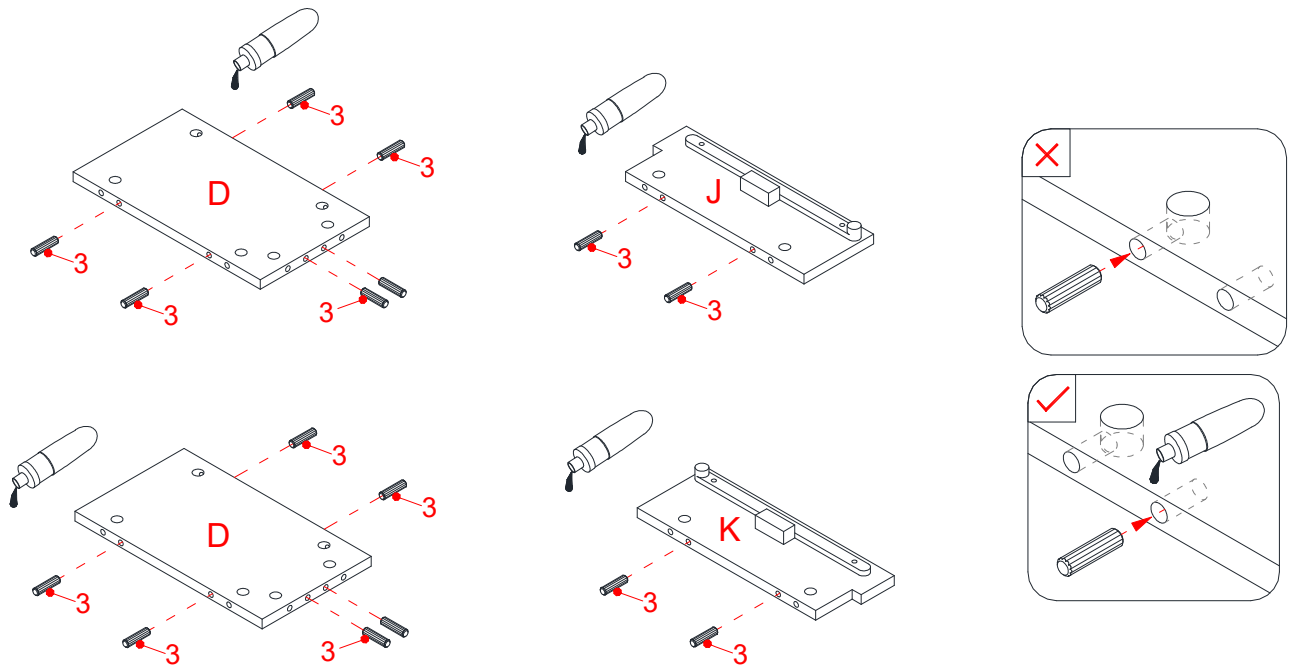


17. Glue the Long Wood Dowels (3) into the inner holes on the Upper Side Panels (D) and Upper Partition Panels (J and K) as shown.

## Assembly Instructions

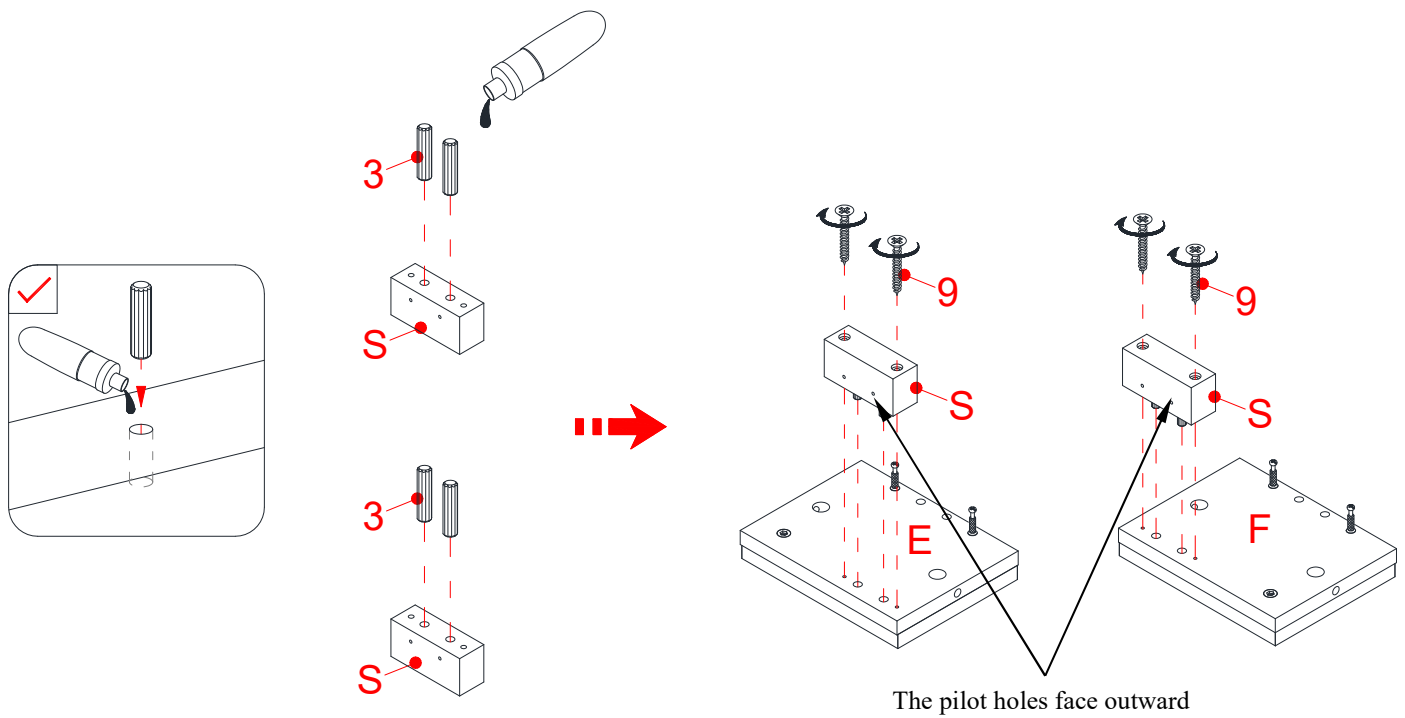 


18. Glue two Long Wood Dowels (3) into the inner holes on each Magnetic Catch Holder (S).

 19. Attach the Magnetic Catch Holders (S) to the Upper Side Moldings (E and F) respectively with two 50 mm Screws (9).

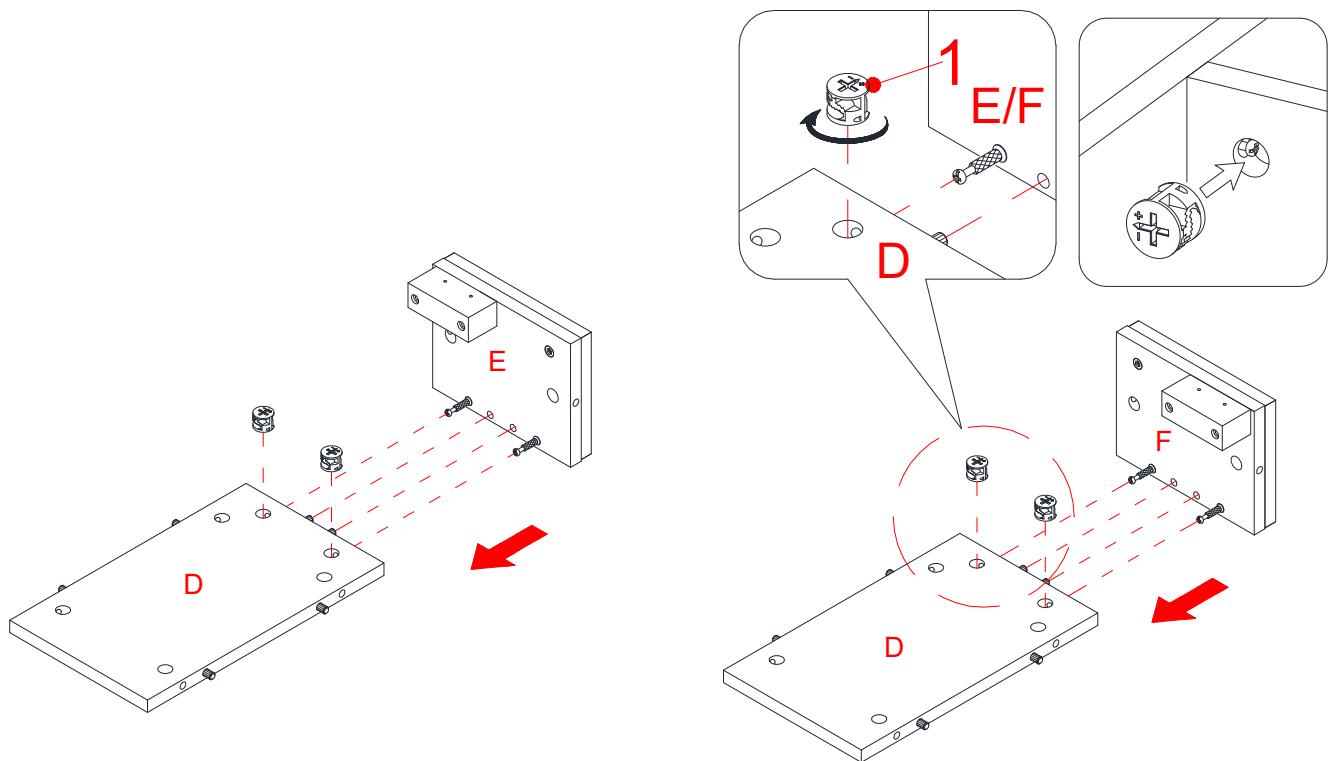


20. Attach the Upper Side Panels (D) to the Upper Side Moldings (E and F) by engaging two Cam Locks (1) in each.

## Assembly Instructions

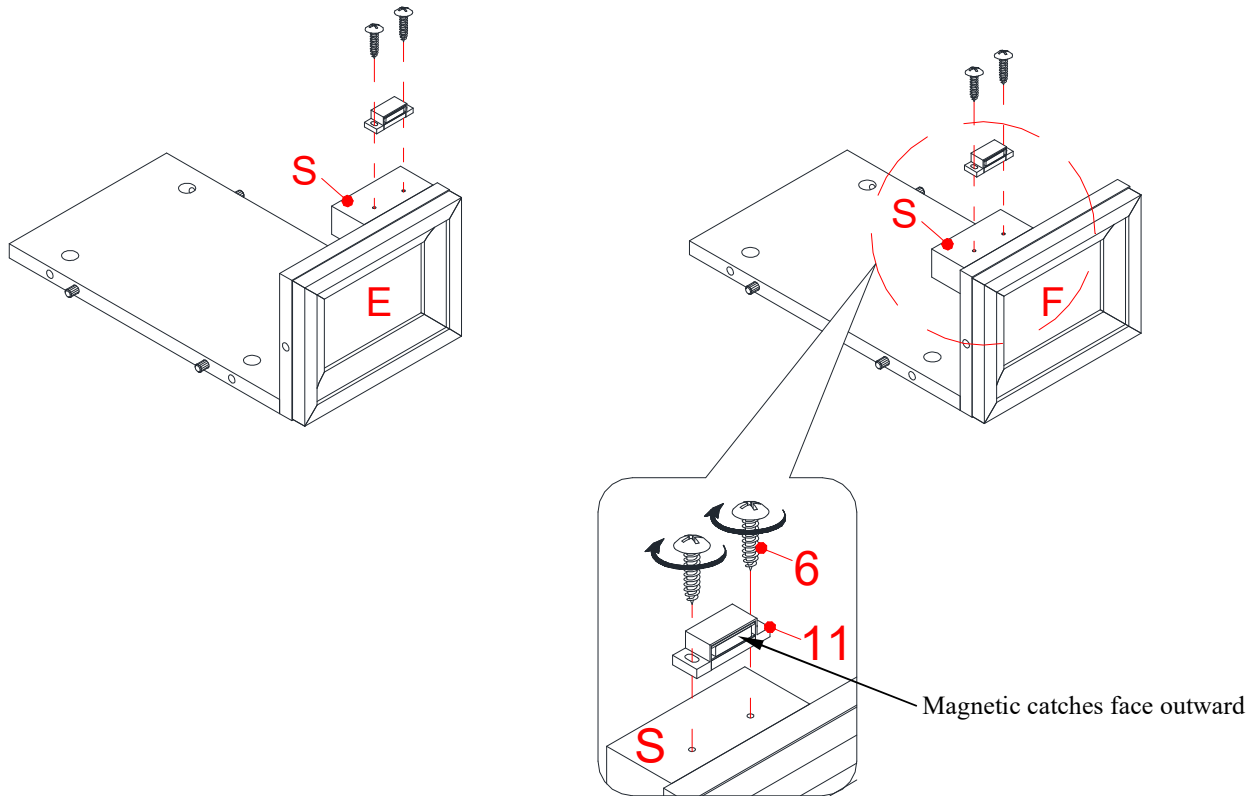 


 21. Using the pilots holes as guide, fasten the Magnetic Catches (11) to the Magnetic Catch Holders ( S) with four 15 mm Pan Head Screws (6).

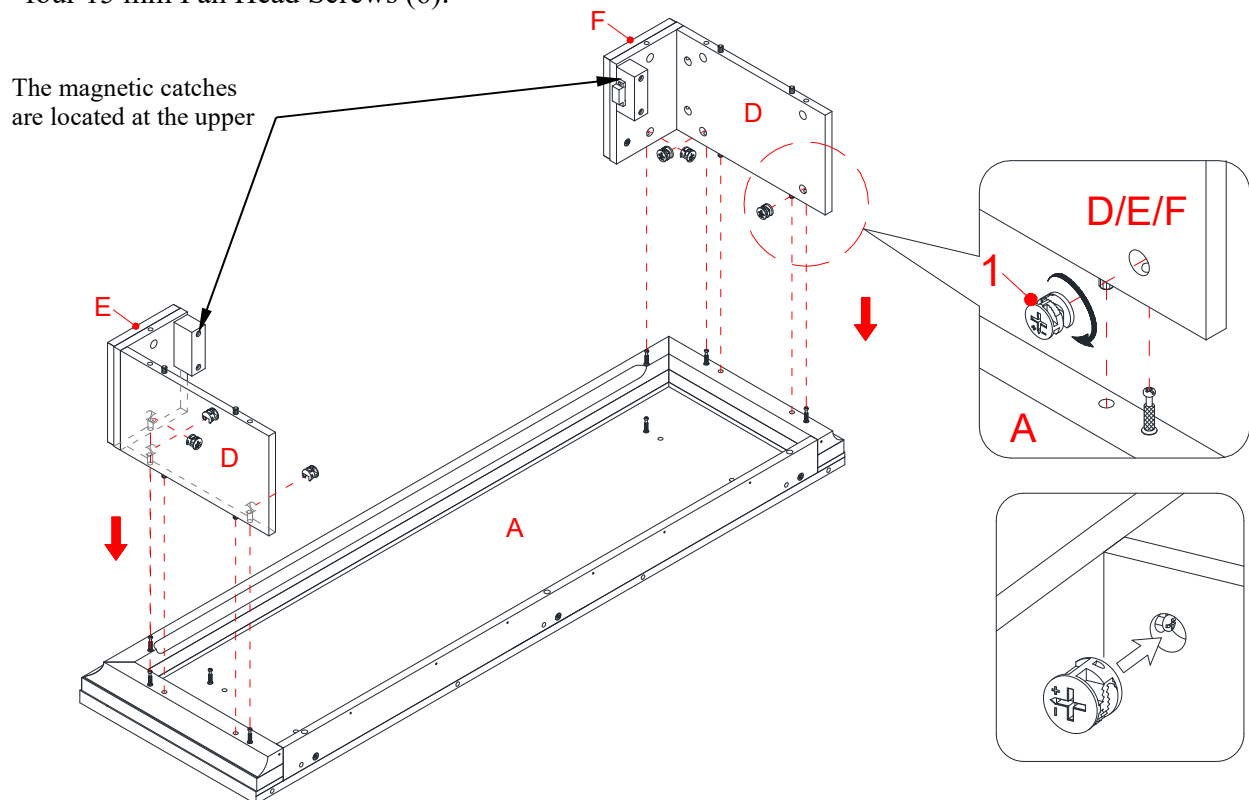


22. Align and attach the Upper Side Panels (D) and Upper Side Moldings (E and F) to the Top Panel (A) by engaging six Cam Locks (1).

## Assembly Instructions

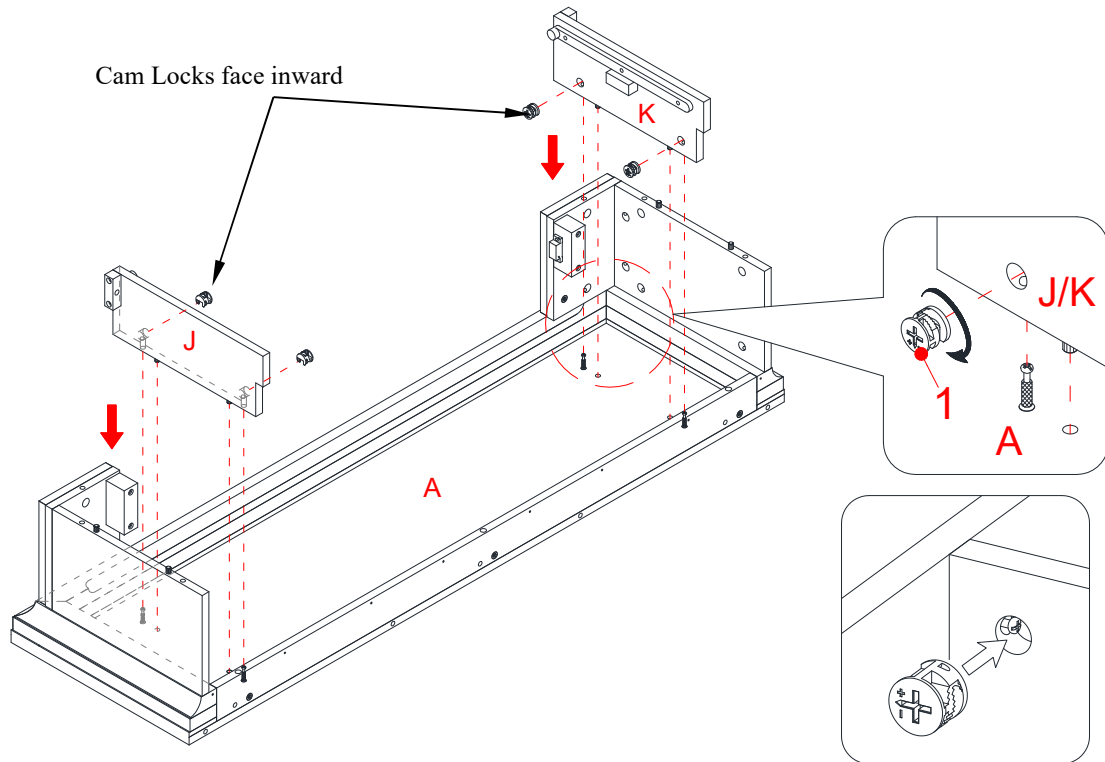 


23. Attach the Upper Partition Panels (J and K) to the Top Panel (A) by engaging four Cam Locks (1).

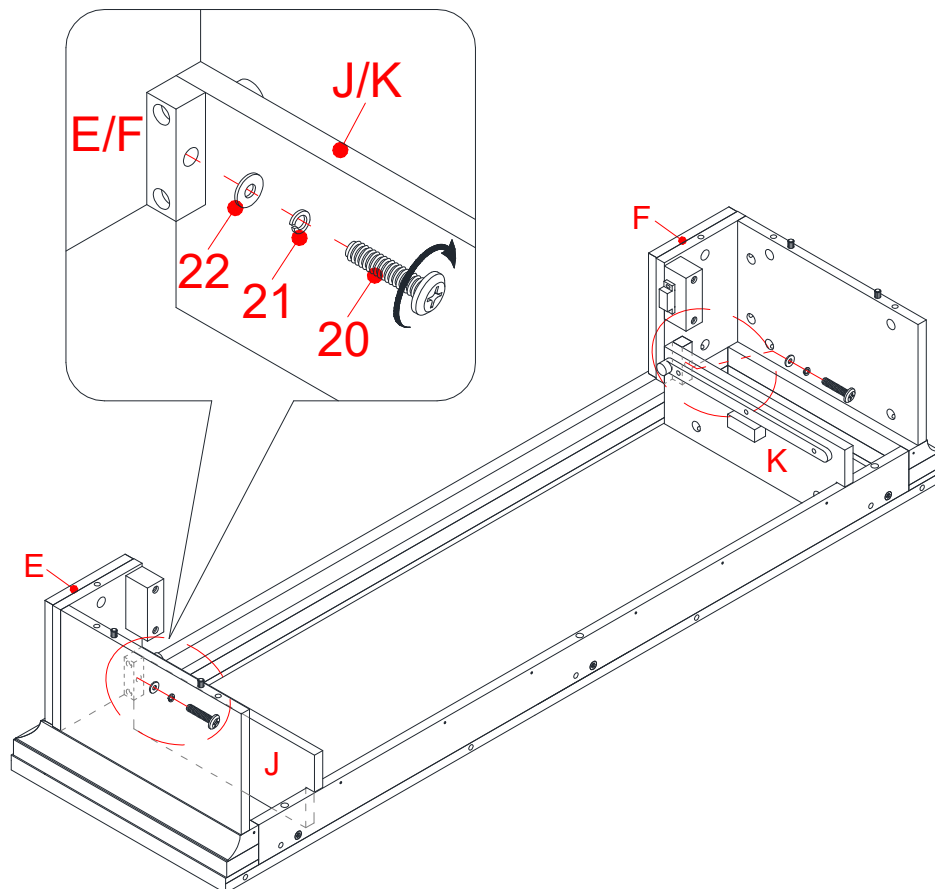 


24. Insert the 32 mm Bolts (20) with the Washers (21 and 22) through the cleats on the Upper Partition Panels (J and K) and screw into the Upper Side Moldings (E and F).

## Assembly Instructions

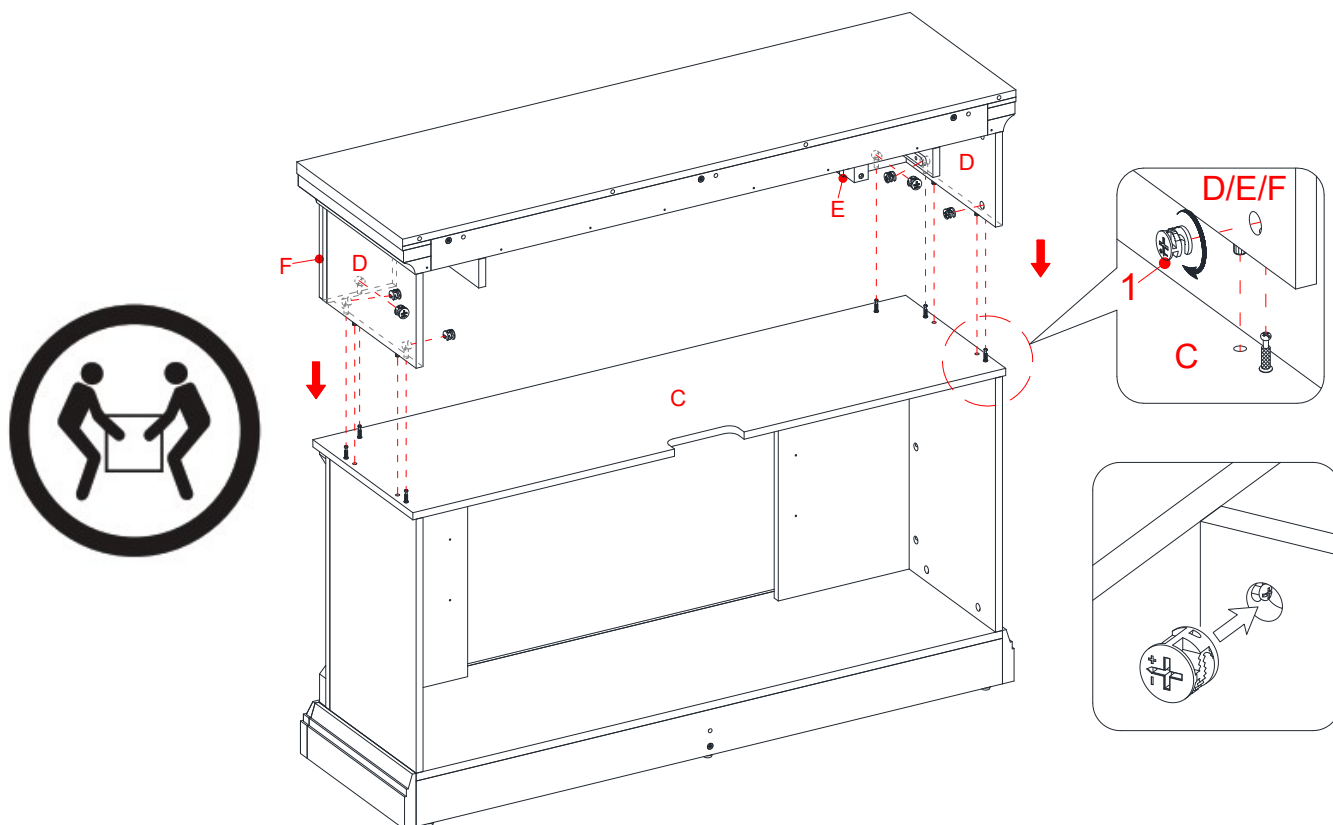 

 
25. Ask for assistance to position the previous assembly onto the Media Shelf (C) and attach it place by engaging six Cam Locks (1).

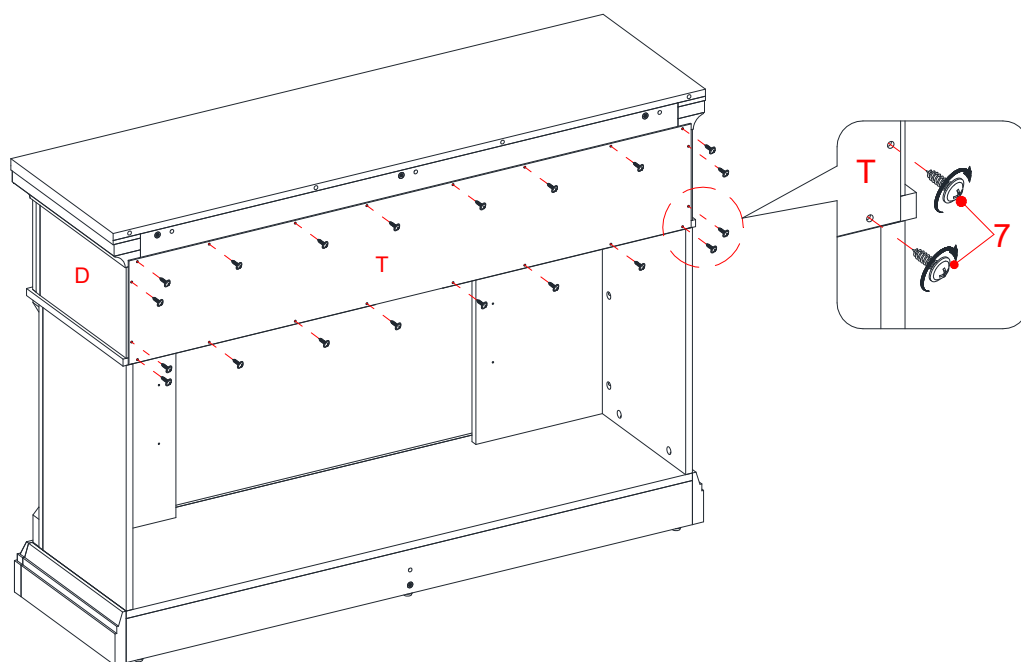


26. Now, go back and securely tighten all the cam locks and screws. Make sure that all the parts are tight and there are no gaps between the parts. This will help keep the unit square.
27. Pick up the Back Panel (T) and align the pre-drilled holes against the upper long edge with the pilot holes on the back rail of the Top Panel (A). Attach the Back Panel (T) in place with the provided 15 mm Washer Head Screws (7).

**NOTE:** We recommend attaching back panel with washer head screws at the corners first.

## Assembly Instructions

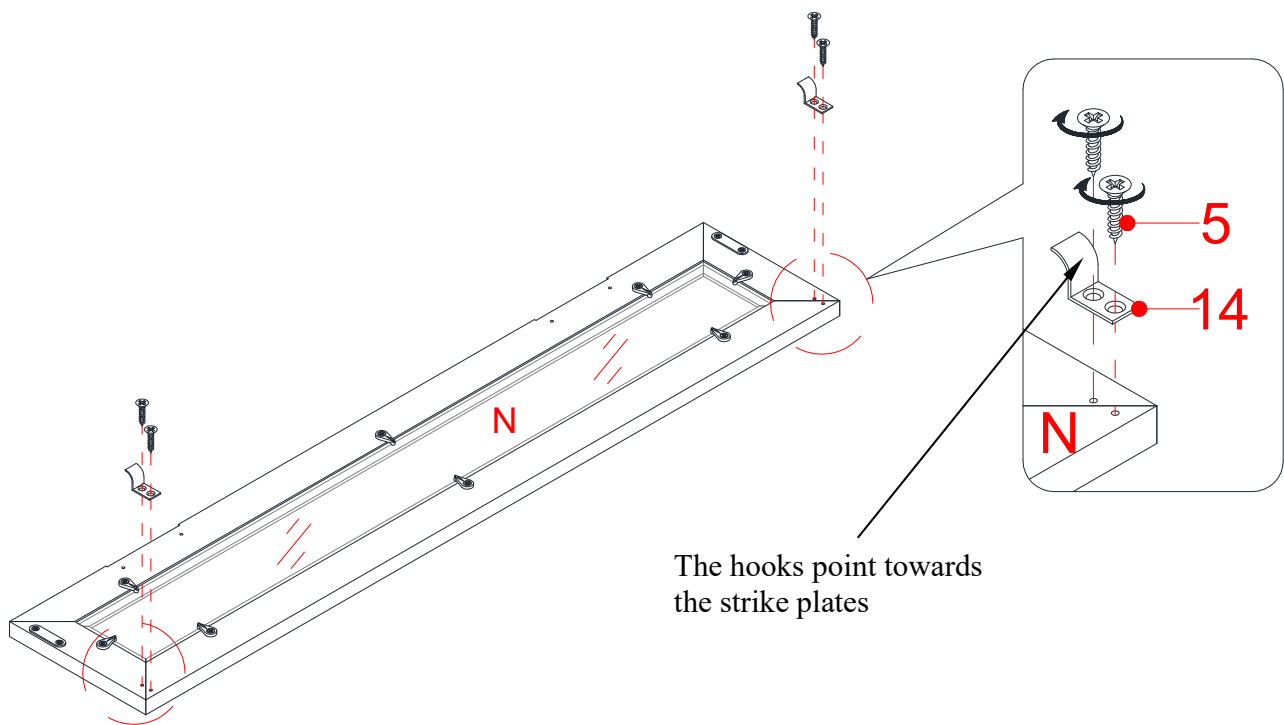 


 28. Using the pilot holes as a guide, fasten two Hooks (14) to the corners of the Barrister Door (N) with four 15 mm Screws (5) as shown.

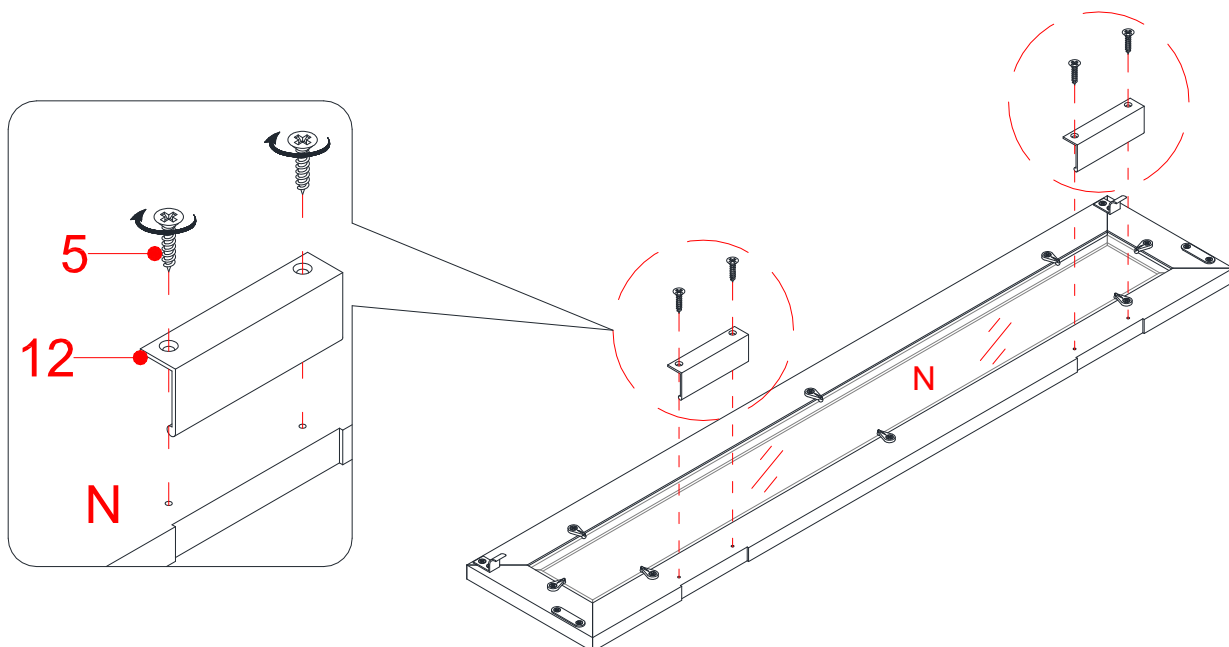


29. Attach two Handles (12) to the Barrister Door (N) with four 15 mm Screws (5).

## Assembly Instructions

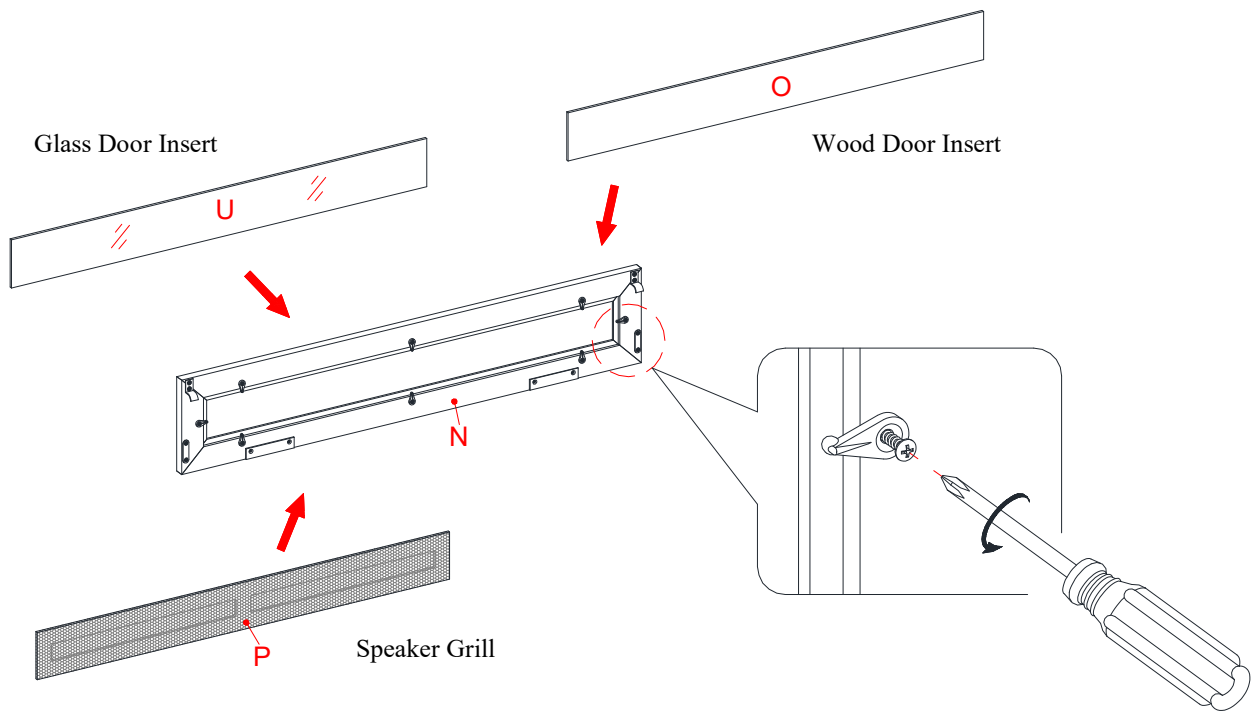 

**NOTE:** The barrister door is shipped with the Glass Door Insert (U). You can keep the door as it is or interchange with the Wood Door Insert (O) or Speaker Grill (P) depending on your configuration.

 
30. To change the configuration, loosen the screws on the inside of Barrister Door (N) and rotate the clips to remove the door insert. Replace with the desired door insert or speaker grill, then rotate clips to secure the panel or speaker grill within the door frame and tighten screws.

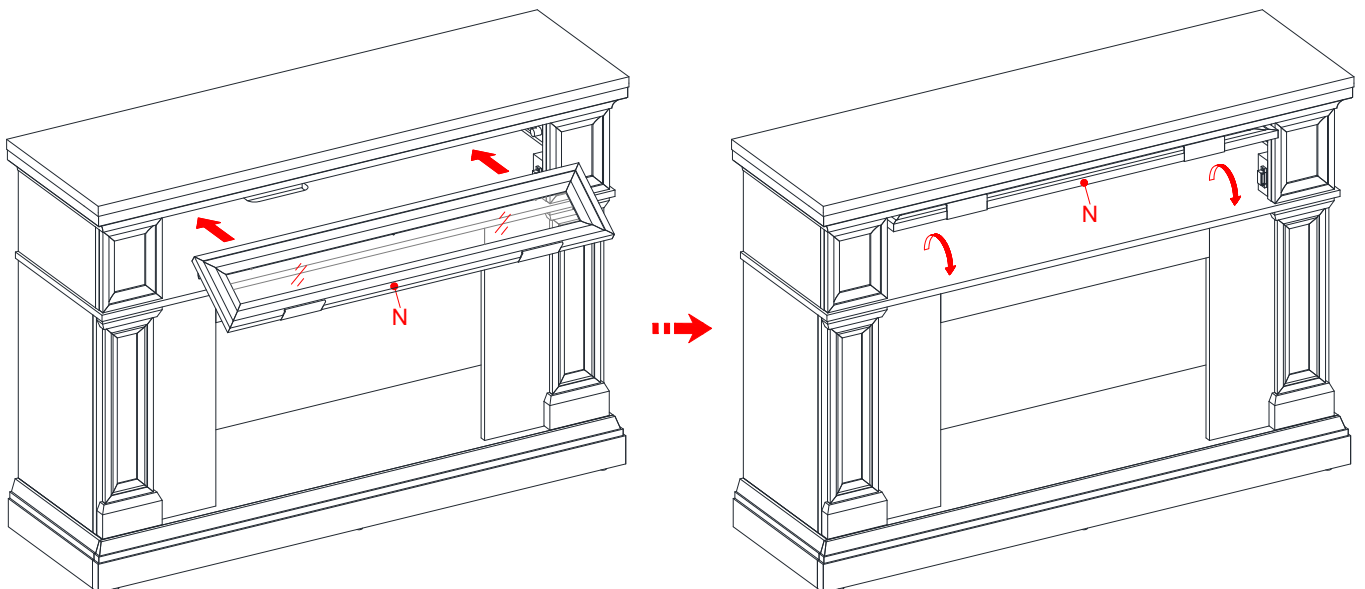


31. Hook the Barrister Door (N) onto the pre-attached plastic slides on the Upper Partition Panels (J and K) and tuck it underneath the Top Panel (A) in one smooth motion.



## Assembly Instructions

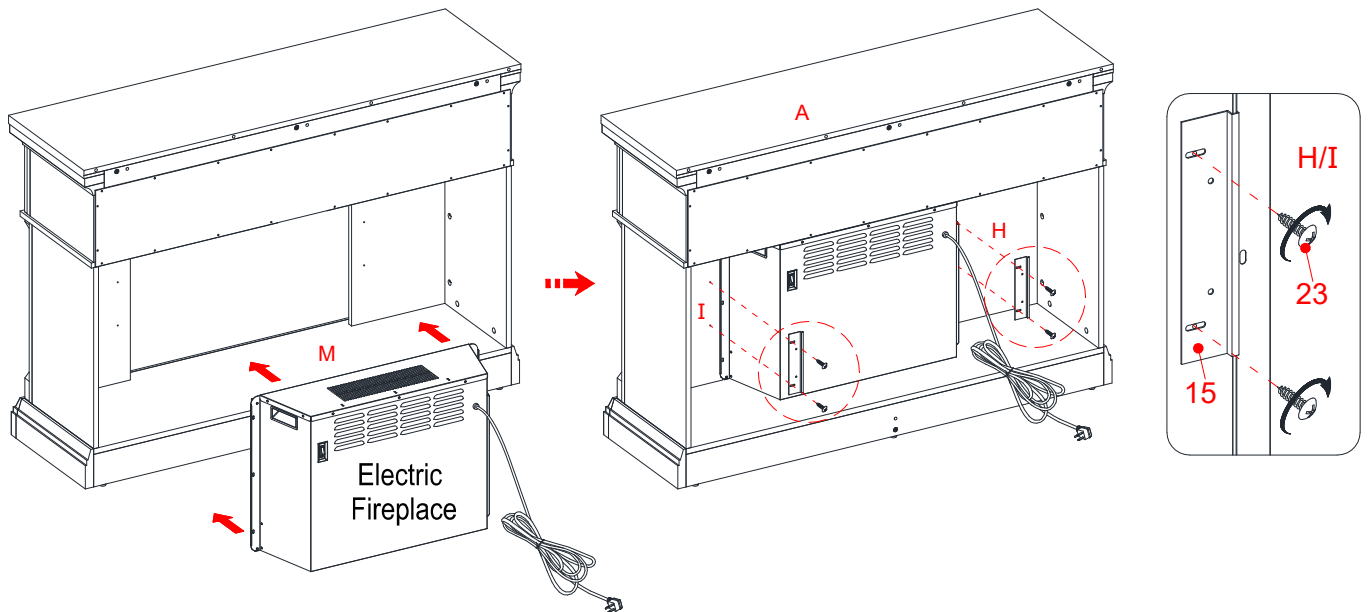 


 32. Lift the fireplace insert carefully into the back of the assembled mantel and center it in the opening. **DO NOT** drag the insert across the Base (M) as it may scratch the unit.
33. Using the pilot holes as a guide, fit two Metal Brackets (15) to the side plates of the fireplace insert and fasten them into place with four 12 mm Pan Head Screws (23).

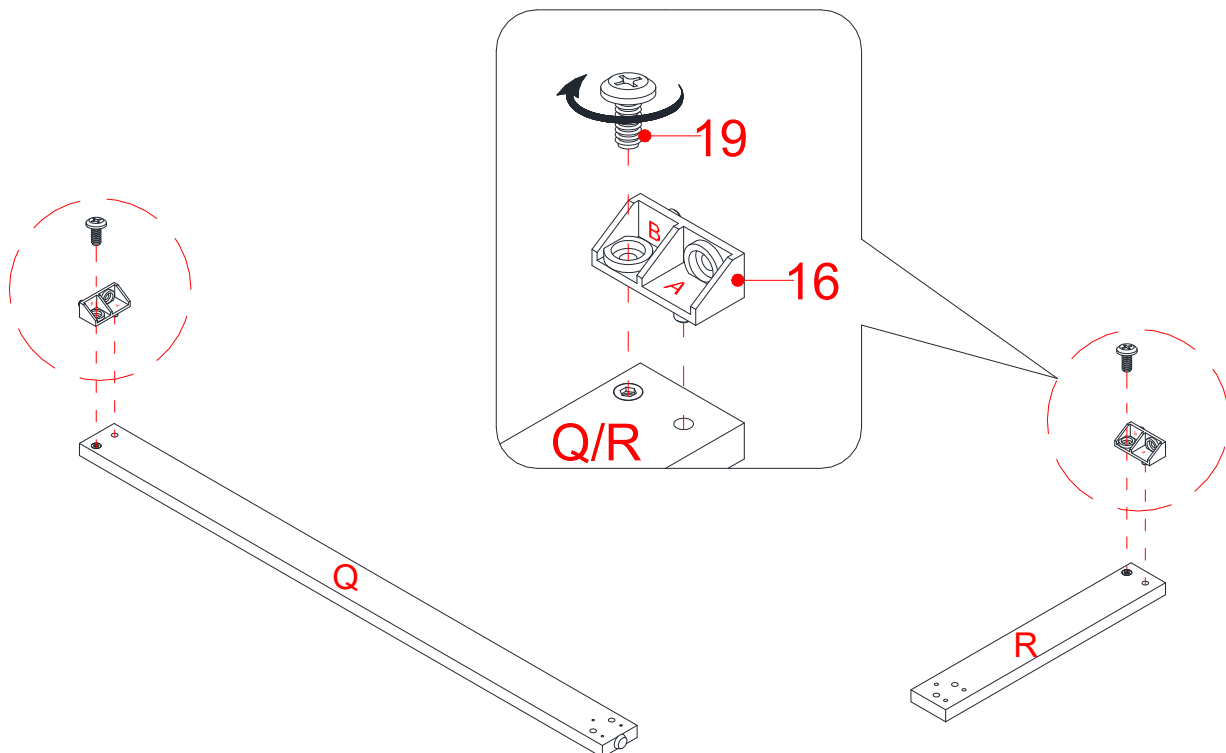


34. Attach one Connector (16) to the end of each Corner Support (Q and R) with one 12 mm Bolt (19) as shown.

## Assembly Instructions

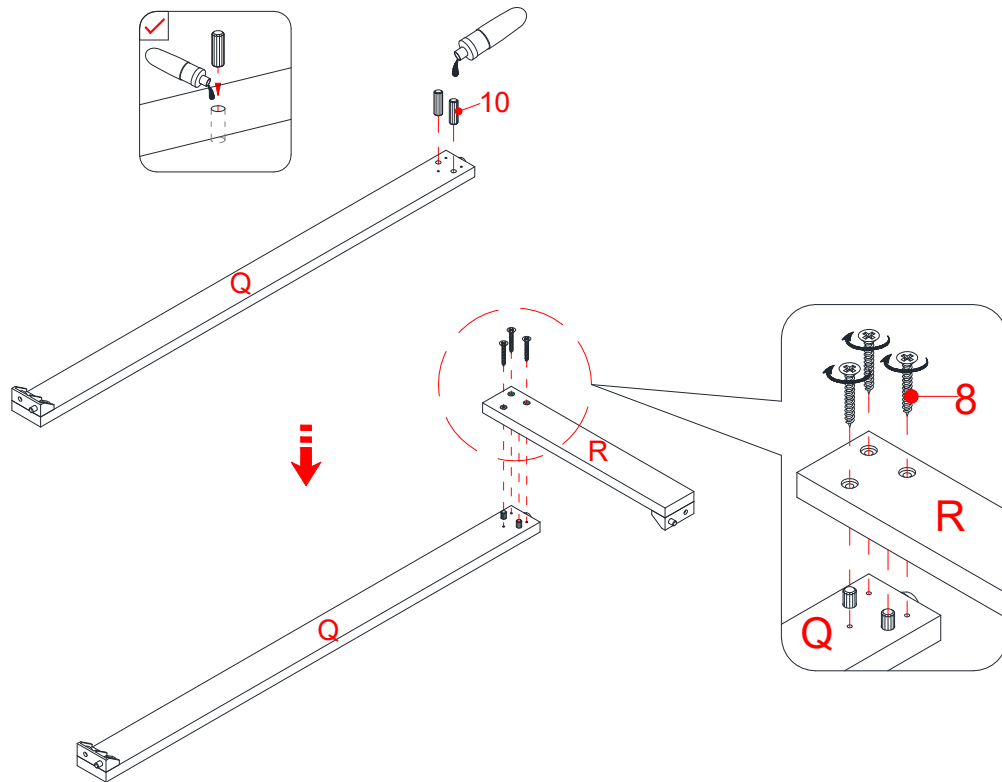 

35. Glue two Short Wood Dowels (10) into the large holes on the Long Corner Support (Q).

 
36. Attach the Short Corner Support (R) to the Long Corner Support (Q) with three 25 mm Screws (8). Tightly fasten the screws with a Philips screwdriver.

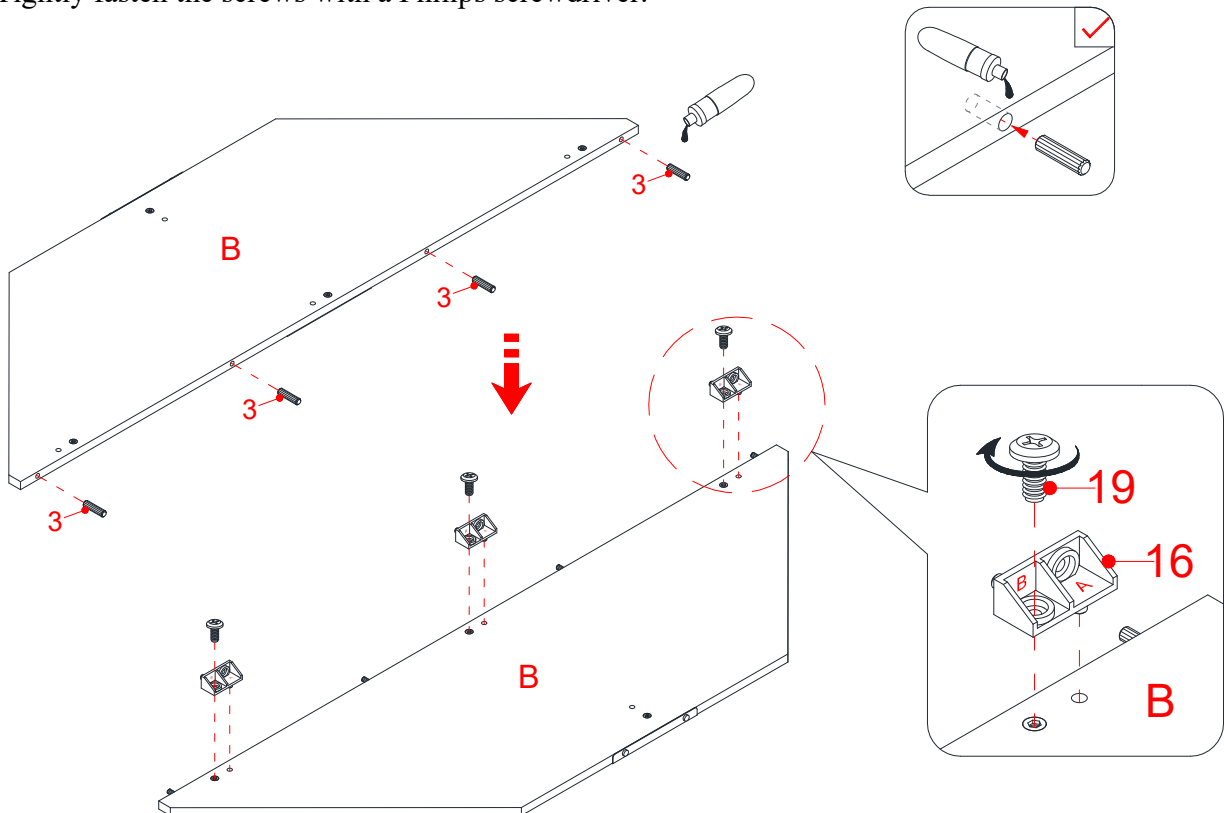


37. Glue the Long Wood Dowels (3) into the inner holes on the Top Corner Extension (B) as shown.

38. Attach three Connectors (16) to the Top Corner Extension (B) with three 12 mm Bolts (19).

## Assembly Instructions

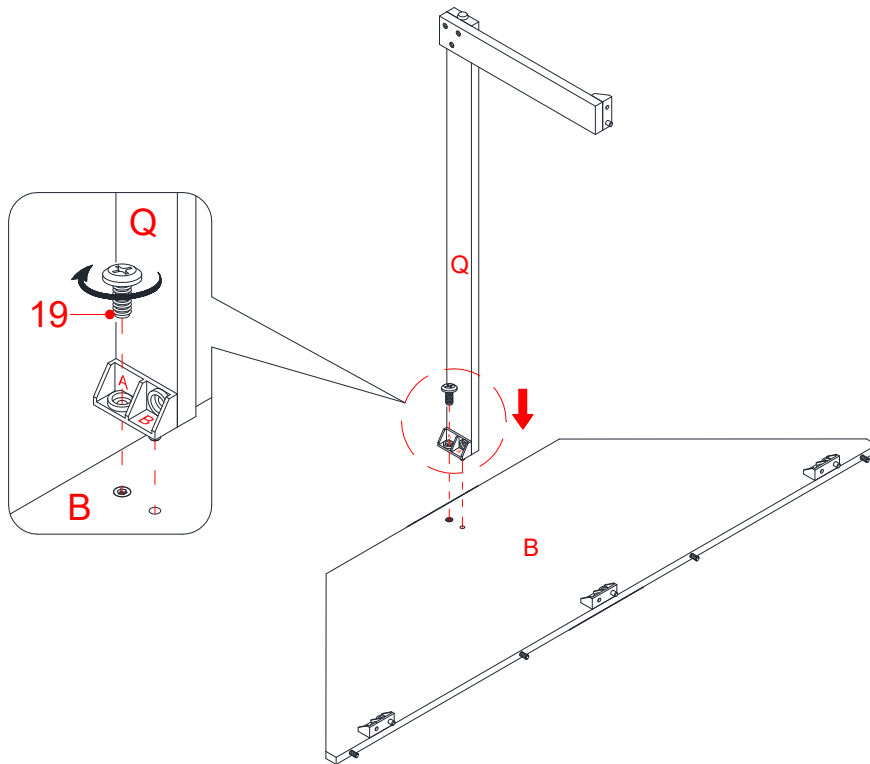 


39. Attach the Long Corner Support (Q) to the Top Corner Extension (B) with one 12 mm Bolt (19).

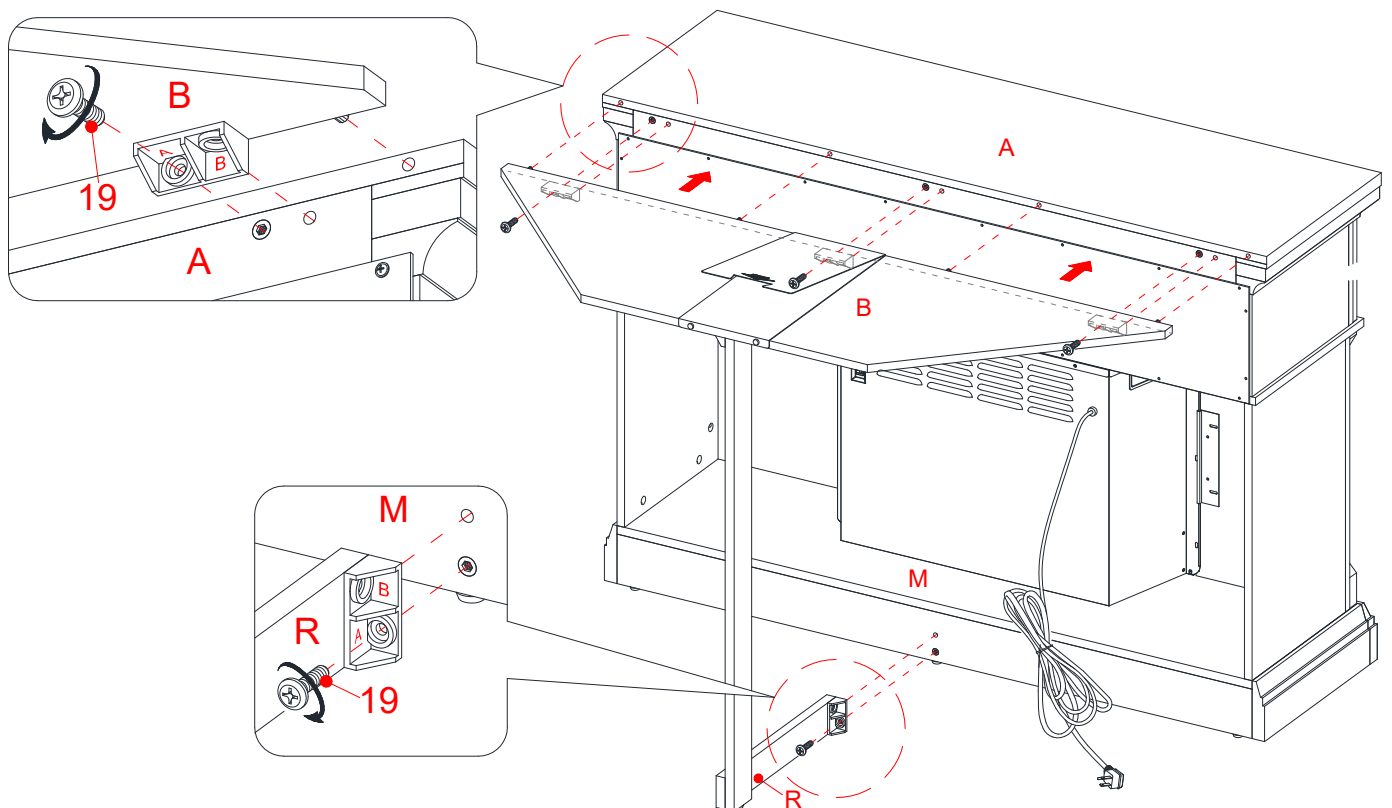 

40. Align and attach the assembled corner extension to the Top Panel (A) and the Base (M) with four 12 mm Bolts (19).


## Assembly Instructions

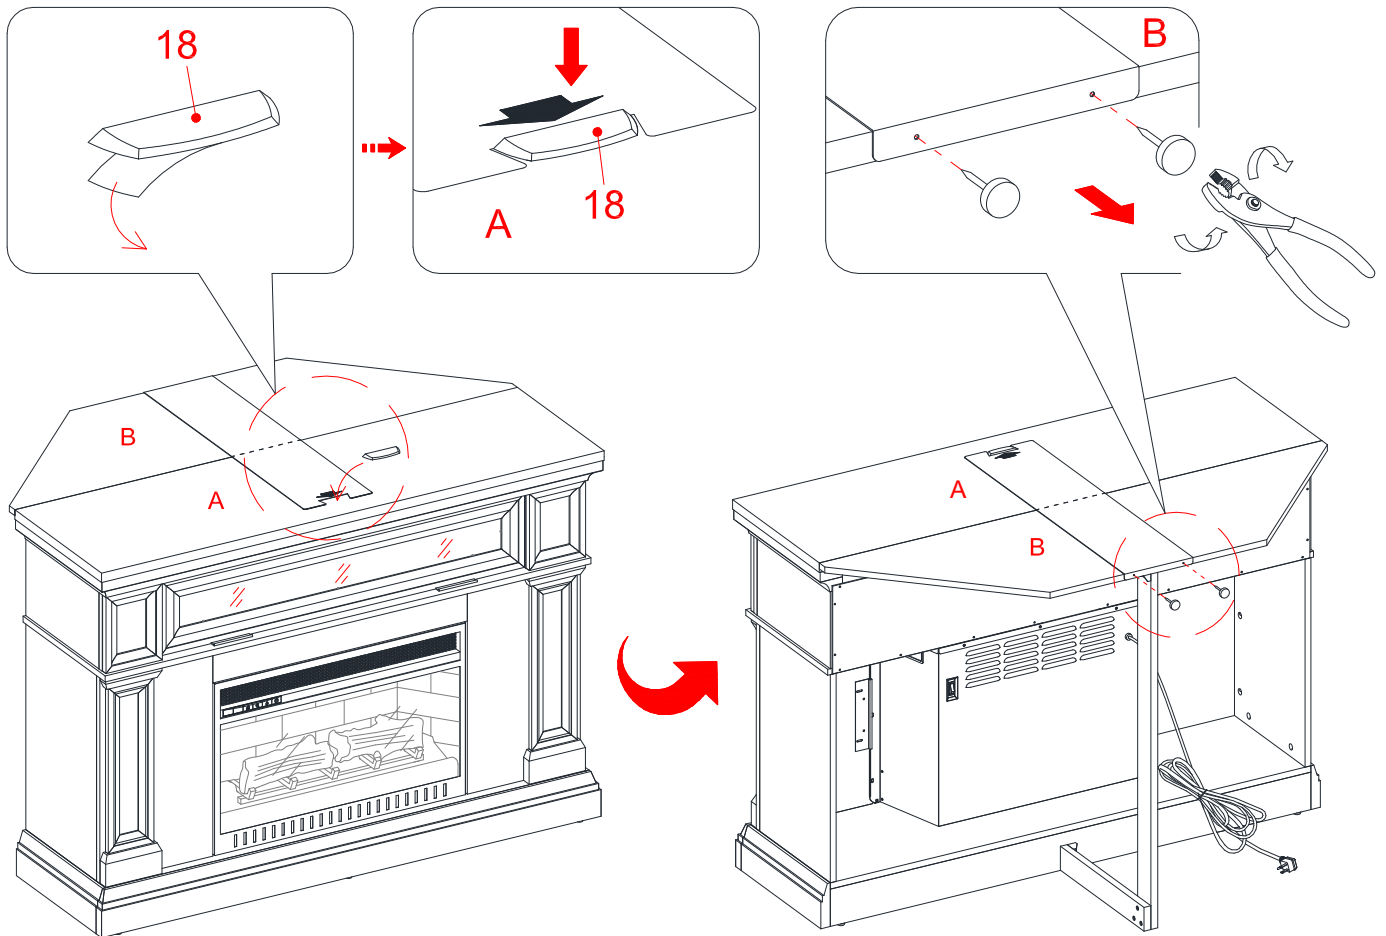 

**NOTE:** To prevent your TV from tipping, you must install the acrylic TV stopper if you place a flat panel television on the top panel. Otherwise, skip to step 42.

41. Remove the paper backing from the Acrylic Stopper (18), then properly align the acrylic stopper into the cut-out on the acrylic stopper template on the Top Panel (A). Press down on the acrylic stopper to help adhesion.
42. At the back of the Top Corner Extension (B), carefully grip the head of plastic tack with piers and, with a gentle twisting motion, pull the tack loose out to remove the acrylic stopper template.

## Assembly Instructions

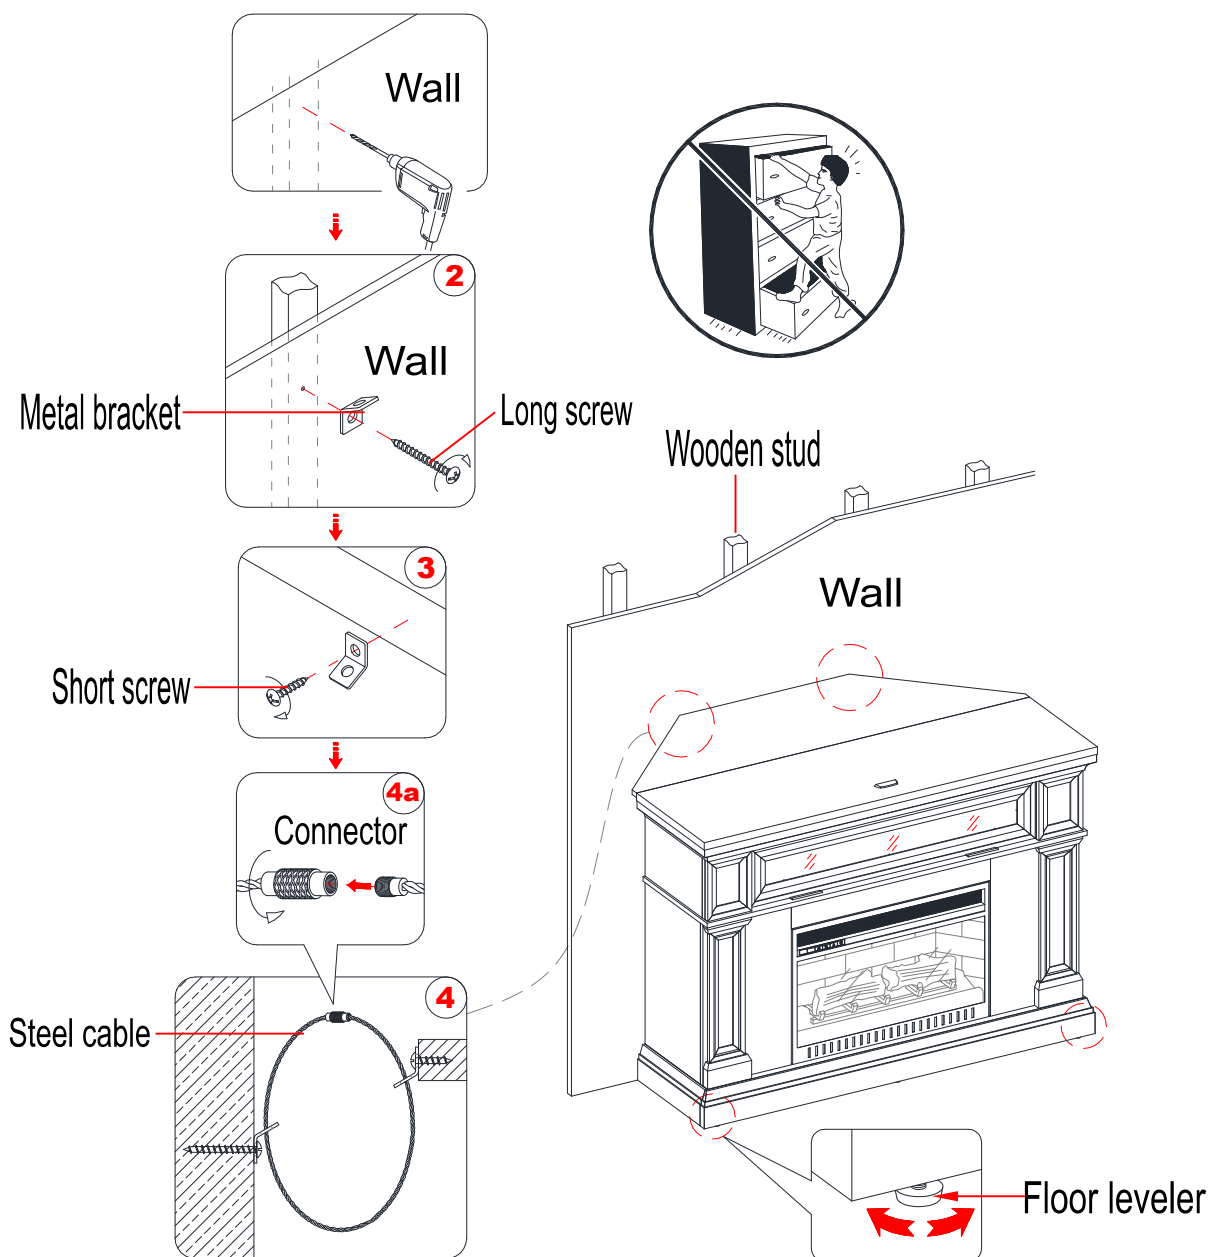 

Tools required (not provided): Phillips screwdriver, stud finder, tape measure, pencil, power drill and 1/8" drill bit.

43. Ask for assistance to position the assemble fireplace at the desired location against a wall. If necessary, adjust the pre-attached Floor Levelers at the bottom of the Base (M) to level the unit.
44. Now, follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware to attach the tip-over restraints to the unit and the wall.

**NOTE:** The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction, different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

45. Connect the fireplace to the power transformer. Follow the operating manual for the electric fireplace insert to control your fireplace.

## Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes is not necessary. Should you choose to use polishes, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

## WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. Carefully read the following safety information.

This unit is not intended for use with CRT TVs. The top surface maximum weight capacity is 70 lbs. (31.8 kg) and maximum load 58 in. (147.3 cm) diagonal flat-panel TV. The shelf maximum recommended weight allowance is 50 lbs. (22.7 kg). Use with heavier televisions may result in instability causing tip over resulting in death or serious injury.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result may tip over onto the child.

**NEVER** allow children to climb or play with the TV or furnishing supporting the TV.

**NEVER** place toys, food, remote, etc. on top of the TV or TV furnishing.

**ALWAYS** use either the safety hardware as instructed or other wall anchoring device.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to furniture collapse or over turning onto a child.

**NEVER** place a TV on furniture that is not intended to support a TV.

**NEVER** exceed the maximum size and weight of the TV shown in the instructions.

Be sure to refer to the TV warning label as shown in the instructions.

Overloading drawers and shelves may result in furniture that can break or sag, or tip-over which may result in injury.

**NEVER** exceed the weight limits shown in the instructions.

Place the heavier items on lower shelves as far back from the front as possible.

Load the bottom surfaces first to avoid top-heavy furniture.

Moving furniture that is not designed to be moved or equipped with casters may result in injury or damage to furnishings or personal property.

**ALWAYS** unload shelves and drawers, starting with the top surfaces, before moving.

 
**NEVER** push or pull furniture on carpet. Have a friend help lift properly to move and/or reposition it.

The stand is not meant as a seat and no one should be sitting or standing on the stand.

Clean the metal trim using a soft cloth, slightly dampened with citrus oil-based product and buff with a clean soft cloth. DO NOT use brass polish or household cleaners as these products will damage the metal trim. Citrus oil-based products can be obtained at supermarkets or hardware stores.

## MAXIMUM RECOMMENDED WEIGHT LOADS

MANUFACTURER: Whalen Furniture Manufacturing  
CATALOG: Eastwood 52" Fireplace Console  
MODEL #: MNFP52EW26CA / MNFP52EW26CB

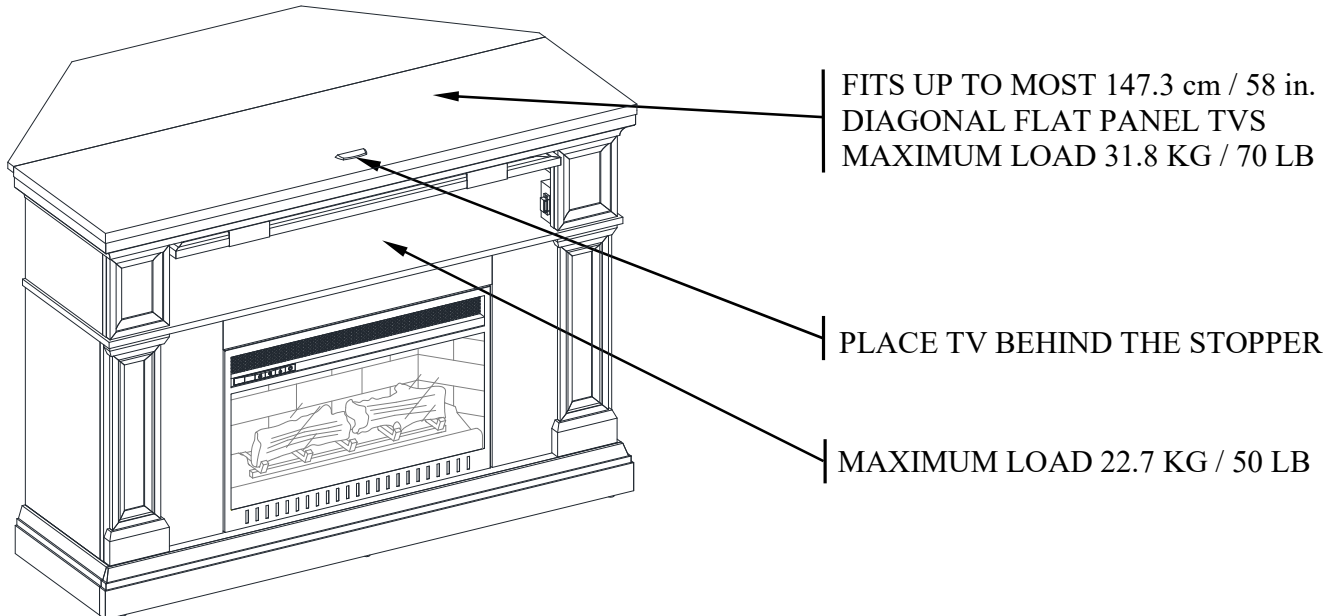

### **⚠ WARNING**

THIS UNIT IS NOT INTENDED FOR USE WITH CRT TVS. USE ONLY WITH FLAT PANEL TVS AND AUDIO/VIDEO EQUIPMENT MEETING RECOMMENDED SIZE AND WEIGHT LIMITS. NEVER USE WITH LARGER/HEAVIER THAN RECOMMENDED FLAT PANEL TVS OR EQUIPMENT. TO AVOID INSTABILITY, PLACE FLAT PANEL TV IN THE CENTER OF THE UNIT; THE BASE OF THE TELEVISION MUST BE ABLE TO REST ON THE SUPPORTING SURFACE OF THE UNIT WITHOUT OVER-HANGING THE EDGES. IMPROPERLY POSITIONED FLAT PANEL TVS, OR FLAT PANEL TVS INCLUDING OTHER EQUIPMENT THAT EXCEED RECOMMENDED SIZE AND WEIGHT LIMITS COULD FALL OFF OR BREAK THE UNIT, CAUSING POSSIBLE SERIOUS INJURY. FOR USE WITH TELEVISIONS WEIGHING 70 LBS (31.8 KG) OR LESS. USE WITH HEAVIER TELEVISIONS MAY RESULT IN INSTABILITY CAUSING TIP OVER RESULTING IN DEATH OR SERIOUS INJURY.

## QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.

Whalen Furniture Manufacturing,  
1578 Air Wing Road  
San Diego CA, 92154 USA  
Customer Service: 1-866-942-5362  
8:30 a.m. - 4:30 p.m., PST, Monday to Friday  
**[www.whalenfurniture.com](http://www.whalenfurniture.com)**

