


Farmhouse Media Stand with Storage

Style # TGAVCL-10 DPC-item # 249-10-2305

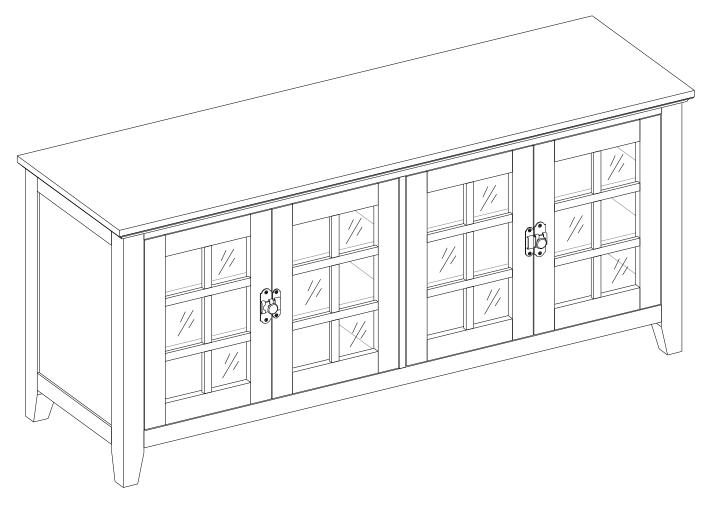




Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time. Good luck – though we're confident you won't need it.

before you begin

- 1. Check for damaged or missing parts. Call 1-855-MYTGTHOME (855-698-4846) to order missing supplies.
- 2. Use the carton as a work surface to prevent product damage during assembly.
- 3. Gather all tools prior to assembly.

tool needed (not included)

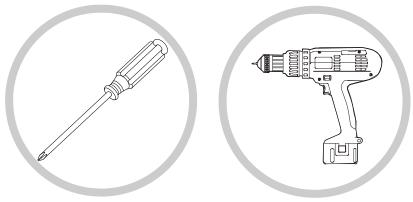

For tipping restraint hardware kit only.

table of contents

Introduction	2
Warning label	4
Hardware	5
Parts list	6
How to use the cam lock system	7
Assembly	8-18
Care and maintenance and warranty	19
Important safety information	20

AWARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:




- Install tip-over restraint provided.
- Place heaviest items in the lowest drawers.
- Do not set TV's or other heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

MAXIMUM RECOMMENDED WEIGHT LOADS

MANUFACTURER: Whalen Furniture Manufacturing CATALOG: Farmhouse Media Stand with Storage MODEL # TGAVCL-10

MODEL # TGAVCL-10 MADE IN CHINA

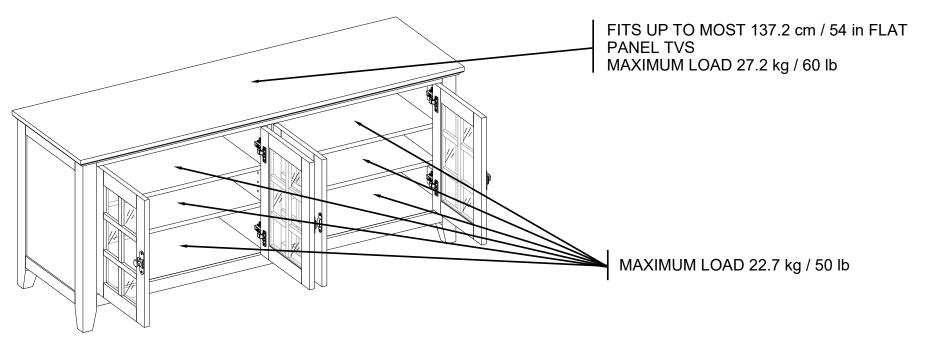


THIS UNIT IS NOT INTENDED FOR USE WITH CRT TVS. USE ONLY WITH FLAT PANEL TVS AND AUDIO/ VIDEO EQUIPMENT MEETING RECOMMENDED SIZE AND WEIGHT LIMITS. NEVER USE WITH LARGER/ HEAVIER THAN RECOMMENDED FLAT PANEL TVS OR EQUIPMENT. TO AVOID INSTABILITY, PLACE FLAT PANEL TV IN THE CENTRE OF THE UNIT; THE BASE OF THE TELEVISION MUST BE ABLE TO REST ON THE SUPPORTING SURFACE OF THE UNIT WITHOUT OVER-HANGING THE EDGES. IMPROPERLY POSITIONED FLAT PANEL TVS, OR FLAT PANEL TVS INCLUDING OTHER EQUIPMENT THAT EXCEED RECOMMENDED SIZE AND WEIGHT LIMITS COULD FALL OFF OR BREAK THE UNIT, CAUSING POSSIBLE SERIOUS INJURY.

hardware

(H1) x 14 cam lock



 
(H2) x 14 cam bolt



(H3) x 17 M8 x 30 mm wood dowel



 
(H4) x 2 M4 x 50 mm flat head screw

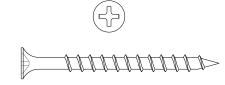

(H5) x 4 M3 x 15 mm flat head screw



 (H6) x 2 door stopper




(H7) x 24 M3.5 x 15 mm washer head screw






 (H8) x 8 hinge



(H9) x 4 M4 x 32 mm flat head screw

 


(H10) x 16 shelf support




(H11) x 18 cam lock cover



(H12) x 2 tipping restraint hardware kit (inside plastic bag)

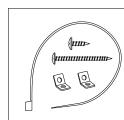


Spare hardware

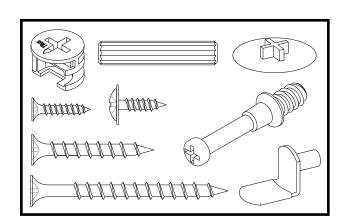


ITEM DESCRIPTION QUANTITY


Α	Top panel	1
В	Back panel	1
С	Left leg	1
D	Right leg	1
Е	Bottom panel	1
F	Bottom front molding	1
G	Partition panel	1
Н	Outer door	2
I	Inner door	2
J	Adjustable shelf	2
K	Center support with leveler	1
ı	Upper front stretcher	1

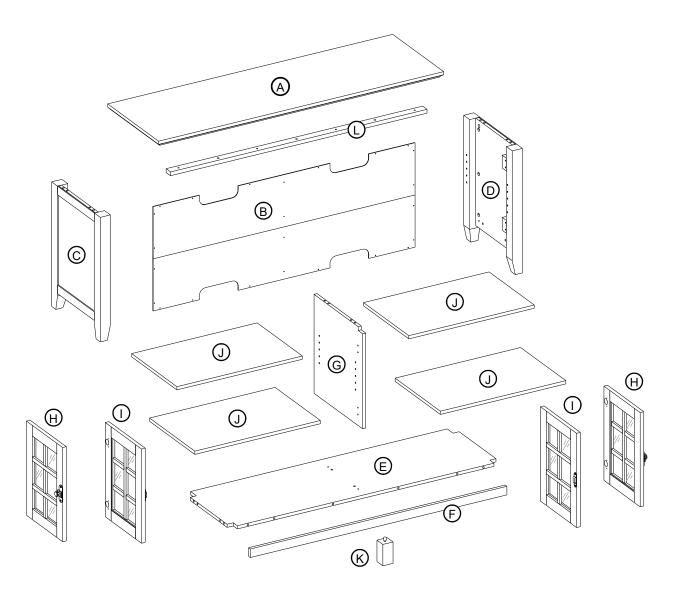



how to use the cam lock system

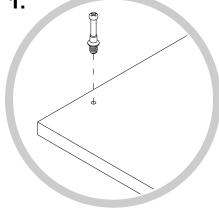


2.

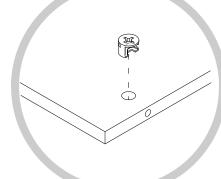

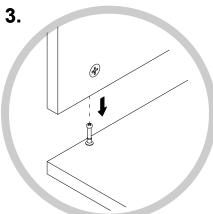


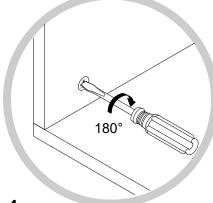

4.

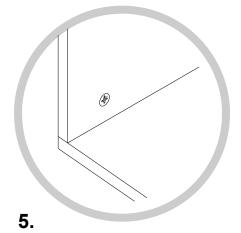


step 1.

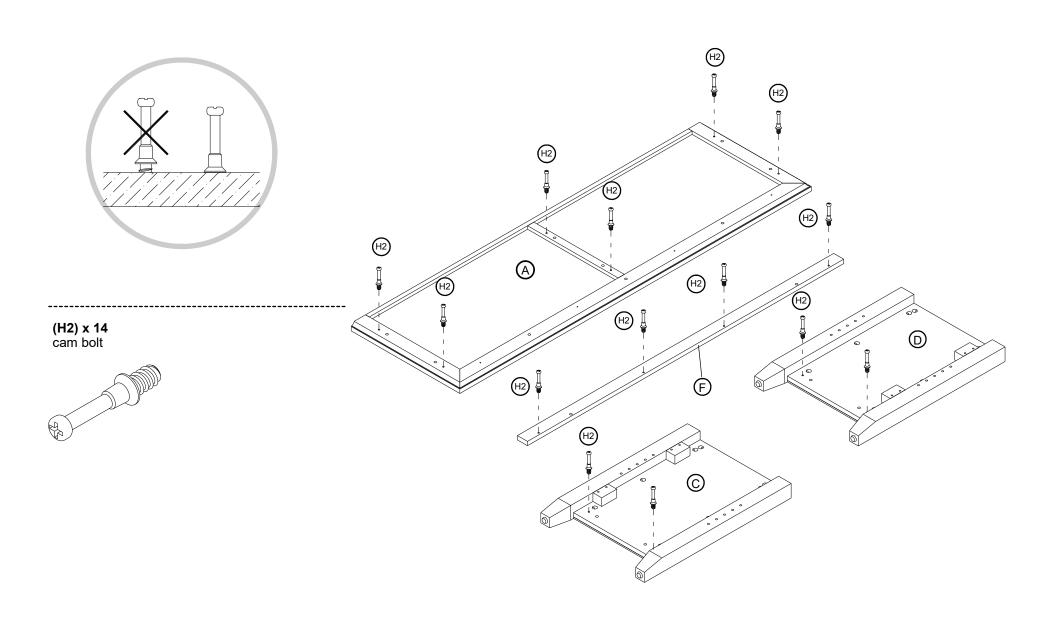

Screw-in the cam bolts on top panel (A), bottom front molding (F) and the legs (C and D).


step 2.

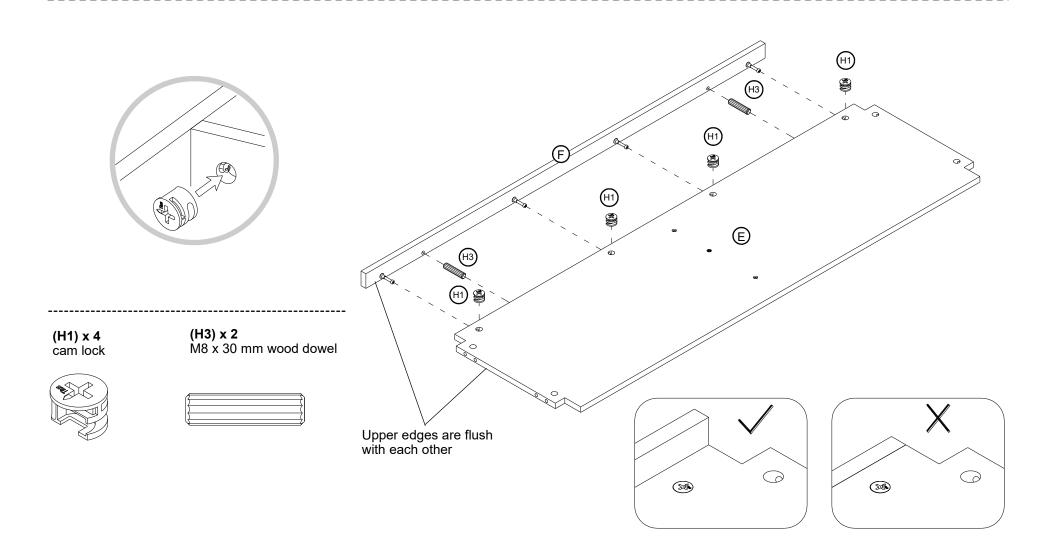

The notch faces the front of the unit **G** (H3) x 2 M8 x 30 mm wood dowel (H4) x 2 M4 x 50 mm flat head screw \blacksquare


Attach the partition panel (G) to the bottom panel (E).

step 4.

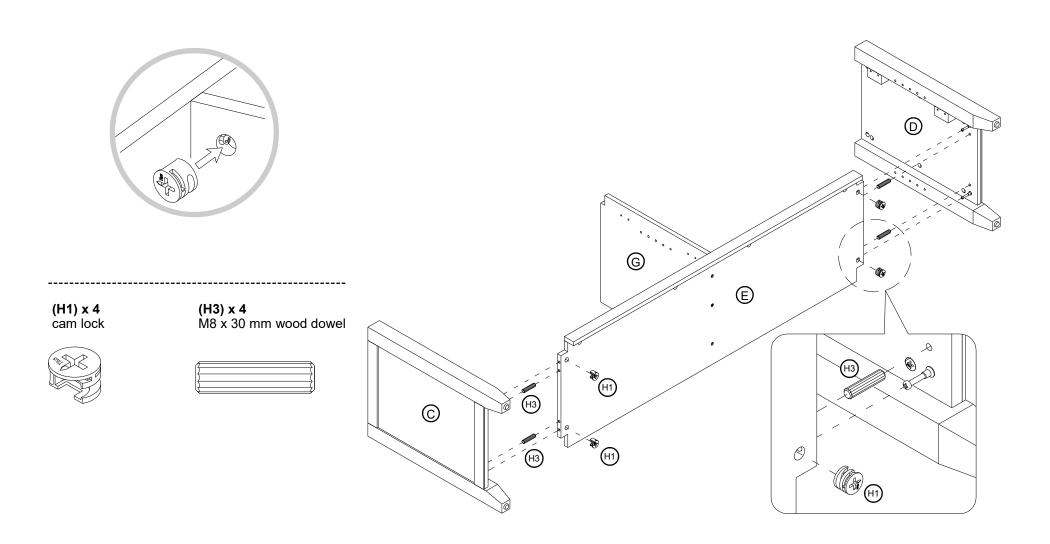


Align and attach the assembled bottom panel (E) between the legs (C and D).

step 5.

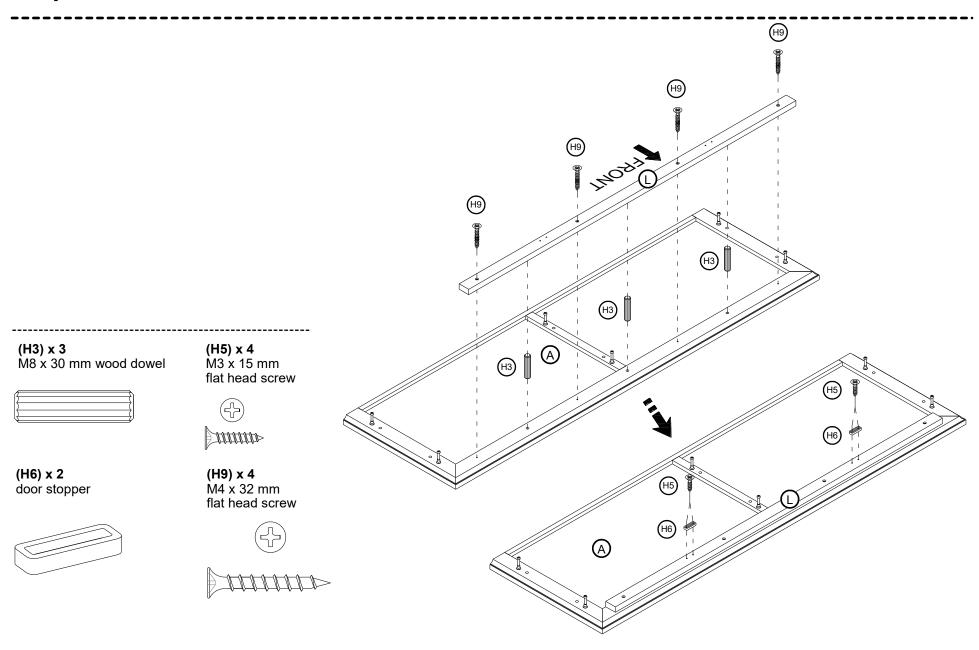

Attach the upper front stretcher (L) to the top panel (A). Using the pilot holes as a guide, attach two door stoppers to the upper front stretcher (L).

step 6.

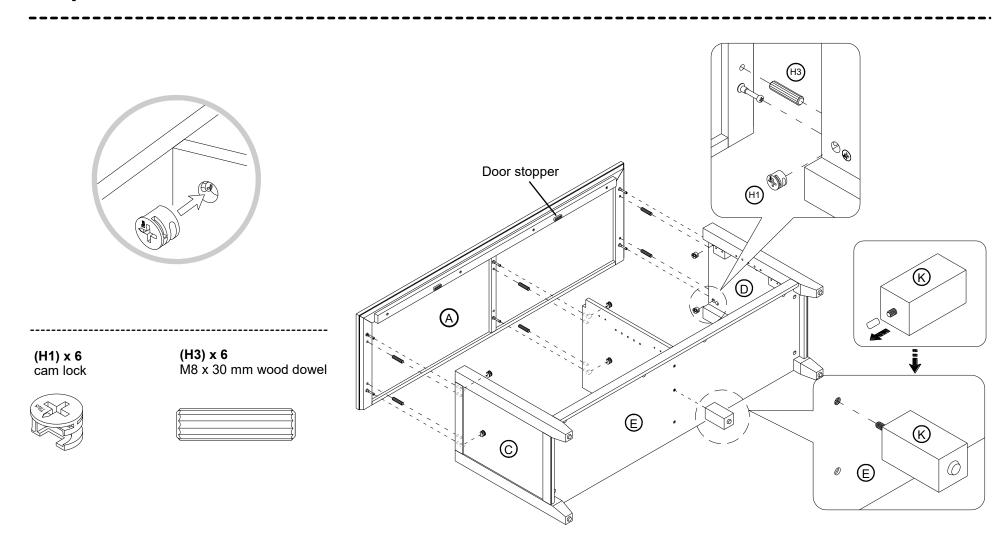


Attach the assembled top panel (A) to the previous assembly. Securely screw the center support (K) to the bottom panel (E) and set the floor leveler in the correct height.

(H7) x 24 M3.5 x 15 mm

washer head screw





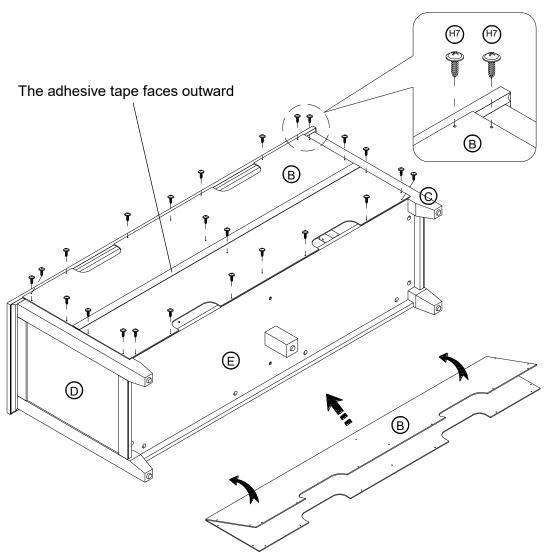


Flip around the assembled unit at its front edges.


Unfold and lay the back panel (B) to the backside of the previous assembly. Make sure that the overlaps on the panels are even all the way around. Fasten the back panel (B) into place with the provided screws, using the pilot holes on the top panel as a guide.

NOTE: We recommend attaching the back panel with the screws at the corners first.

step 8.

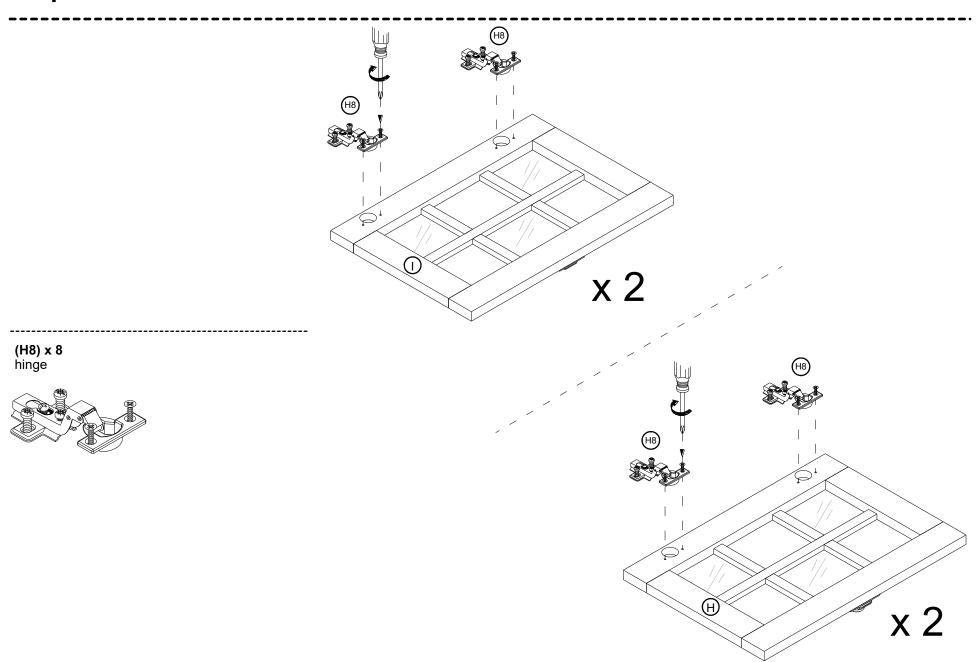


Using the pilot holes as a guide, extend the hinges if necessary and rest the hinge cups onto the cutouts of the doors (H and I) and secure them in place.

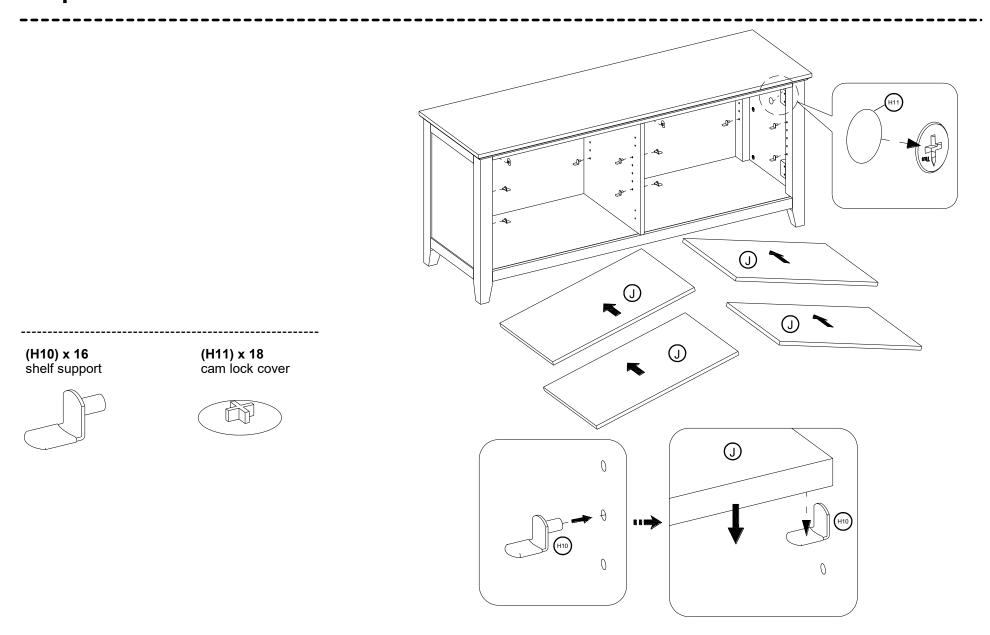


Plug the cam lock covers onto the visible cam locks to conceal the cams.

Insert eight shelf supports into the desired holes inside each compartment. Make sure you place the four shelf supports in the same level so the shelf is not tilted. Tilt and rest the adjustable shelves (J) onto the shelf supports.

step 10.

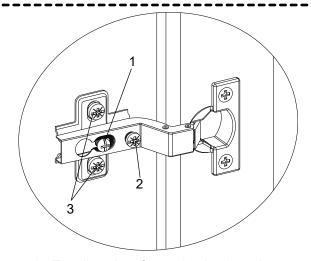

- 1. To adjust door forward or backward.
- 2. To adjust door to left or to right.
- 3. To adjust door up or down.

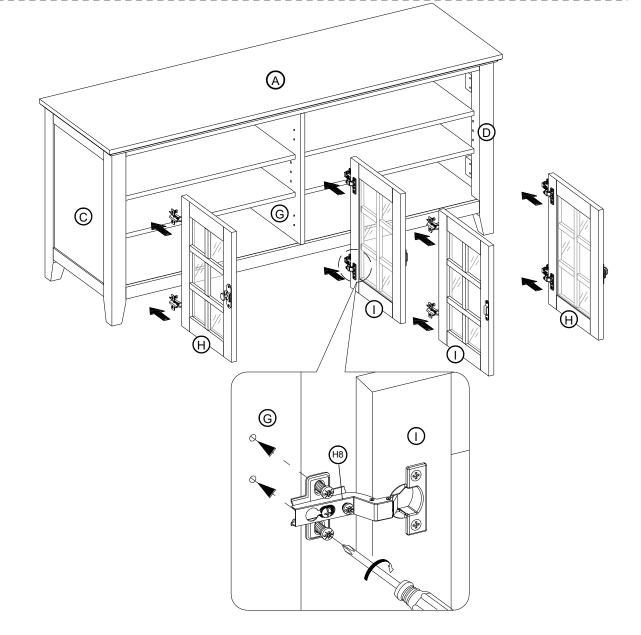


Stand the unit upright.


Align and attach the outer doors (H) to the legs (C and D) and attach the inner doors (I) to the partition panel (G).

Open and close the doors to make sure they are aligned and shut correctly. If necessary, adjust the bolts on the hinge arms for better fit.

step 11.

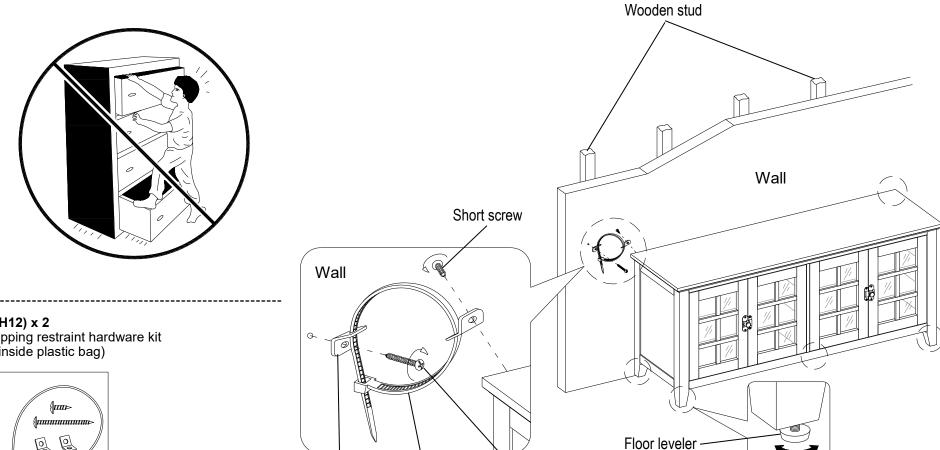

(H12) x 2 tipping restraint hardware kit (inside plastic bag)

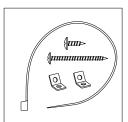

Tools required (not provided): Phillips screwdriver, stud finder, measure tape, pencil, power drill and 1/8" drill bit.

Long screw

Nylon strap

Adjust the pre-attached floor levelers to level the unit against a wall. Follow the instructions printed on plastic bag containing tipping restraint hardware to attach tip-over restraint between the unit and wall.

NOTE: You must use this tipping restraint to attach this unit to the wall, to prevent accidents and/or injures.

Metal bracket

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws and nuts periodically and tighten them if necessary.

Further Advice about Wood Furniture Care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

We hope you enjoy your purchase for many years. Thank you for your purchase!

QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific al rights and you may also have other rights which vary from state to state or province to province.

Customer Service: 1-855-MYTGTHOME (855-698-4846) 8:30 a.m. - 4:30 p.m., PST, Monday to Friday www.whalenfurniture.com The maximum recommended weight allowance is 27.2 kg / 60 lb for top surface. The maximum recommended weight allowance is 22.7 kg / 50 lb for shelf.

A WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. Carefully read the following safety information.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result may tip over onto the child.

NEVER allow children to climb or play with the TV or furnishing supporting the TV.

NEVER place toys, food, remote, etc. on top of the TV or TV furnishing.

ALWAYS use either the safety hardware as instructed or other wall anchoring device.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to furniture collapse or over turning onto a child.

NEVER place a TV on furniture that is not intended to support a TV.

NEVER exceed the maximum size and weight of the TV shown in the instructions.

Be sure to refer to the TV warning label as shown in the instructions.

Overloading drawers and shelves may result in furniture that can break or sag, or tip-over which may result in injury.

NEVER exceed the weight limits shown in the instructions.

Place the heavier items on lower shelves as far back from the front as possible.

Load the bottom surfaces first to avoid top-heavy furniture.

Moving furniture that is not designed to be moved or equipped with casters may result in injury or damage to furnishings or personal property.

ALWAYS unload shelves and drawers, starting with the top surfaces, before moving.

NEVER push or pull furniture on carpet. Have a friend help lift properly to move and/or reposition it.

The unit is not meant as a seat and no one should be sitting or standing on the top panel.

