 
 


allen + roth®

welcoming • sophisticated • inspiring

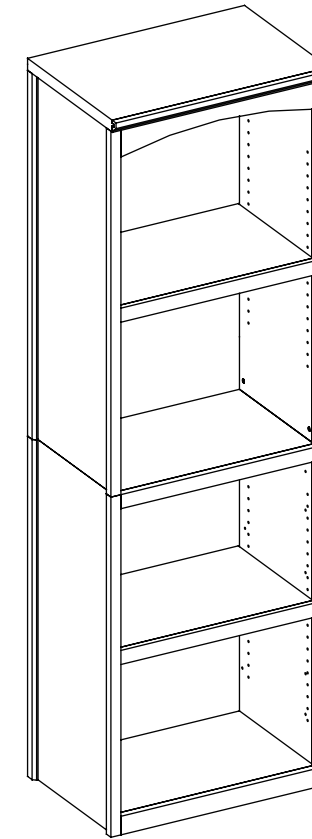

Before you begin

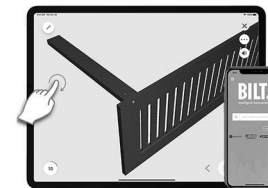

3D-GUIDED INTERACTIVE ASSEMBLY INSTRUCTIONS CAN BE FOUND ON **BILT**®

DOWNLOAD THE **FREE APP**



allen + roth® is a registered trademark of LF, LLC. All Rights Reserved.

ITEM #0339207, 0339208, 0810375, 2416434

PREMIUM WOOD TOWER

! WARNING

UNIT MUST BE PERMANENTLY FASTENED TO THE WALL WITH PROVIDED HARDWARE; THIS STORAGE UNIT IS NOT DESIGNED OR INTENDED FOR FREESTANDING USE.

MODEL#WSWS-WU1C, WSWS-WU1W
WSWS-WU1G,LWCTBW

ATTACH YOUR RECEIPT HERE

Français p. 14

Serial Number _____ Purchase Date _____


Español p. 27

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-866-439-9800, 8 a.m. – 8 p.m., EST, Monday - Friday.

TABLE OF CONTENTS


Camlock System Operation.....	2
Package Contents.....	3
Hardware Contents.....	4
Safety Information.....	5
Preparation	5
Assembly Instructions.....	6
Care and Maintenance	11
Troubleshooting.....	11
Warranty.....	12
Replacement Parts List	12

 CAM LOCK SYSTEM OPERATION

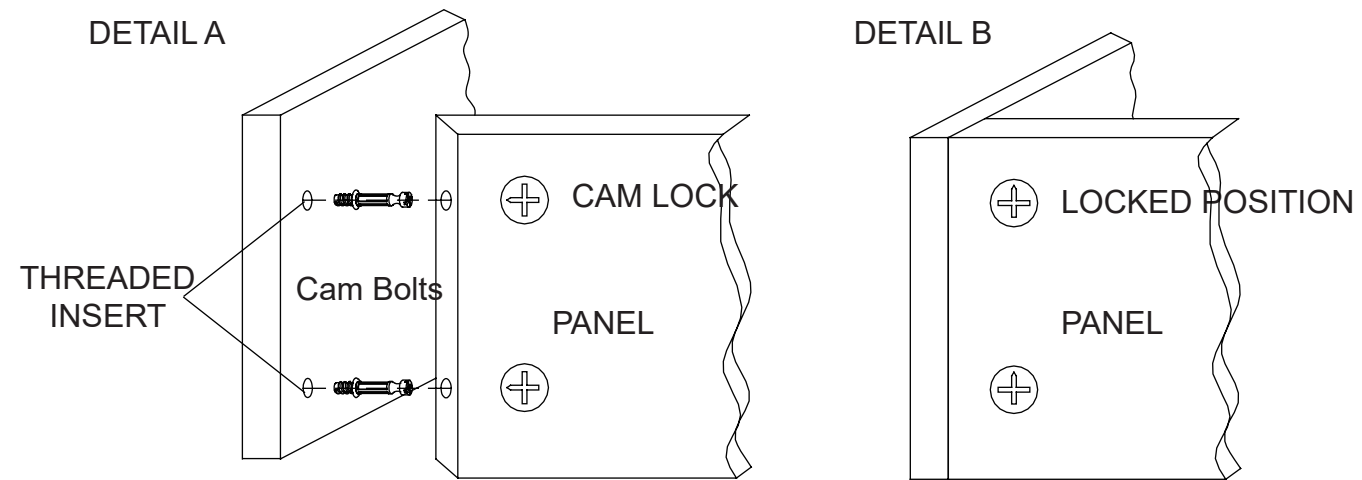

1. Screw cam bolts into the predrilled small holes on panel.
2. Insert cam lock into predrilled large hole on panel.
3. Make sure the arrow on the cam lock is pointed toward the cam bolts.
4. Connect both panels together, making sure cam bolts goes into predrilled hole on the end of panel with cam lock.
5. Once cam bolts is connected inside cam lock, take Phillips screwdriver and tighten cam lock clockwise.

 PACKAGE CONTENTS

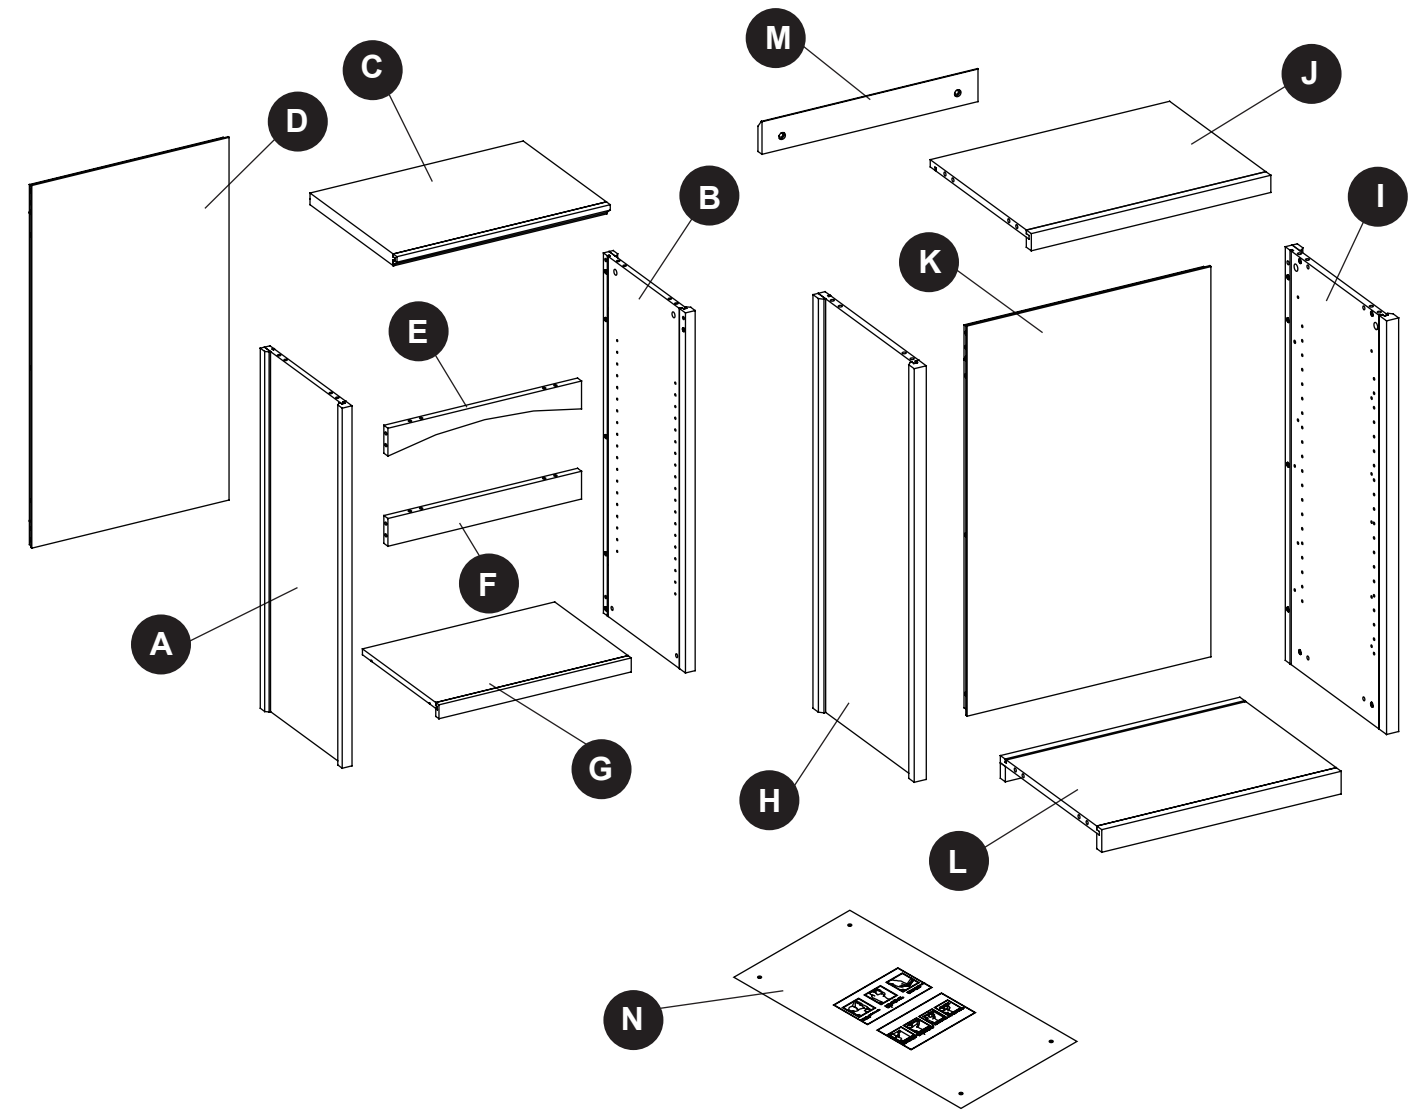


PART	DESCRIPTION	QUANTITY
A	Hutch Panel Left	1
B	Hutch Panel Right	1
C	Hutch Panel Top	1
D	Hutch Panel Back	1
E	Front Curved Stretcher	1
F	Front Straight Stretcher	1
G	Adjustable Shelf	2

PART	DESCRIPTION	QUANTITY
H	Base Panel Left	1
I	Base Panel Right	1
J	Base Panel Top	1
K	Base Panel Back	1
L	Base Panel Bottom	1
M	Wall Hanging Cleat	2
N	Installation Template	1

HARDWARE CONTENTS (shown actual size)

 
AA



Bolt

Qty. 12

 
BB



Lock Washer

Qty. 12

 
CC

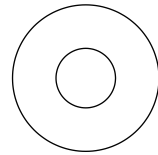

Flat Washer

Qty. 12

 
DD

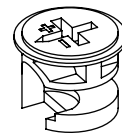

Large Cam Lock

Qty. 34

 
EE



Medium Cam Bolt

Qty. 30

 
FF



Large Wood Dowel

Qty. 34

 
GG



Shelf Pin

Qty. 8

 
HH



Lag Bolt

Qty. 4

 
II

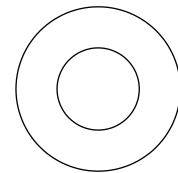

Large Flat Washer

Qty. 4

 
JJ

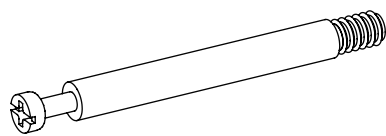

Large Cam Bolt

Qty. 4

 
KK



Barrel Nut

Qty. 4

 
LL

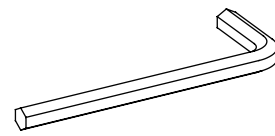

Allen Wrench

Qty. 1

 MM

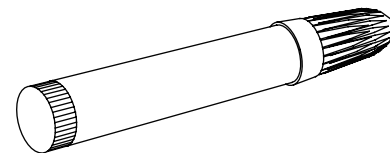

Touch-up Pen

Qty. 1
(not included for
Item #0339208 &
#2416434)



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

- Do not allow children to climb or play in or around this product.
- Use this unit for its intended purpose only. Do not use shelves as step ladder.
- To avoid damage, assemble the product on a sturdy, level and protective surface.
- Two or more persons must work together to install the unit onto the wall.
- Make sure all bolts/screws are tightly fastened before the unit is used.
- Check bolts/screws periodically and tighten them if necessary.
- **Unit must be permanently fastened to the wall with provided hardware; this storage unit is not designed or intended for freestanding use.**



WARNING

UNIT IS INTENDED FOR USE ONLY WITH MAXIMUM WEIGHTS INDICATED. OVERLOADING STORAGE UNIT WITH PRODUCTS HEAVIER THAN MAXIMUM WEIGHT MAY RESULT IN INJURY. DISTRIBUTE ANY WEIGHT IN UNITS EVENLY.

- Each shelf maximum load: 30 lbs.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 60 minutes

Tools Required for Assembly (not included): Phillips Screwdriver, Level, Power Drill, 3/16 in. Drill Bit, 3/8 in. Drill Bit, 1/2 in. Socket Wrench, Stud Finder, Marking Pencil, Tape Measure, Step Ladder, and Hammer.

ASSEMBLY INSTRUCTIONS

Base Assembly

1. Insert medium cam bolts (EE) into base panel left (H), base panel right (I) and base panel top (J).

Hardware Used

EE Medium Cam Bolt x 12



2. Attach base panel back (K) to base panel top (J) using large wood dowels (FF) and large cam lock (DD).

Note: Make sure medium cam bolts (EE) previously inserted into base panel top (J) are completely seated.

Hardware Used

DD Large Cam Lock x 2



FF Large Wood Dowel x 2



3. Attach base panel right (I) to assembly using large wood dowels (FF) and large cam locks (DD).

 
 
 
Note: Make sure medium cam bolts (EE) previously inserted into base panel right (I) are completely seated.

Hardware Used

DD Large Cam Lock x 2



FF Large Wood Dowel x 3

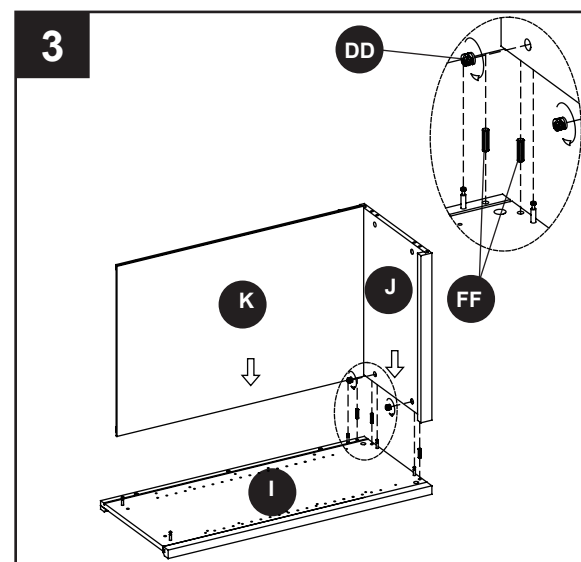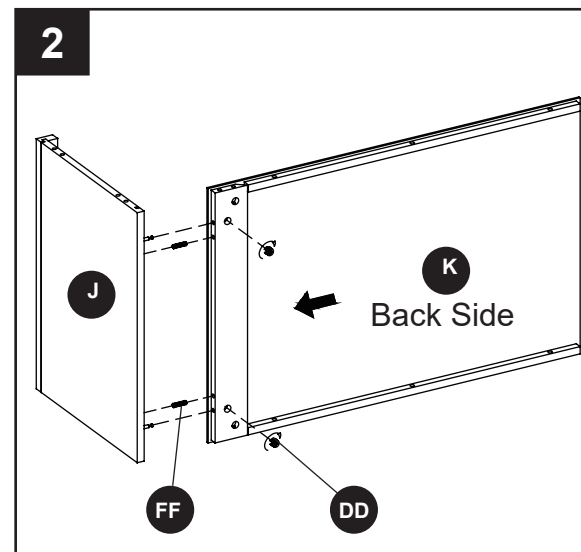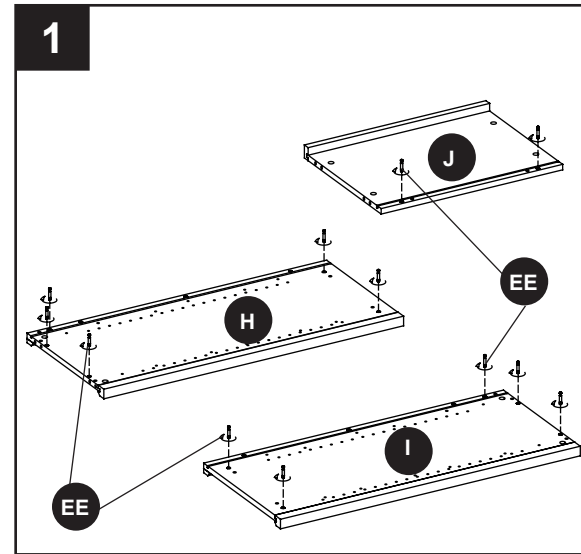ASSEMBLY INSTRUCTIONS

4. From the back of the assembly, attach base panel right (I) to base panel back (K) using flat washers (CC), lock washers (BB) and bolts (AA). Tighten with Allen wrench (LL). Secure base panel top (J) with large cam locks (DD).

Hardware Used

AA Bolt x 3



BB Lock Washer x 3



CC Flat Washer x 3



DD Large Cam Lock x 1



LL Allen Wrench x 1



5. Fit base panel back (K) into slot of base panel bottom (L), then attach base panel bottom (L) to assembly using large wood dowels (FF) and large cam locks (DD).

Note: Make sure medium cam bolts (EE) previously inserted into base panel right (I) are completely seated.

Hardware Used

DD Large Cam Lock x 2



FF Large Wood Dowel x 2




6. Attach base panel left (H) to assembly using large wood dowels (FF) and large cam locks (DD).

 
 
 
Note: Make sure medium cam bolts (EE) previously inserted into base panel left (H) are completely seated.

Hardware Used

DD Large Cam Lock x 4



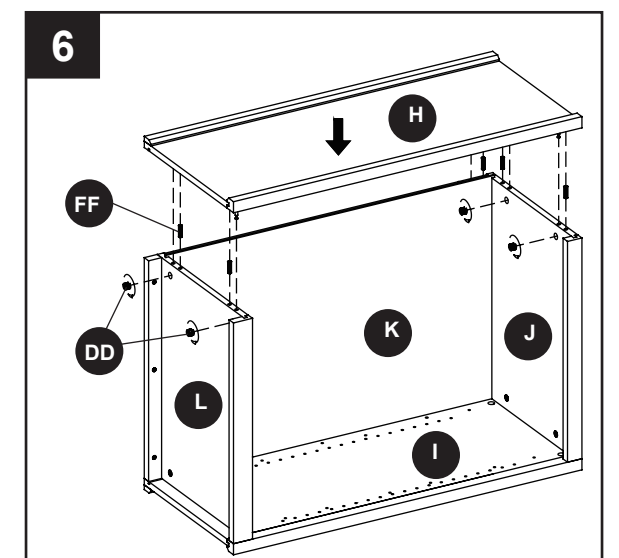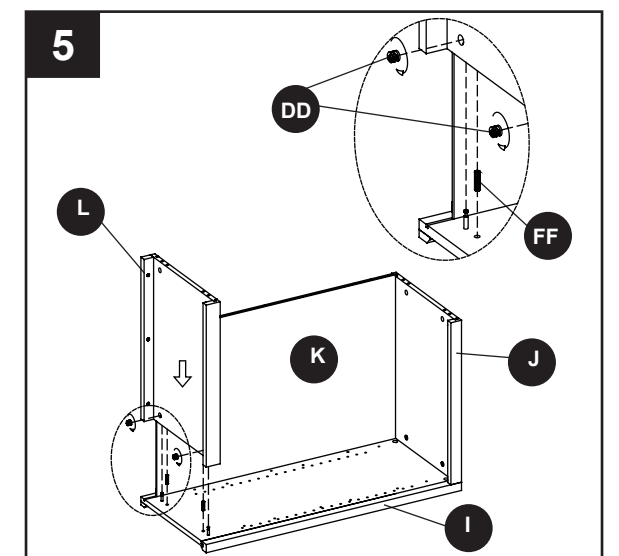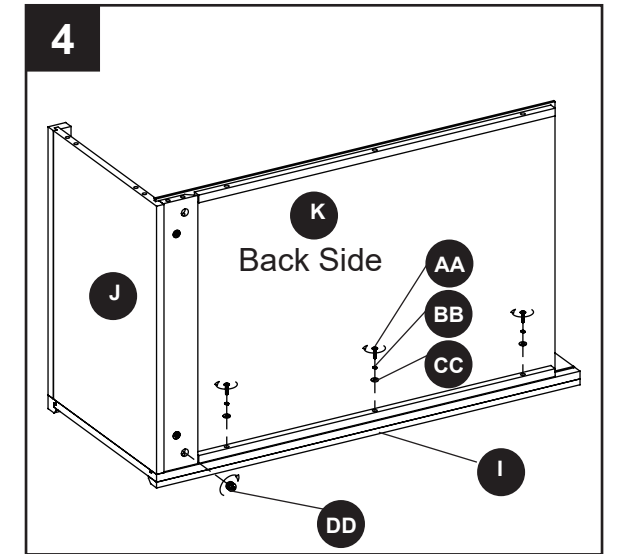




FF Large Wood Dowel x 5

ASSEMBLY INSTRUCTIONS

7. From the back of the assembly, attach base panel left (H) to base panel back (K) using flat washers (CC), lock washers (BB) and bolts (AA). Tighten with Allen wrench (LL). Secure base panel top (J) with large cam locks (DD).

Hardware Used

AA	Bolt		x 3
BB	Lock Washer		x 3
CC	Flat Washer		x 3
DD	Large Cam Lock		x 1
LL	Allen Wrench		x 1

  Hutch Assembly

8. Insert medium cam bolts (EE) into hutch panel left (A), hutch panel right (B) and hutch panel top (C).

 

 



Hardware Used




EE	Medium Cam Bolt		x 14
-----------	-----------------	------------------------------------------------------------------------------------	------

9. Attach hutch panel left (A) and hutch panel right (B) to hutch panel back (D) and either front curved stretcher (E) or front straight stretcher (F) -- depending on which fits your closet look -- using large wood dowels (FF) and large cam locks (DD). From the back of the assembly, use flat washers (CC), lock washers (BB) and bolts (AA) to secure unit. Tighten with Allen wrench (LL).

Then, secure assembly with large cam locks (DD).

   Hardware Used

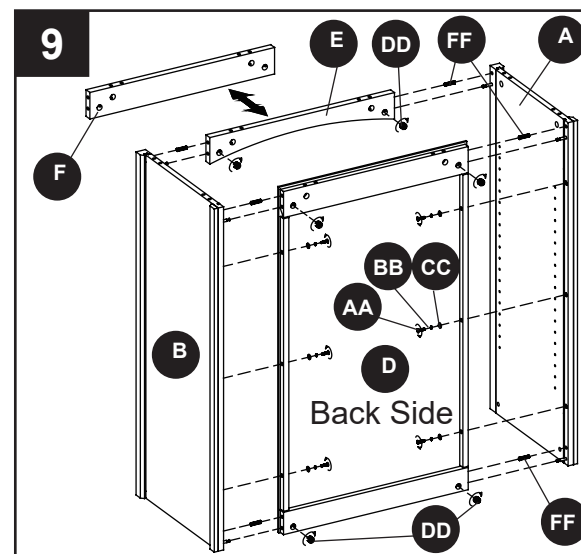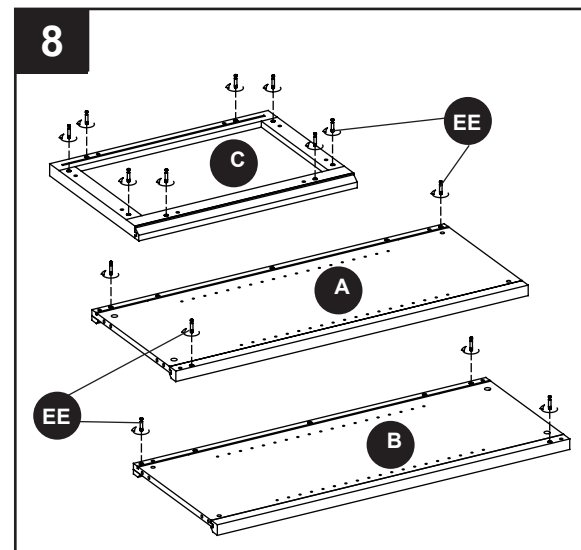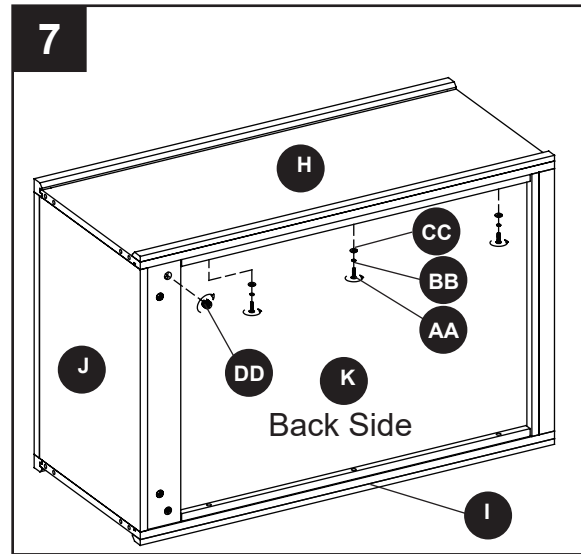

AA	Bolt		x 6
BB	Lock Washer		x 6
CC	Flat Washer		x 6
DD	Large Cam Lock		x 6
FF	Large Wood Dowel		x 6
LL	Allen Wrench		x 1



ASSEMBLY INSTRUCTIONS



10. Insert wood dowels (FF) and large cam locks (DD) into hutch assembly. Attach hutch panel top (C), tightening large cam locks (DD) to secure assembly.

Hardware Used

DD	Large Cam Lock		x 8
FF	Large Wood Dowel		x 8

11. Carefully rest hutch assembly on its side. Insert barrel nuts (KK) and large cam bolts (JJ) into the bottom of the hutch assembly.

 
 
Hardware Used


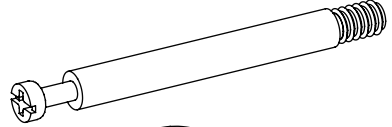

JJ	Large Cam Bolt		x 4
KK	Barrel Nut		x 4

12. Insert large wood dowels (FF) and large cam locks (DD) into the base panel top (J). Then, with the help of another person, attach the hutch assembly to the base assembly, tightening the large cam locks (DD) to secure the unit.

Note: Make sure large cam bolts (JJ) are completely seated.

  Hardware Used

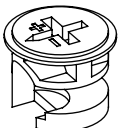DD	Large Cam Lock		x 4
FF	Large Wood Dowel		x 4

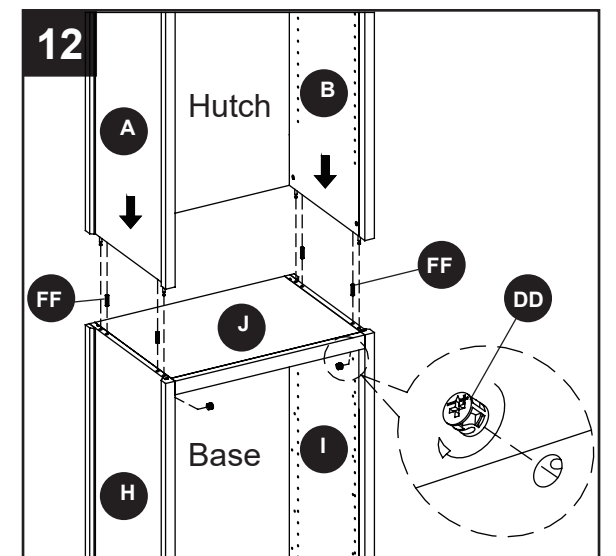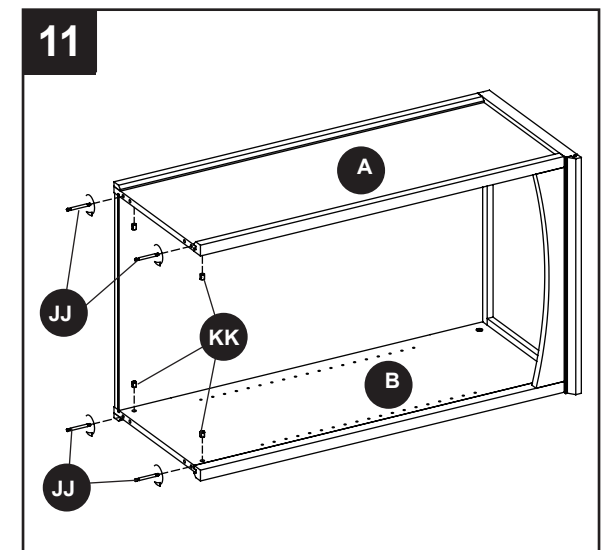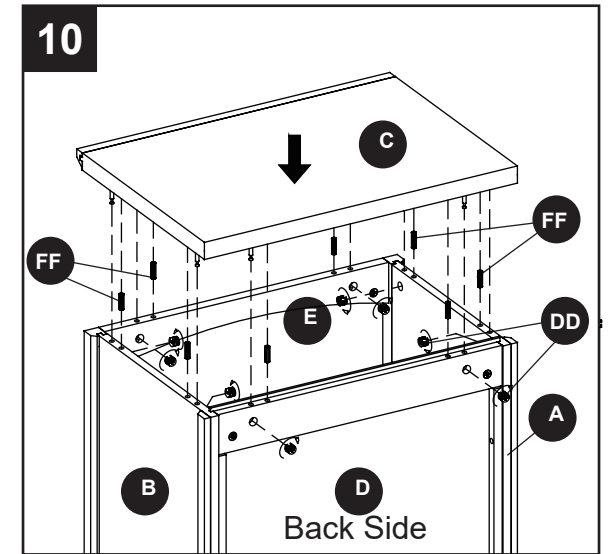   


ASSEMBLY INSTRUCTIONS

Wall Hanging Installation


13. Using a stud finder, locate the edges of the wood studs. Find the center line of each stud and draw a vertical reference line on the wall over each one. Position installation template (N) at desired location on wall.


Note: The bottom of the installation template (N) should be no less than 31-1/2 in. from the floor.

 Mark mounting holes with a pencil (not included) and discard installation template (N). Drill 3/16 in. pilot holes at marked locations. Then, with the beveled edge facing up, attach the wall hanging cleats (M) with large flat washers (II) and lag bolts (HH).

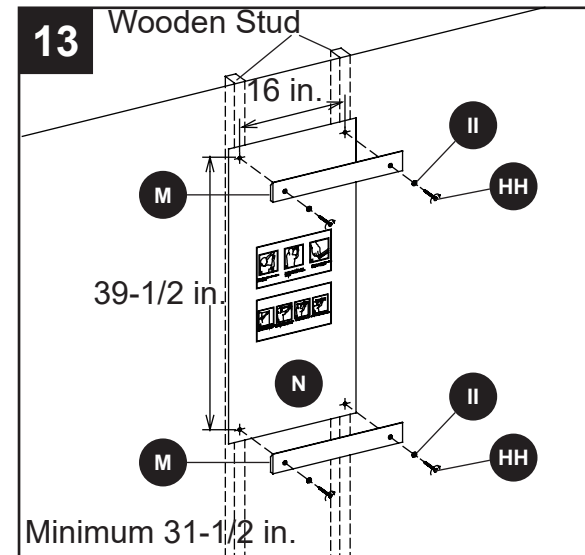


Hardware Used

 HH Lag Bolt  x 4

II Large Flat Washer  x 4

 
14. With the help from another person, carefully hang the unit onto wall hanging cleats (M).

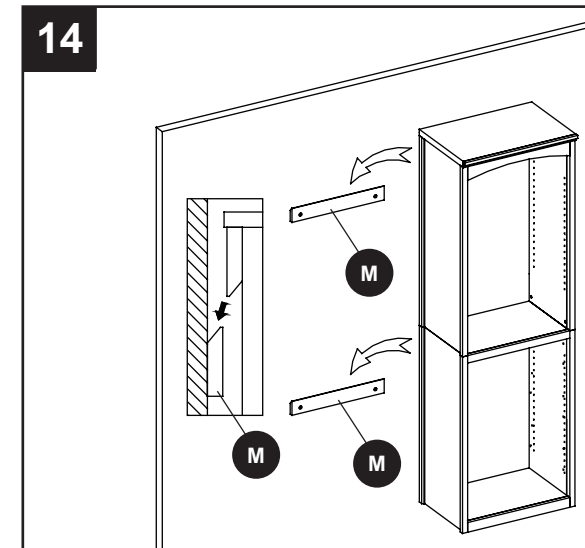

Shelf Installation

15. Insert shelf pins (GG) where desired in tower, then rest adjustable shelf (G) on top. Repeat for second adjustable shelf (G).

 Note: Ensure the shelf pins (GG) are level.

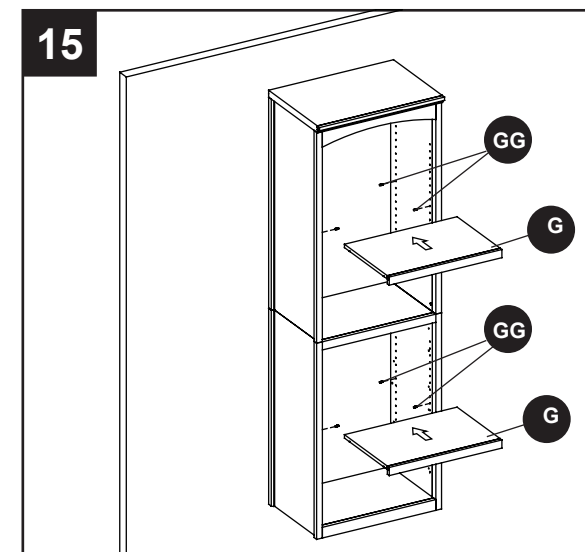

Hardware Used

GG Shelf Pin  x 8

CARE AND MAINTENANCE

- Periodically check to make certain all components are properly positioned, free from damage and firmly connected.
- Use a soft, clean cloth that will not scratch the surface when dusting.
- Never use water to clean the furniture as it may damage to the finish.
- Wipe clean using a damp cloth and a mild cleaner. Wipe dry with a clean cloth.
- In the event the furniture is stained or otherwise damaged during use, it is recommended you call a professional to repair the furniture.
- Keep furniture away from direct sunlight as it may damage the finish.
- It is best to keep the furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood.
- Touch-up pen (MM) has been provided (except in Item #0339208 & #2416434) to repair any small nicks or scratches that may occur during assembly or shipping. If Item #0339208 & #2416434 is damaged and touch-up is required, apply a quality wood polish to the damaged surface.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Closet tower tilted.	The wall hanging cleats are not level.	Reinstall the wall hanging cleats and ensure they are level.
Closet tower can not hang on the wall.	The mounting hole locations are not correct.	Reinstall wall hanging cleats; make sure the space between two wall hanging cleats is 39-1/2 in. and the bottom two mounting holes location is no less than 31-1/2 in. from the floor.

WARRANTY

This product (exclusive of shelves) is warranted to the original purchaser. If there is a failure in this unit due to defects in materials or workmanship, the manufacturer will repair or replace this item at our discretion without charge. Warranty is void if product has been assembled incorrectly, misused, abused by overloading, altered in any way or damaged due to accident. This warranty is not transferable and does not cover chipping, flaking, scratches, rust, dents, or other damages to the surfaces of this product. Responsibility of the manufacturer is limited to repair or replacement of this product. The manufacturer is not responsible for consequential, incidental, or other damages or losses resulting from product failure.

This warranty is in lieu of all other expressed warranties. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

REPLACEMENT PARTS LIST


For replacement parts, call our customer service department at 1-866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Friday.

PART	DESCRIPTION	PART #
A	Hutch Panel Left	*WSWS-WU1C/W/G/LWCTBW-1-HPL
B	Hutch Panel Right	*WSWS-WU1C/W/G/LWCTBW-2-HPR
C	Hutch Panel Top	*WSWS-WU1C/W/G/LWCTBW-3-HPT
D	Hutch Panel Back	*WSWS-WU1C/W/G/LWCTBW-4-HPB
E	Front Curved Stretcher	*WSWS-WU1C/W/G/LWCTBW-5-FCS
F	Front Straight Stretcher	*WSWS-WU1C/W/G/LWCTBW-6-FCS
G	Adjustable Shelf	*WSWS-WU1C/W/G/LWCTBW-7-AS
H	Base Panel Left	*WSWS-WU1C/W/G/LWCTBW-8-BPL
I	Base Panel Right	*WSWS-WU1C/W/G/LWCTBW-9-BPR
J	Base Panel Top	*WSWS-WU1C/W/G/LWCTBW-10-BPT
K	Base Panel Back	*WSWS-WU1C/W/G/LWCTBW-11-BPB
L	Base Panel Bottom	*WSWS-WU1C/W/G/LWCTBW-12-BPB
M	Wall Hanging Cleat	*WSWS-WU1C/W/G/LWCTBW-13-WHC
N	Installation Template	*WSWS-WU1C/W/G/LWCTBW-26-IT
AA	Bolt	*WSWS-WU1C/W/G/LWCTBW-15-1-1/4B
BB	Lock Washer	*WSWS-WU1C/W/G/LWCTBW-16-LW
CC	Flat Washer	*WSWS-WU1C/W/G/LWCTBW-17-FW
DD	Large Cam Lock	*WSWS-WU1C/W/G/LWCTBW-18-LCL
EE	Medium Cam Bolt	*WSWS-WU1C/W/G/LWCTBW-19-MCB
FF	Large Wood Dowel	*WSWS-WU1C/W/G/LWCTBW-20-LWD
GG	Shelf Pin	*WSWS-WU1C/W/G/LWCTBW-21-SP
HH	Lag Bolt	*WSWS-WU1C/W/G/LWCTBW-22-2-1/2LB
II	Large Flat Washer	*WSWS-WU1C/W/G/LWCTBW-23-LFW
JJ	Large Cam Bolt	*WSWS-WU1C/W/G/LWCTBW-26-LCB

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Friday.

PART	DESCRIPTION	PART #
KK	Barrel Nut	*WSWS-WU1C/W/G/LWCTBW-27-BN
LL	Allen Wrench	*WSWS-WU1C/W/G/LWCTBW-24-M4AW
MM	Touch-up Pen	*WSWS-WU1C/G-25-TUP
	Complete Hardware	*WSWS-WU1C/W/G/LWCTBW-14-CH

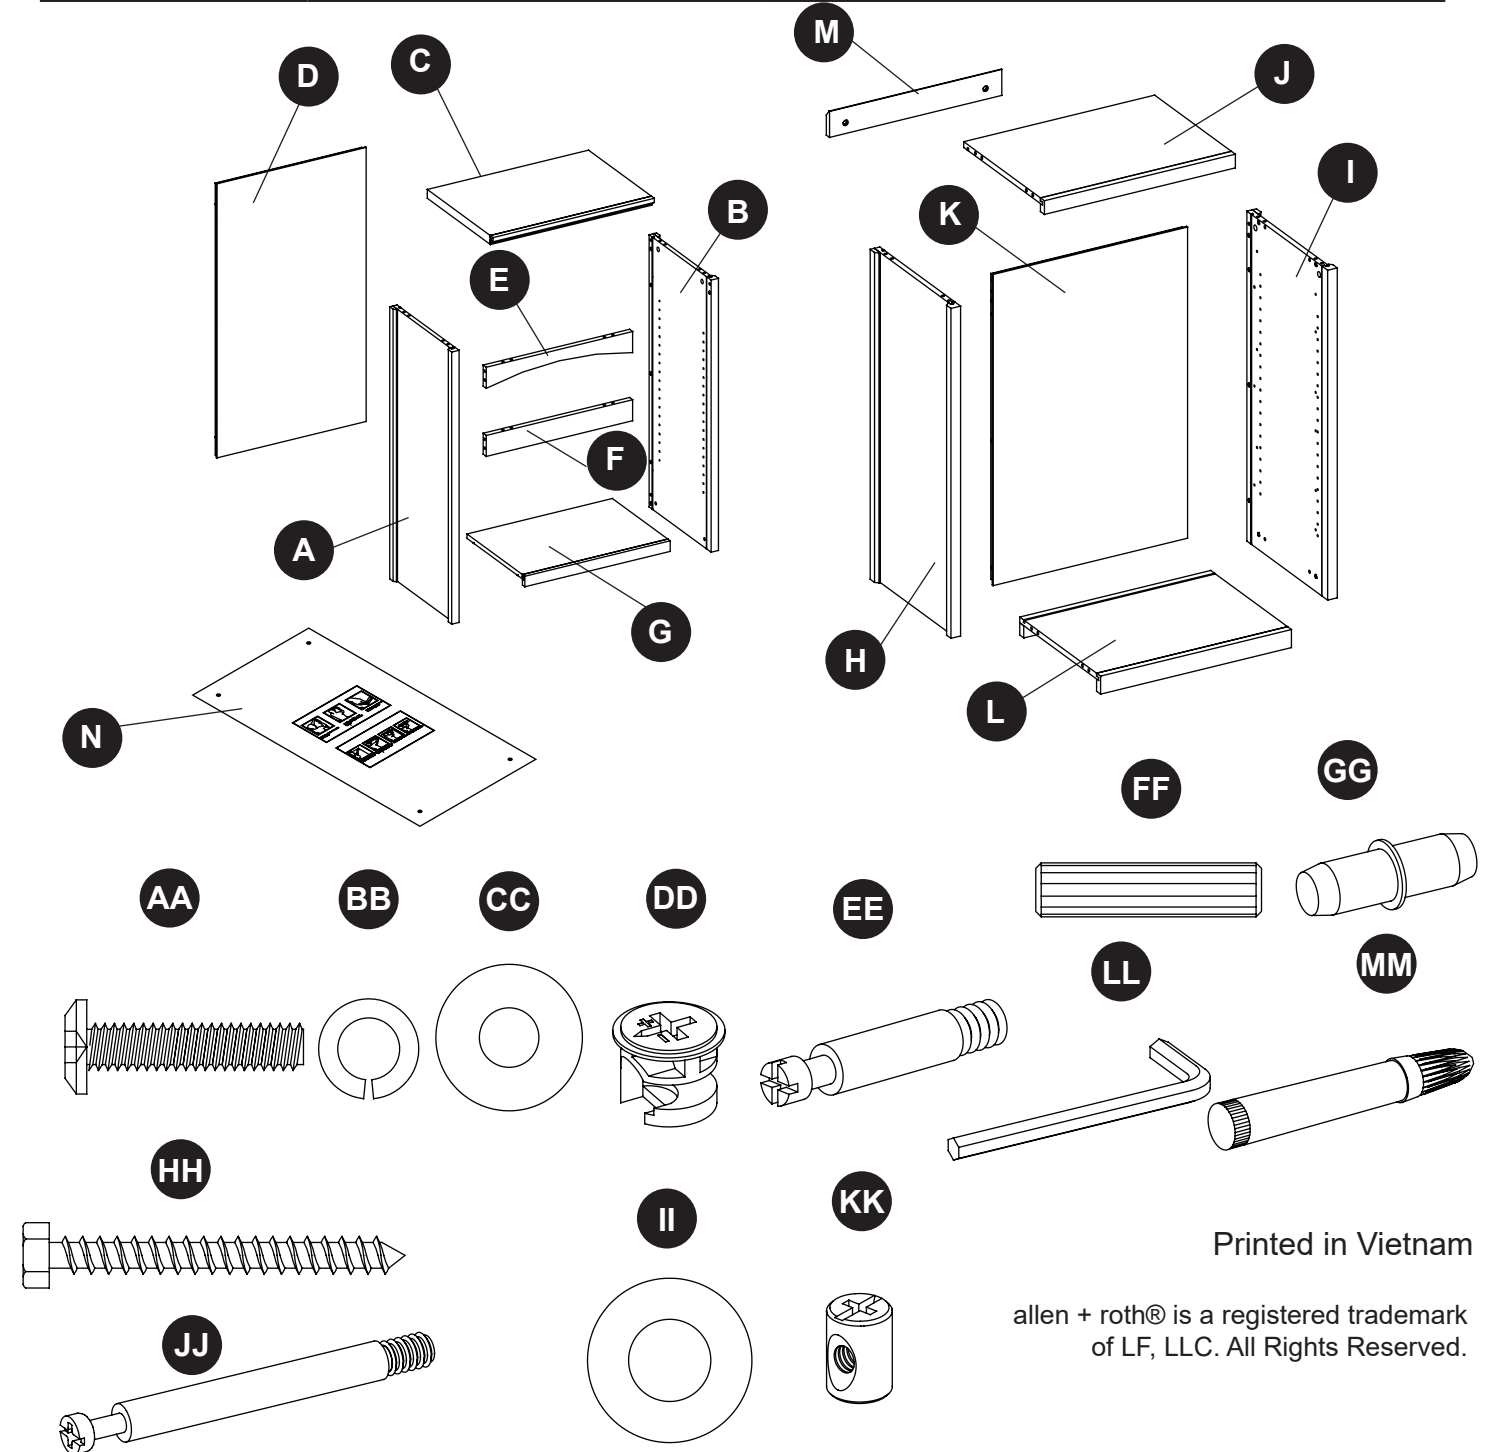 

Printed in Vietnam

allen + roth® is a registered trademark of LF, LLC. All Rights Reserved.