WHALEN®

LOT NUMBER:_____
DATE PURCHASED:__/__/____

Audio Video Tower

Stock # AVT-22E

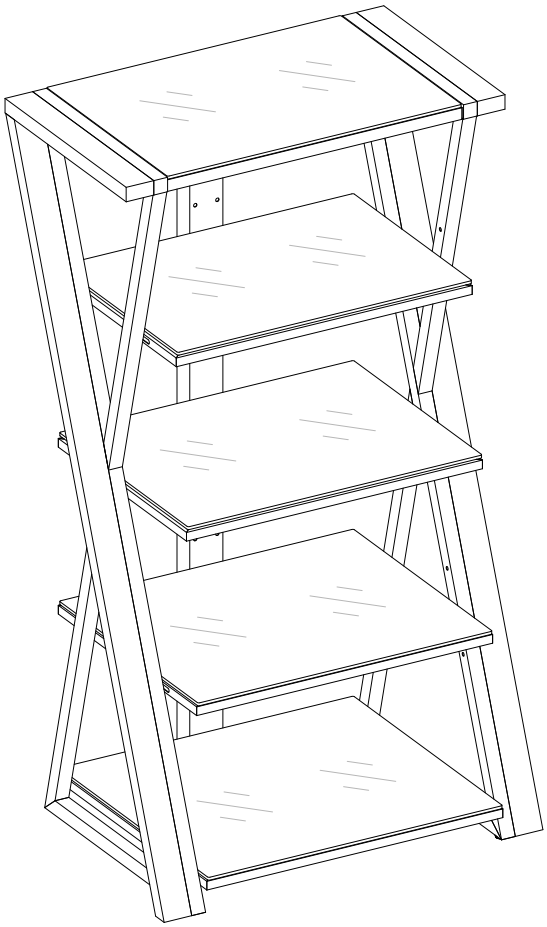

ADULT ASSEMBLY REQUIRED

If you have any questions regarding assembly or if parts are missing, DO NOT return this item to the store where it was purchased. Please call our customer service number and have your instructions and parts list ready to provide the model name, part name or factory number:

866-942-5362

Pacific Standard Time: 8:30 a.m. - 4:30 p.m., Monday - Friday
Or visit our web site 24 hours a day, 7 days a week for product assistance at
www.whalenstyle.com
Or e-mail your request to **parts@whalenfurniture.com**

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Date 2020-07-27 Rev. 0001-A

MAXIMUM RECOMMENDED WEIGHT LOADS

MANUFACTURER: Whalen Furniture Manufacturing
CATALOG: Audio Video Tower
MODEL # AVT-22E
MADE BY NA2

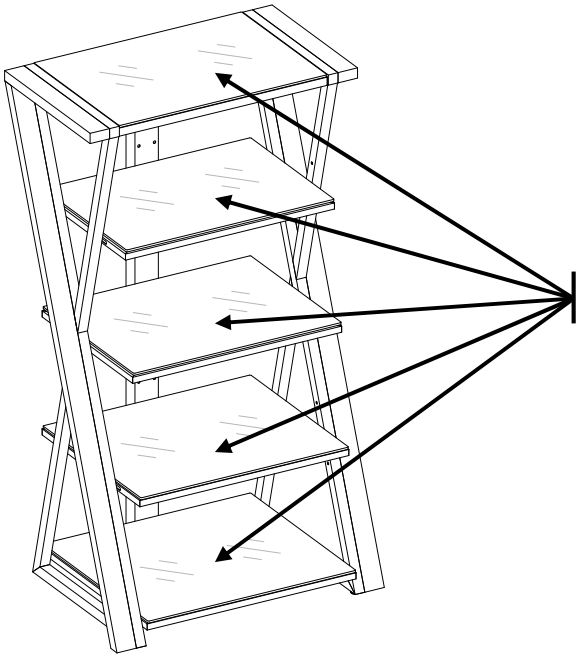

MAXIMUM LOAD 50 lb. (22.7 kg)

WARNING THIS UNIT IS INTENDED FOR USE ONLY WITH THE MAXIMUM WEIGHTS INDICATED. USE WITH LOAD HEAVIER THAN THE MAXIMUM WEIGHTS INDICATED MAY RESULT IN INSTABILITY, CAUSING POSSIBLE INJURY.

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

Parts and Hardware List

Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

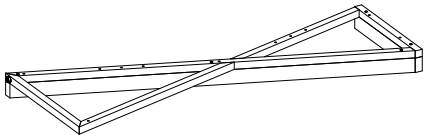

A- Left Side Frame (Qty. 1)

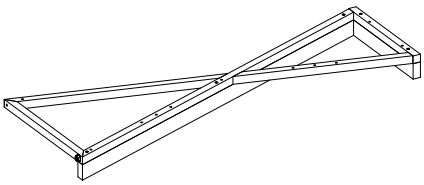

B- Right Side Frame (Qty. 1)

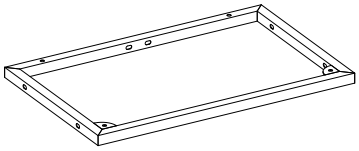

C- Top Shelf Frame (Qty. 1)

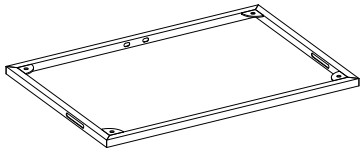

D- Middle Upper Shelf Frame (Qty. 1)

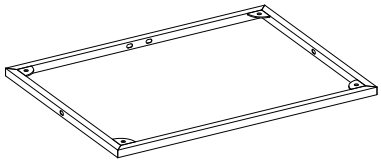

E- Middle Shelf Frame (Qty. 1)

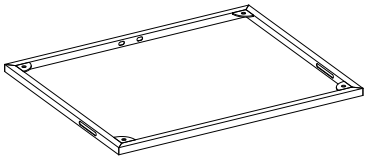

F- Middle Lower Shelf Frame (Qty. 1)

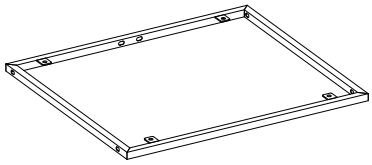

G- Bottom Shelf Frame (Qty. 1)

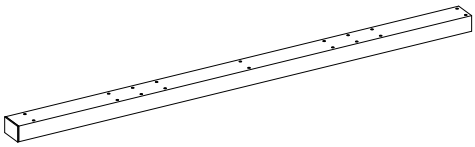

H- Spine (Qty. 1)

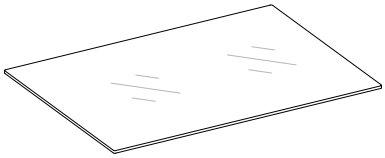

I- Top Glass (Qty. 1)

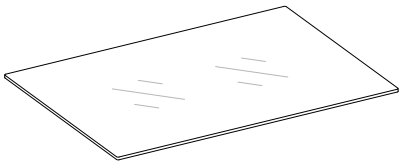

J- Middle Upper Glass Shelf (Qty. 1)

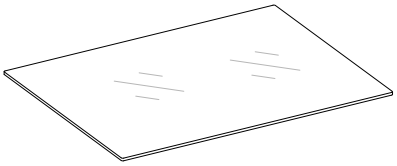

K- Middle Glass Shelf (Qty. 1)

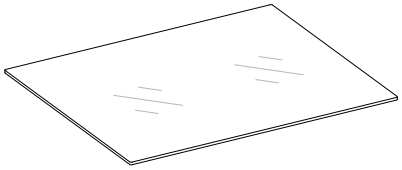

L- Middle Lower Glass Shelf (Qty. 1)

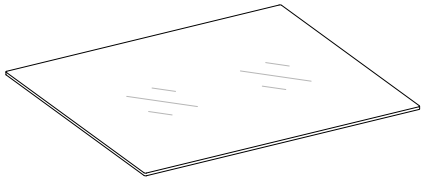

M- Bottom Glass Shelf (Qty. 1)

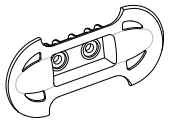

N- Cable Wheel (Qty. 2)

(1) Suction Cup (Qty. 20+1 extra)

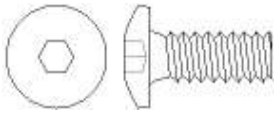

(2) 5/8” Bolt (Qty. 4+1 extra)

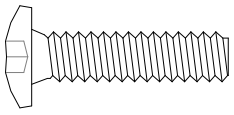

(3) 1” Bolt (Qty. 18+1 extra)

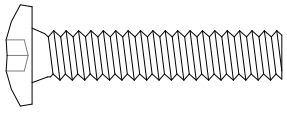

(4) 1-1/4” Bolt (Qty. 6+1 extra)

(5) Lock Washer (Qty. 6+1 extra)

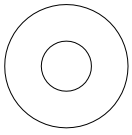

(6) Flat Washer (Qty. 6+1 extra)

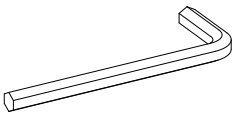

Hex Wrench (Qty. 2)

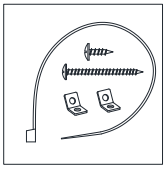

Tipping Restraint Hardware Kit (Qty. 1) (Inside Plastic Bag)

Tools required (not included): Phillips screwdriver, stud finder, pencil, tape measure, power drill and 1/8 in drill bit.

Assembly Instructions

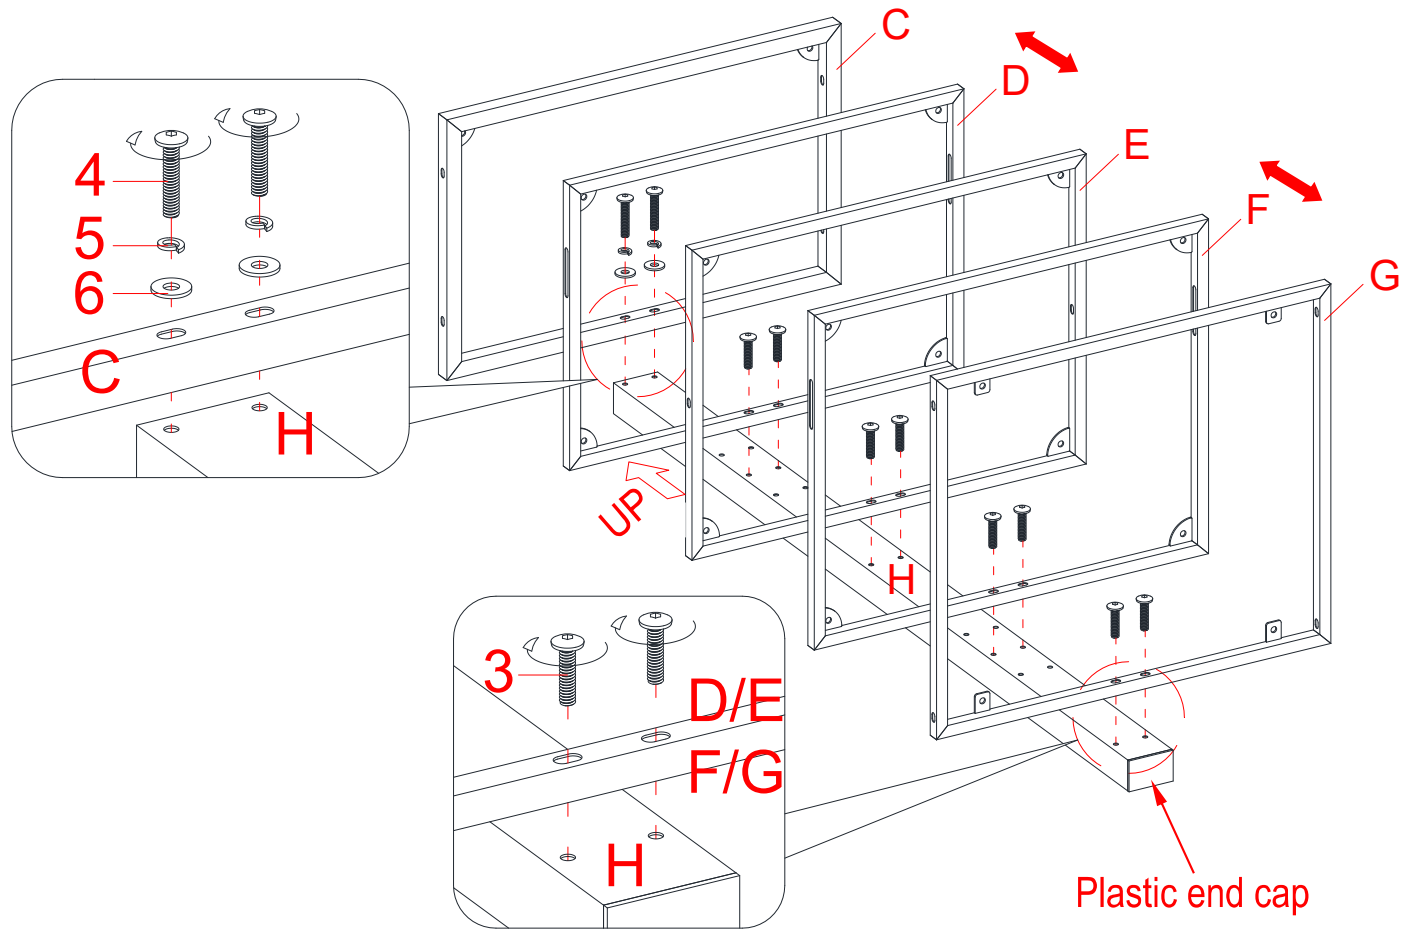

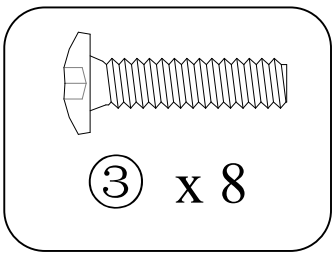

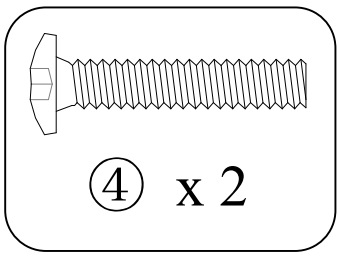

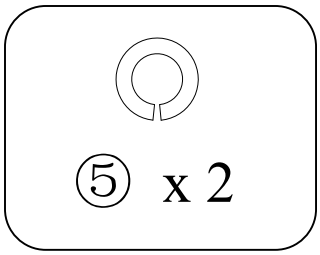

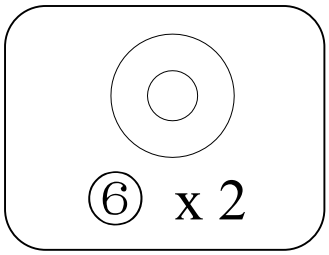

NOTE: Please do not fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

1. Unpack the unit and confirm that you have all the hardware and required parts.
2. Locate the Spine (H) on a scratch free surface with the adjustable holes facing up as shown.
3. Align and attach the Shelf Frames (C, D, E, F and G) to the Spine (H) respectively as shown above. Make sure that the inside corner plates on the Shelf Frames will face up when the unit is turned upright.

NOTE: The Middle Upper and Middle Lower Shelf Frames (D and F) are adjustable. Choose the upper hole sets to increase the bottom space.

Assembly Instructions

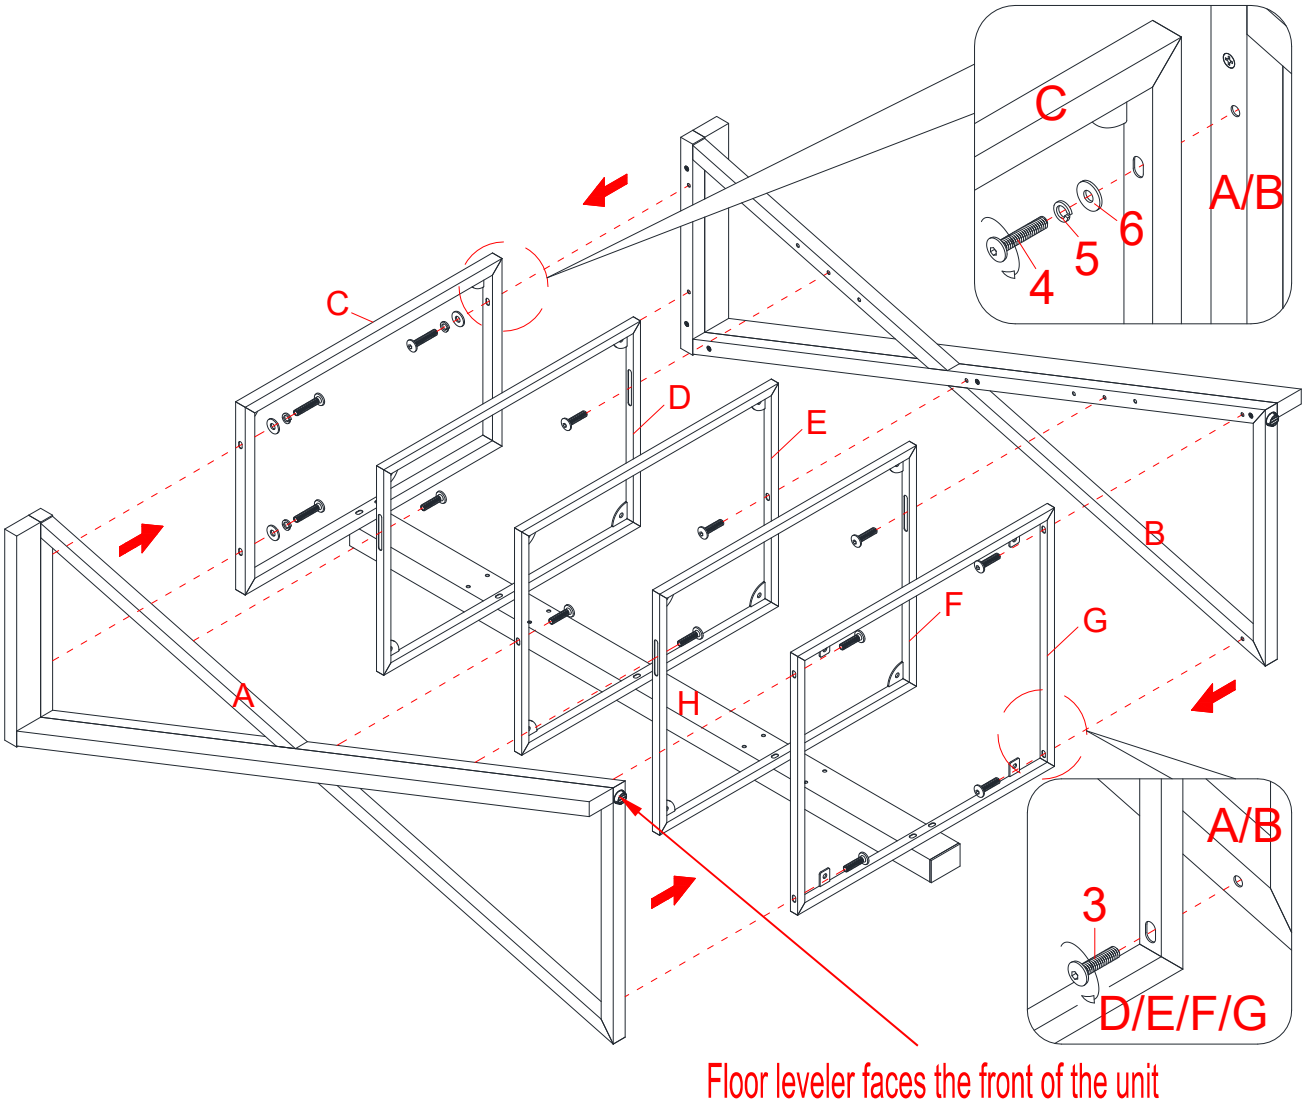

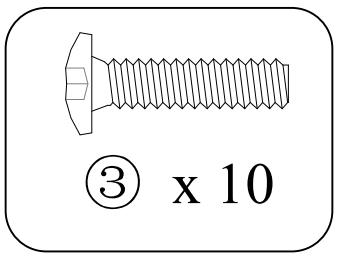

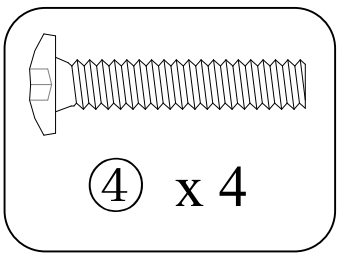

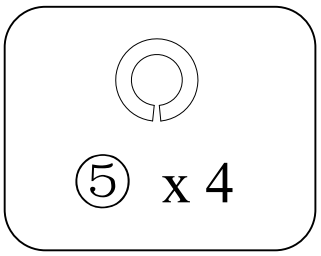

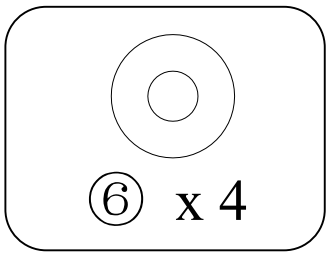

4. Align and attach the Left Side Frame (A) to the Shelf Frames (C, D, E, F and G) as shown above. **DO NOT** tighten the bolts.
5. Repeat the same procedure to attach the Right Side Frame (B) at the opposite end.

Assembly Instructions

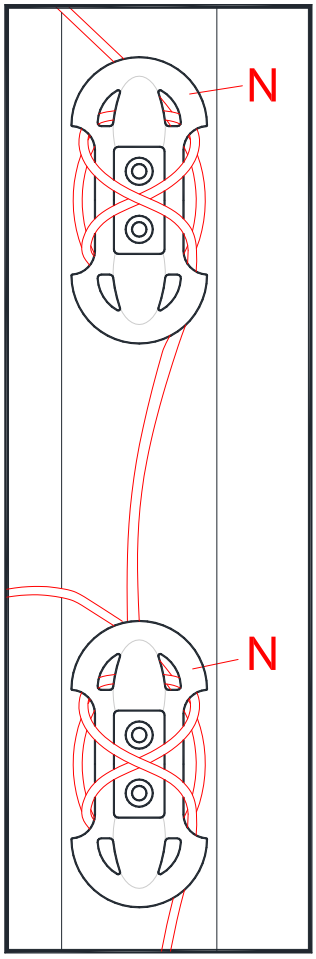

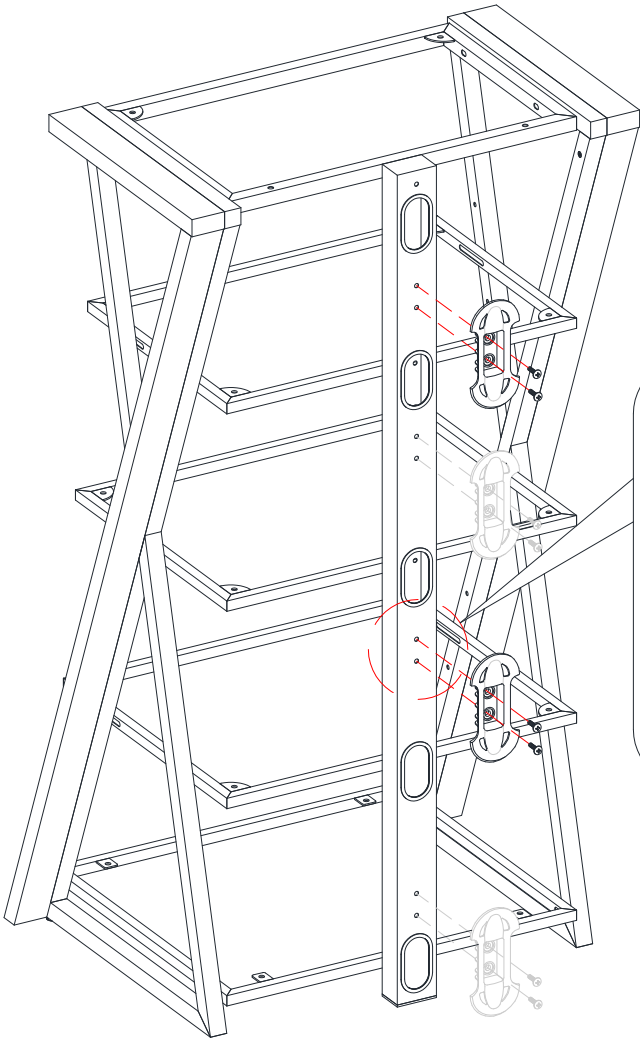

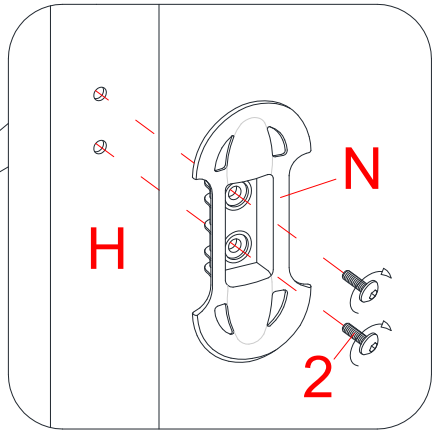

Back view

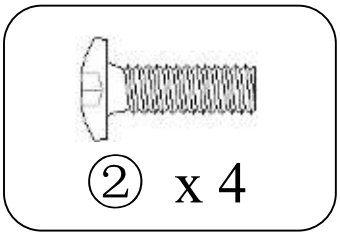

6. Go back and tighten all the bolts. Ask for assistance to stand the unit upright.

7. Attach 2 Cable Wheels (N) to the backside of the Spine (H) and tighten with the enclosed hex wrench.

8. The Cable Wheels allow you to organize, route and separate your component cords and cables to minimize tangling and signal interference.

Assembly Instructions

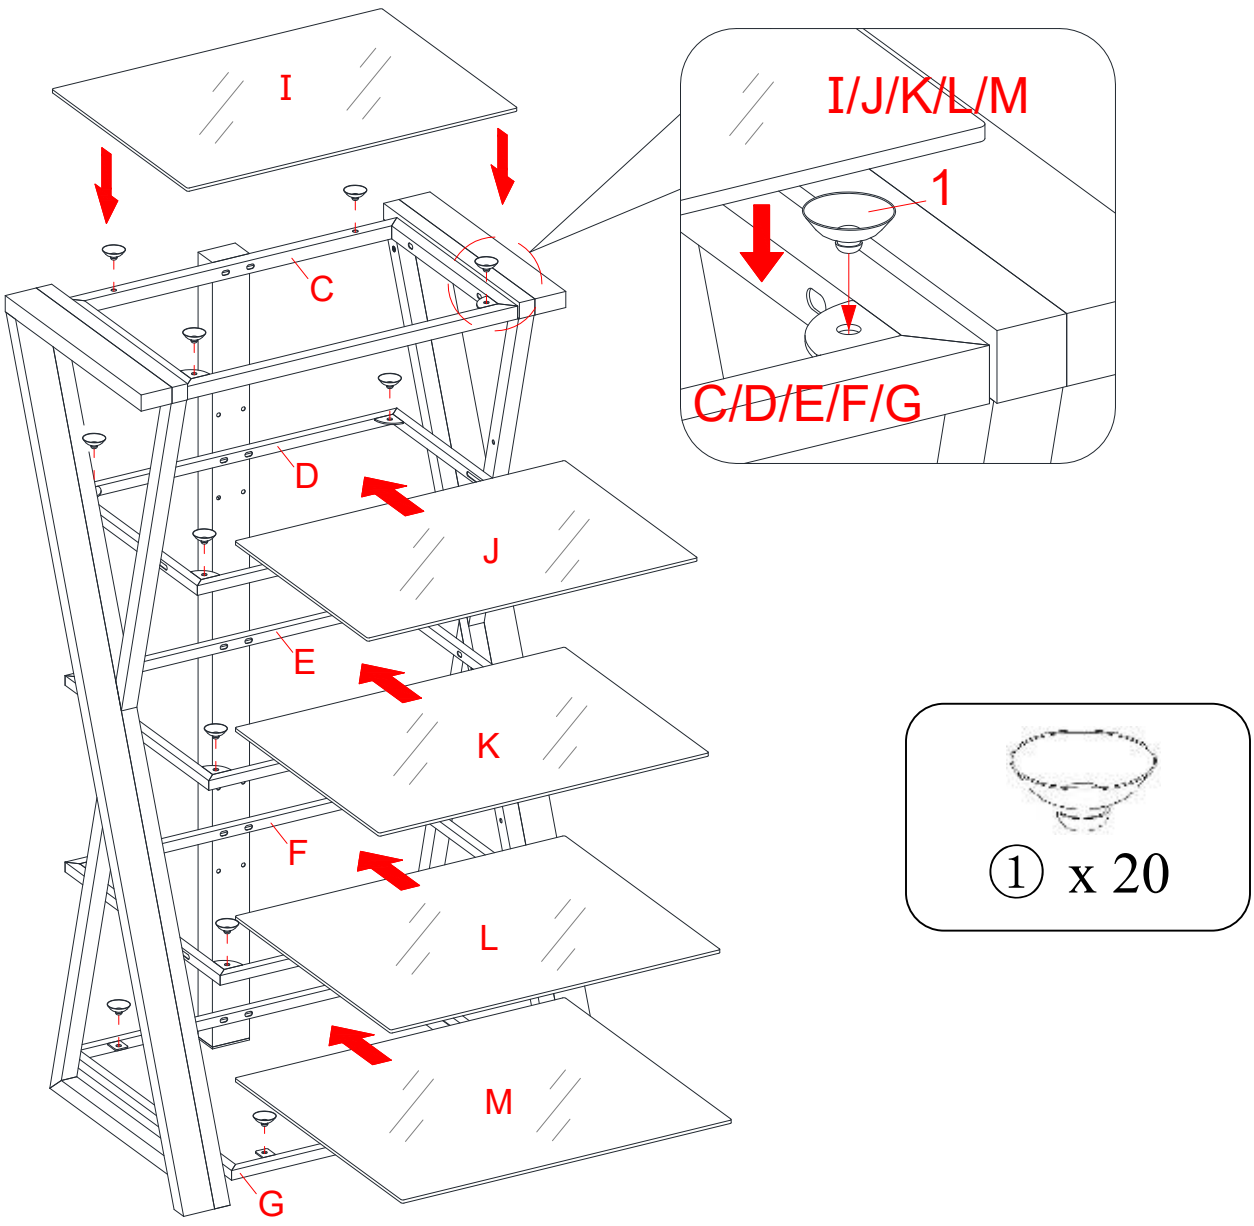

9. Put the Suction Cups (1) firmly into the top holes and the inside corner plates on the Shelf Frames (C, D, E, F and G).

   TIP: If a suction cup resists insertion, try pressing down on the middle of the cup with the hex wrench while twisting it clockwise into the hole.

10. Place the Glass Shelves (I, J, K, L and M) in place starting with the Bottom Glass Shelf (M). Make sure that the glass shelf is properly centered and the black side of glass shelf is down. Push each glass shelf all the way back against the Spine.

    NOTE: If a glass shelf is scratched, you can minimize the damage by using a BLACK marker and filling in scratched area from underneath.

Assembly Instructions

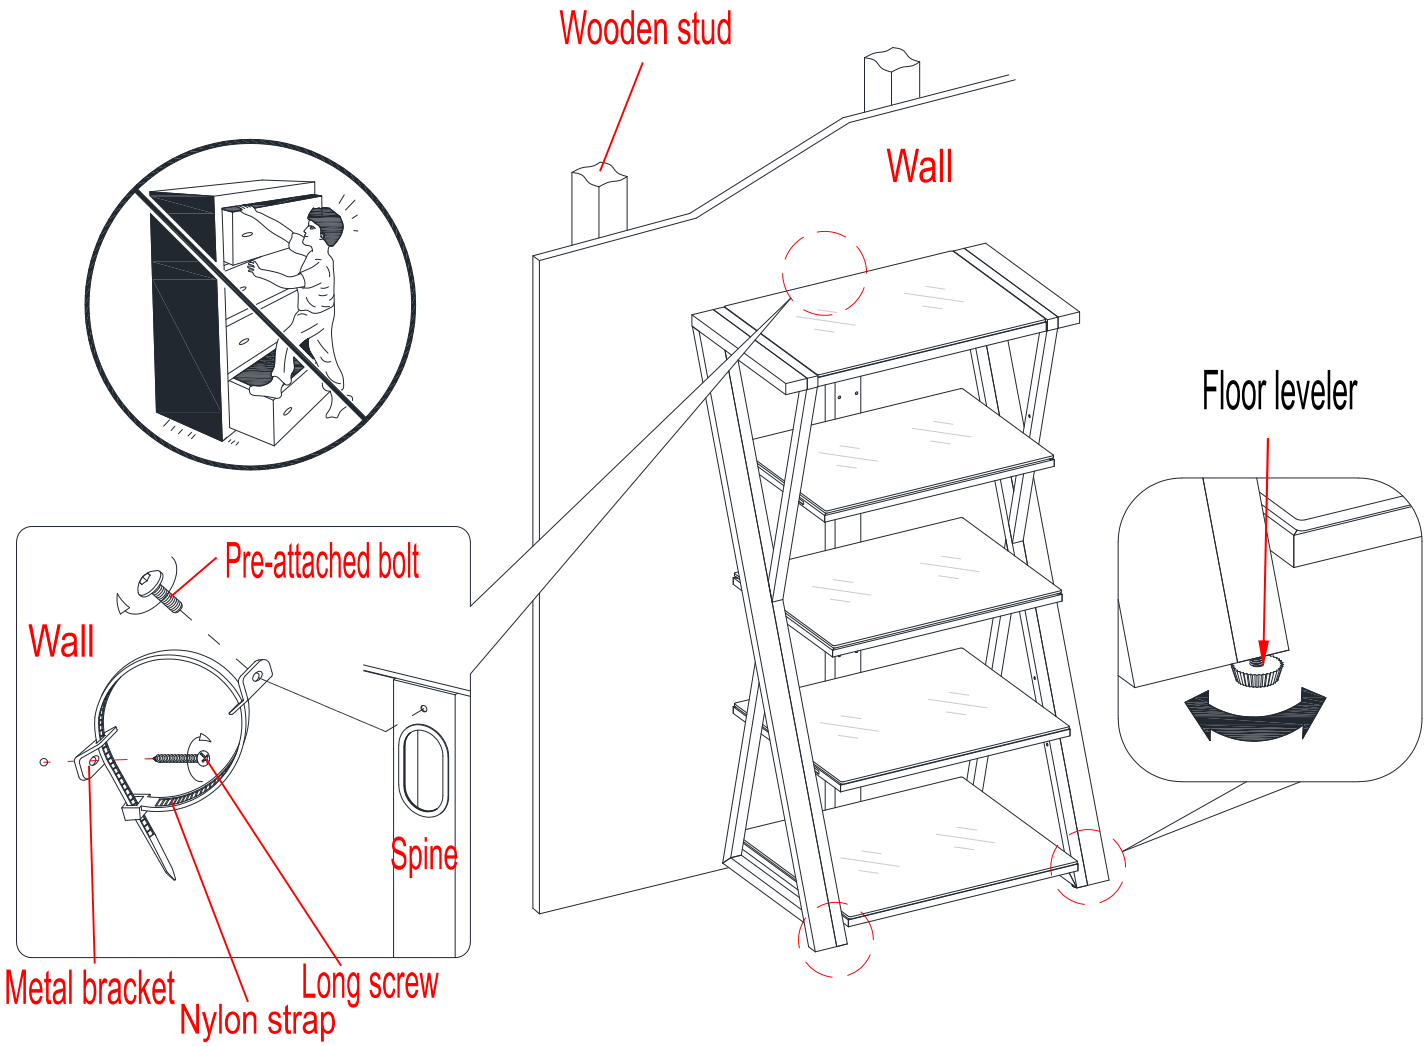

Tools required (not provided): Phillips screwdriver, stud finder, tape measure, pencil, power drill and 1/8'' drill bit.

11. Position the assembled tower at the desired location against a wall. If necessary, adjust the pre-attached Floor Levelers on the bottom front of the Side Frames (A and B) to level the unit.

12. Now, follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware to attach the tip-over restraint to the Spine (H) and the wall.

NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction, different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the Tipping Restraint Hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

Care and Maintenance

- For everyday cleaning, chrome, brass, aluminum, and painted metal surfaces can be kept looking their best by wiping with a slightly damp, soft cotton cloth, or vacuum cleaner brush.
- If soiled, wipe with clean sponge or cloth wrung out of water. Wipe dry with cloth or paper towel to avoid water spots.
- Do not use any harsh abrasives or chemicals to clean any metal surfaces as it may damage the protective coating.
- Metal will rust if the finish is scratched or if your furniture is exposed to excessive humidity, particularly in salt water locations.
- Most metal furniture has a protective coating to prevent rust, however rust may occur if the finish is marred or wears away over time.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

Further Advice about Metal Furniture Care

It is best to keep your furniture in a climate-controlled environment. Continual exposure to damp and wet environments can cause corrosion. It is advised to keep furniture away from direct sunlight as it may damage the finish. Indoor furniture is not recommended for outdoor use.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

We hope you enjoy your purchase for many years.
Thank you for your purchase!

QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

Whalen Furniture Manufacturing
1578 Air Wing Road
San Diego CA, 92154, USA
Customer Service: 86-942-5362
8:30 a.m. - 4:30 p.m., PST, Monday to Friday
www.whalenstyle.com

WHALEN®

NÚMERO DEL LOTE:_____
FECHA DE COMPRA___/__/__

Torre de Audio / Video

Serie # AVT-22E

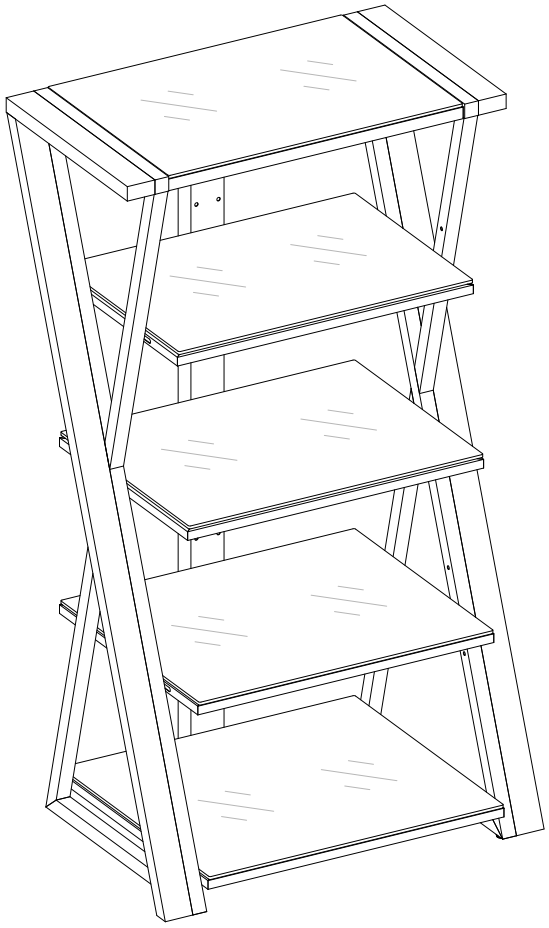

ENSAMBLE REQUERIDO POR ADULTOS

Si tiene alguna pregunta relacionada con el montaje o si faltan piezas, NO devuelva este producto al establecimiento donde lo adquirió. Por favor llame a nuestro número de servicio al cliente y tienen sus instrucciones y lista de piezas listo para proporcionar el nombre del modelo, el nombre o el número de parte de la fábrica:

866-942-5362

Hora Estándar del Pacífico: 8:30 am - 4:30 pm, de Lunes - Viernes

O visite nuestro sitio web las 24 horas del día, 7 días a la semana para recibir asistencia del producto en **www.whalenstyle.com**

O por correo electrónico su petición a **parts@whalenfurniture.com**

ESTE INSTRUCTIVO CONTIENE INFORMACIÓN **IMPORTANTE** DE SEGURIDAD.
POR FAVOR LEA Y MANTENGA PARA USO FUTURO.

Fecha: 2020-07-27 Rev. 0001-A

PESOS MÁXIMOS RECOMENDADOS

FABRICANTE: Whalen Furniture Manufacturing
CATALOGO: Torre de Audio / Video
MODELO # AVT-22E
HECHO POR NA2

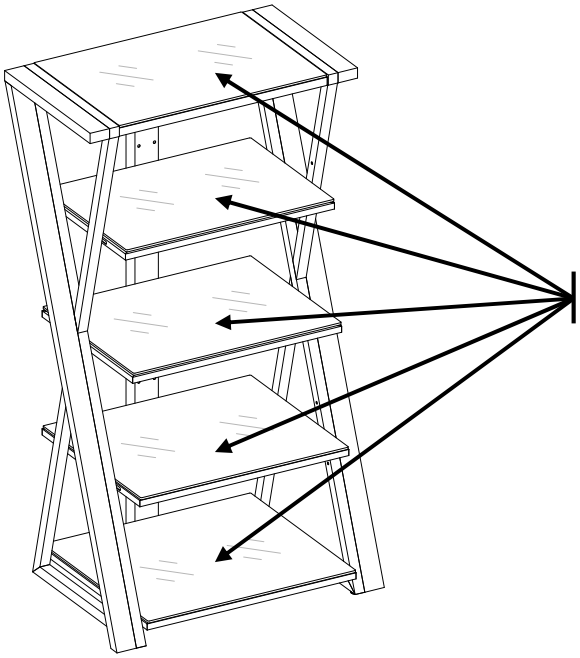

MÁXIMA CARGA 50 lb. (22.7 kg)

⚠ ADVERTENCIA ESTA UNIDAD NO DEBE UTILIZARSE CON CARGAS O PESOS MAYORES A LOS INDICADOS. USAR CON CARGAS O PESOS MAYORES DE LOS INDICADOS PUEDE RESULTAR EN INESTABILIDAD, DAÑOS O LESIONES.

⚠ ADVERTENCIA

- **Los niños han muerto por el vuelco de los muebles. Para reducir el peligro de el mueble se vuelca:**
- SIEMPRE instale la restricción para vuelco proporcionada
- NUNCA ponga un televisor en este producto.
- NUNCA permita que los niños se paren, se suban o se cuelguen de los cajones, puertas o repisas.
- NUNCA abra más de un cajón a la vez.
- Coloque los artículos más pesados en los cajones inferiores.

El uso de restricciones de inclinación solo reduce, pero no elimina, el riesgo de volcadura.

Lista de Partes y Artículos de Ferretería

Por favor lea completamente las instrucciones y verifique que estén todas las partes y artículos de ferretería antes de iniciar el ensamble.

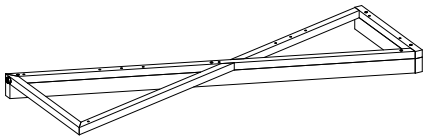

A- Marco izquierdo (Cant. 1)

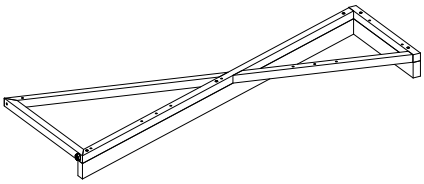

B- Marco derecho (Cant. 1)

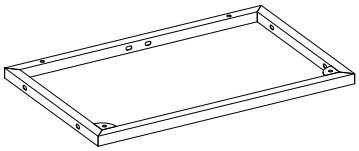

C- Repisa superior (Cant.1)

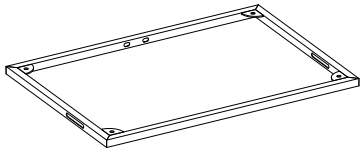

D- Repisa intermedia superior (Cant. 1)

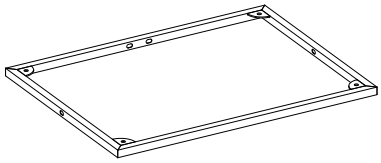

E- Repisa intermedia (Cant. 1)

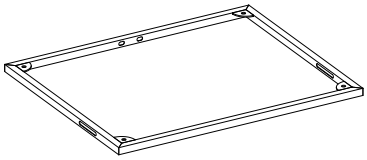

F- Repisa intermedia inferior (Cant. 1)

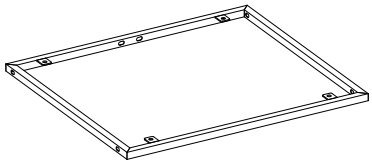

G- Repisa inferior (Cant. 1)

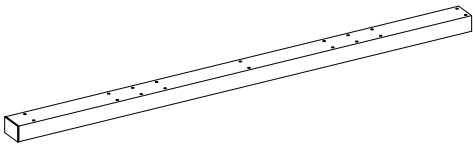

H- Poste (Cant. 1)

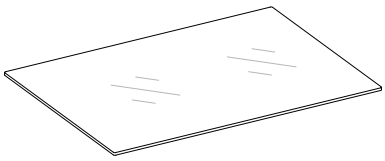

I- Vidrio superior (Cant. 1)

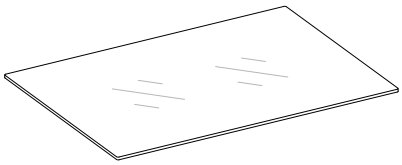

J- Vidrio intermedio superior (Cant. 1)

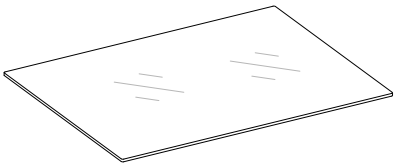

K- Vidrio intermedio (Cant. 1)

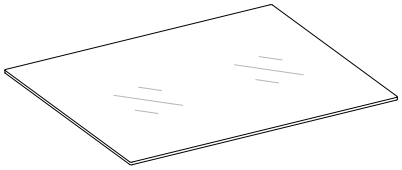

L- Vidrio intermedio inferior (Cant. 1)

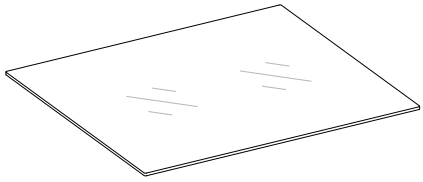

M- Vidrio inferior (Cant. 1)

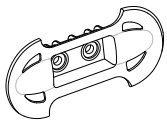

N- Guía para cable (Cant. 2)

(1) Ventosa (Cant. 20+1 extra)

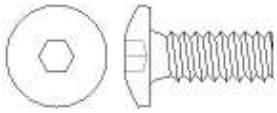

(2) Perno de 5/8”
(Cant. 4+1 extra)

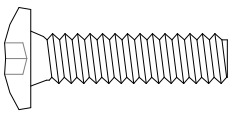

(3) Perno de 1”
(Cant. 18+1 extra)

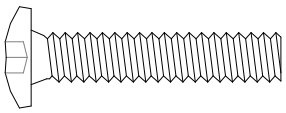

(4) Perno de 1-1/4”
(Cant. 6+1 extra)

(5) Arandela de presión
(Cant. 6+1 extra)

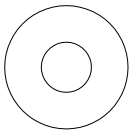

(6) Arandela plana
(Cant. 6+1 extra)

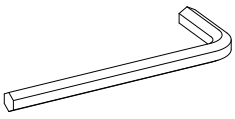

Llave hexagonal
(Cant. 2)

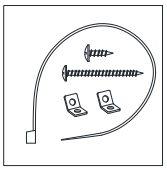

Juego de restricción de movimiento (Cant. 1)
(Dentro bolsa de plástico)

Herramientas requeridas (no incluidas): Desarmador estrella, localizador de barrotes, cinta métrica, lápiz, taladro y broca de 1/8”.

Instrucciones de ensamble

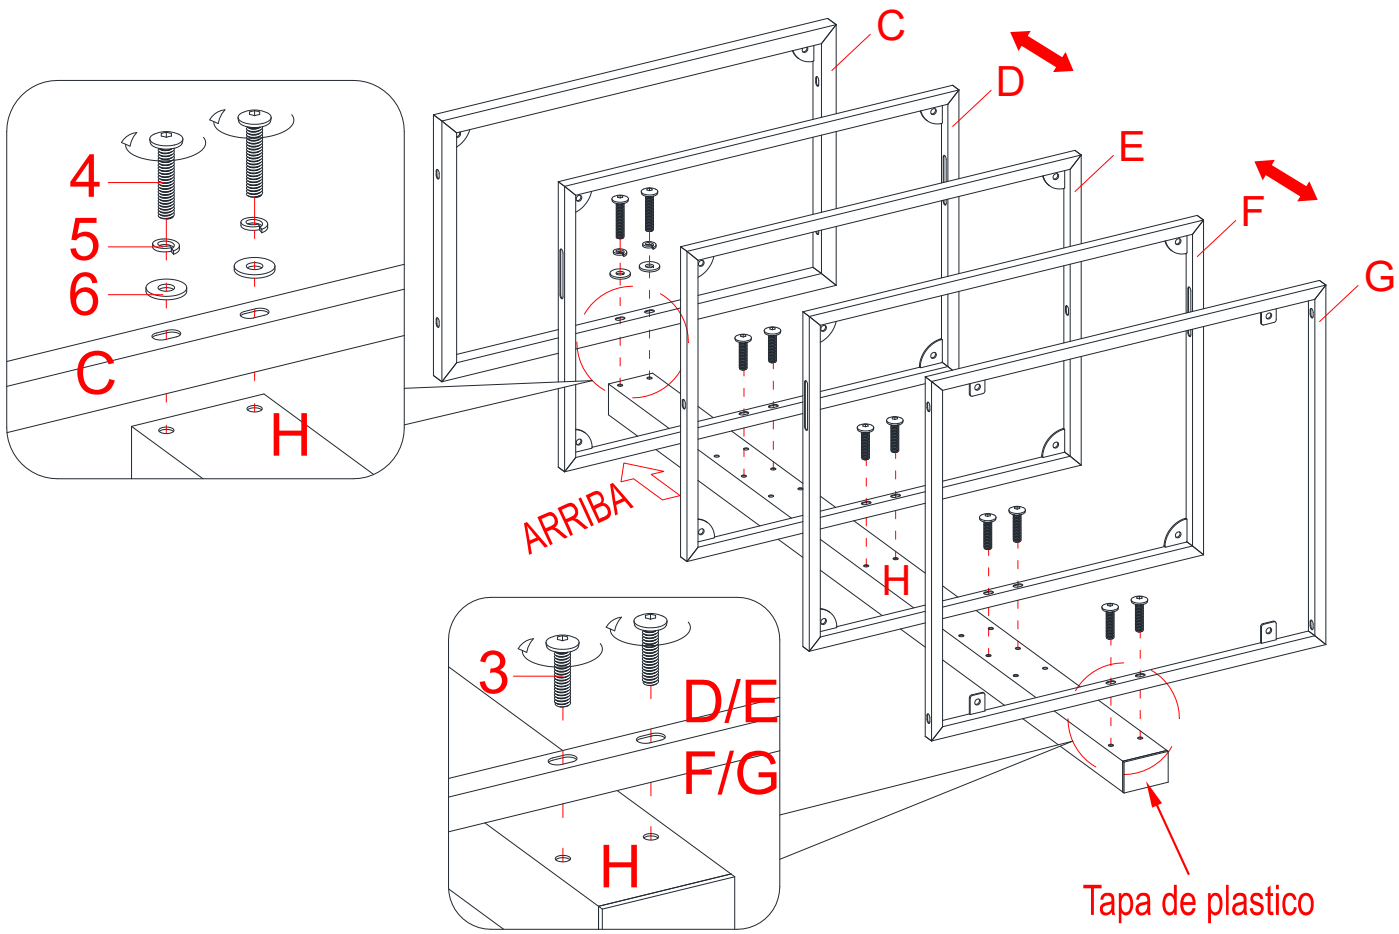

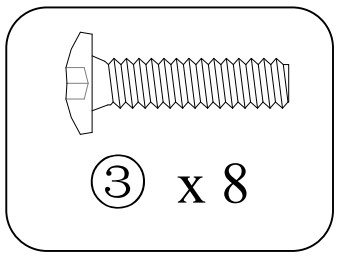

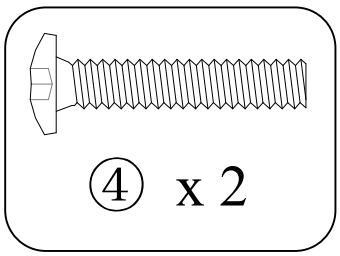

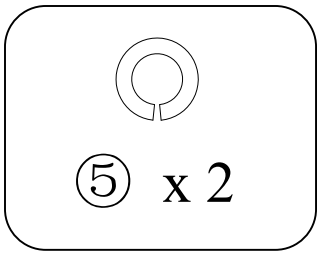

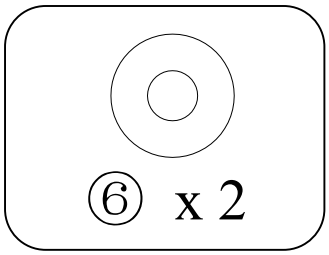

NOTA: Por favor no apriete completamente todos los pernos, hasta que termine con el ensamble de las partes, después asegure completamente todos los pernos, ésto lo hará más fácil durante el ensamble.

1. Desempacar la unidad y confirmar que se tiene todo el herraje y partes requeridas.
2. Localice el poste (H) y coloque en una área libre y limpia para que no se raye, cerciórese que los 2 agujeros apunten hacia arriba, como se muestra.
3. Alinear y fijar las repisas (C, D, E, F y G) al poste (H) como se muestra. Cerciorarse que los soportes internos de las repisas apuntan hacia arriba despues del ensamble.

   NOTA: la repisa intermedia superior y la repisa intermedia inferior (D y F) son ajustable. Escoja agujeros superiores si desea incrementar el espacio inferior.

Instrucciones de ensamble

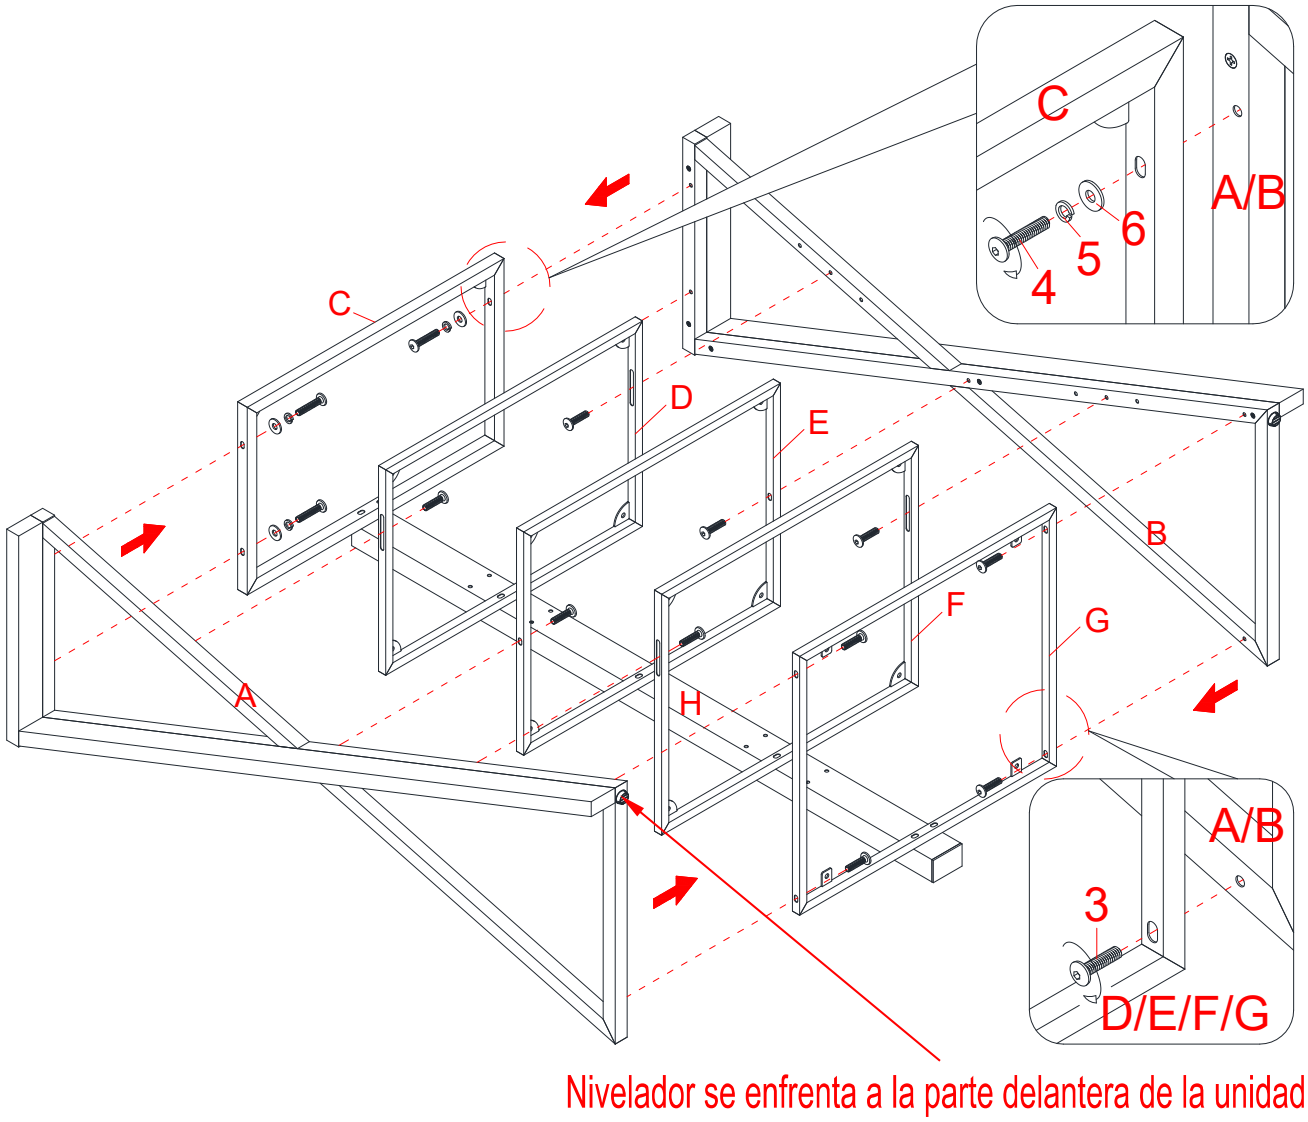

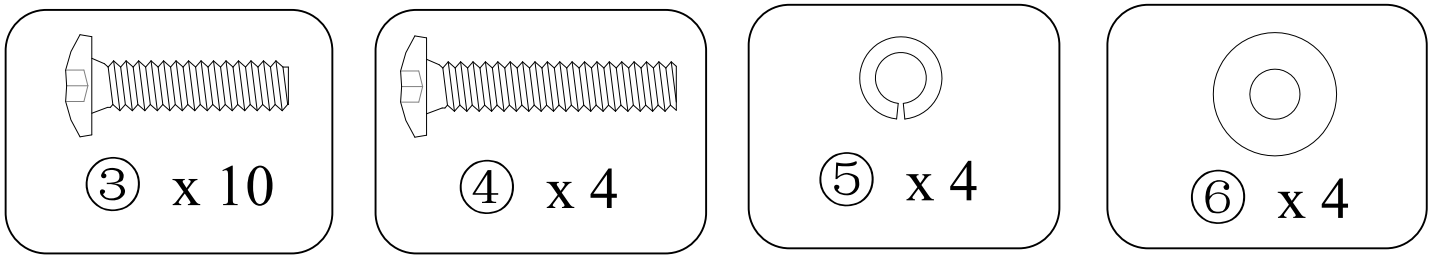

4. Alinear y adjuntar el marco de la izquierda (A) a las repisas (C, D, E, F y G) como se muestra. **No** apretar los pernos.

5. Repita el mismo procedimiento para colocar el marco de la derecha (B) en el extremo opuesto.

Instrucciones de ensamble

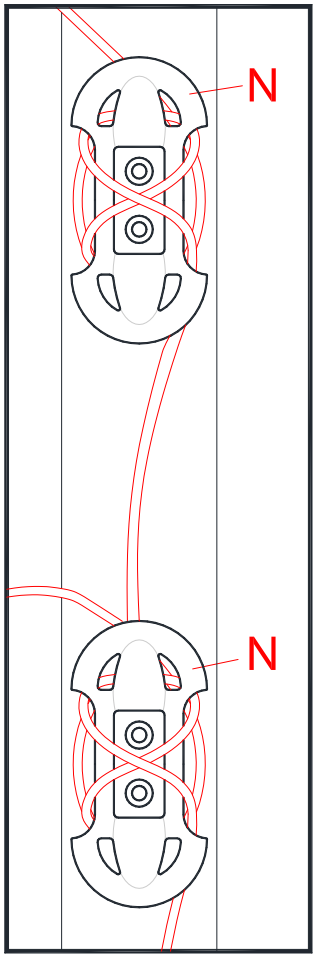

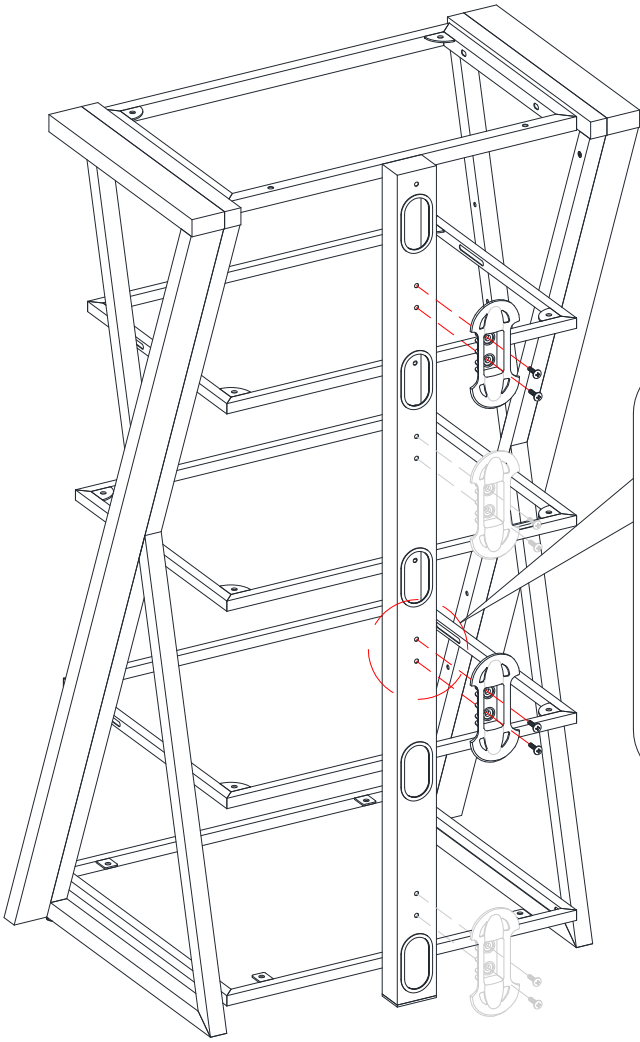

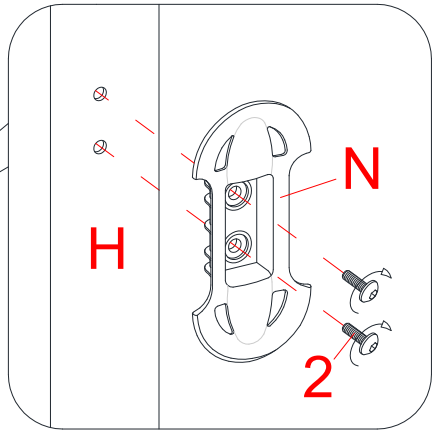

Vista posterior

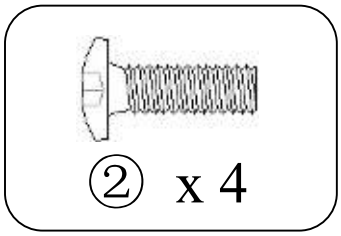

6. Vuelva y apriete todos los pernos. Pida ayuda a soportar la unidad en posición vertical.

7. Fijar 2 guías para cable (N) a la parte posterior del poste (H) y apretar con la Llave hexagonal proveida.

8. Usted puede usar controles de cables para ayudar a mantener los cables de su centro de entretenimiento y cables organizados.

Instrucciones de ensamble

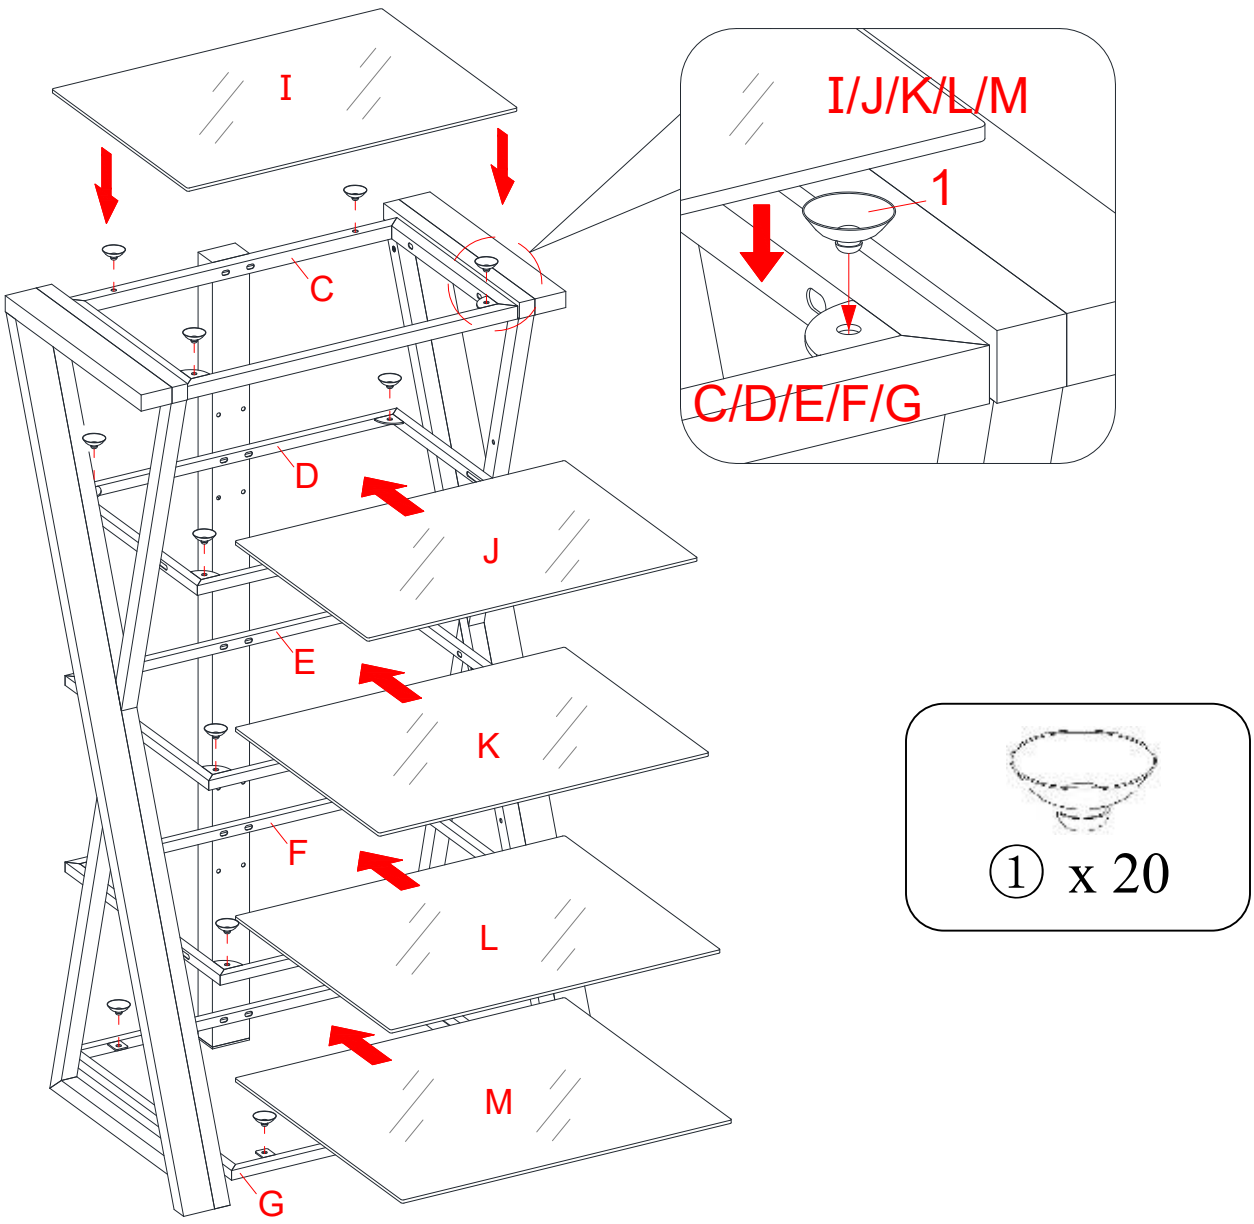

9. Ponga ventosas (1) firmemente en las lengüetas de metal y dentro de las placas de esquina en las repisas (C, D, E, F y G).

   CONSEJO: Si una ventosa se resiste a la inserción, trate de presionar en el centro de la copa con la llave hexagonal mientras gira hacia la derecha en el agujero.

10. Coloque los vidrios (I, J, K, L y M) en el lugar, partiendo por el vidrio inferior (M). Asegúrese de que el vidrio está bien centrado y el lado negro del vidrio queda hacia abajo. Empuje cada vidrio hasta el fondo en contra del poste.

    NOTA: Si el vidrio está rayado se puede minimizar el daño mediante el uso de un marcador NEGRO para el relleno en el área rayada por debajo.

Instrucciones de ensamble

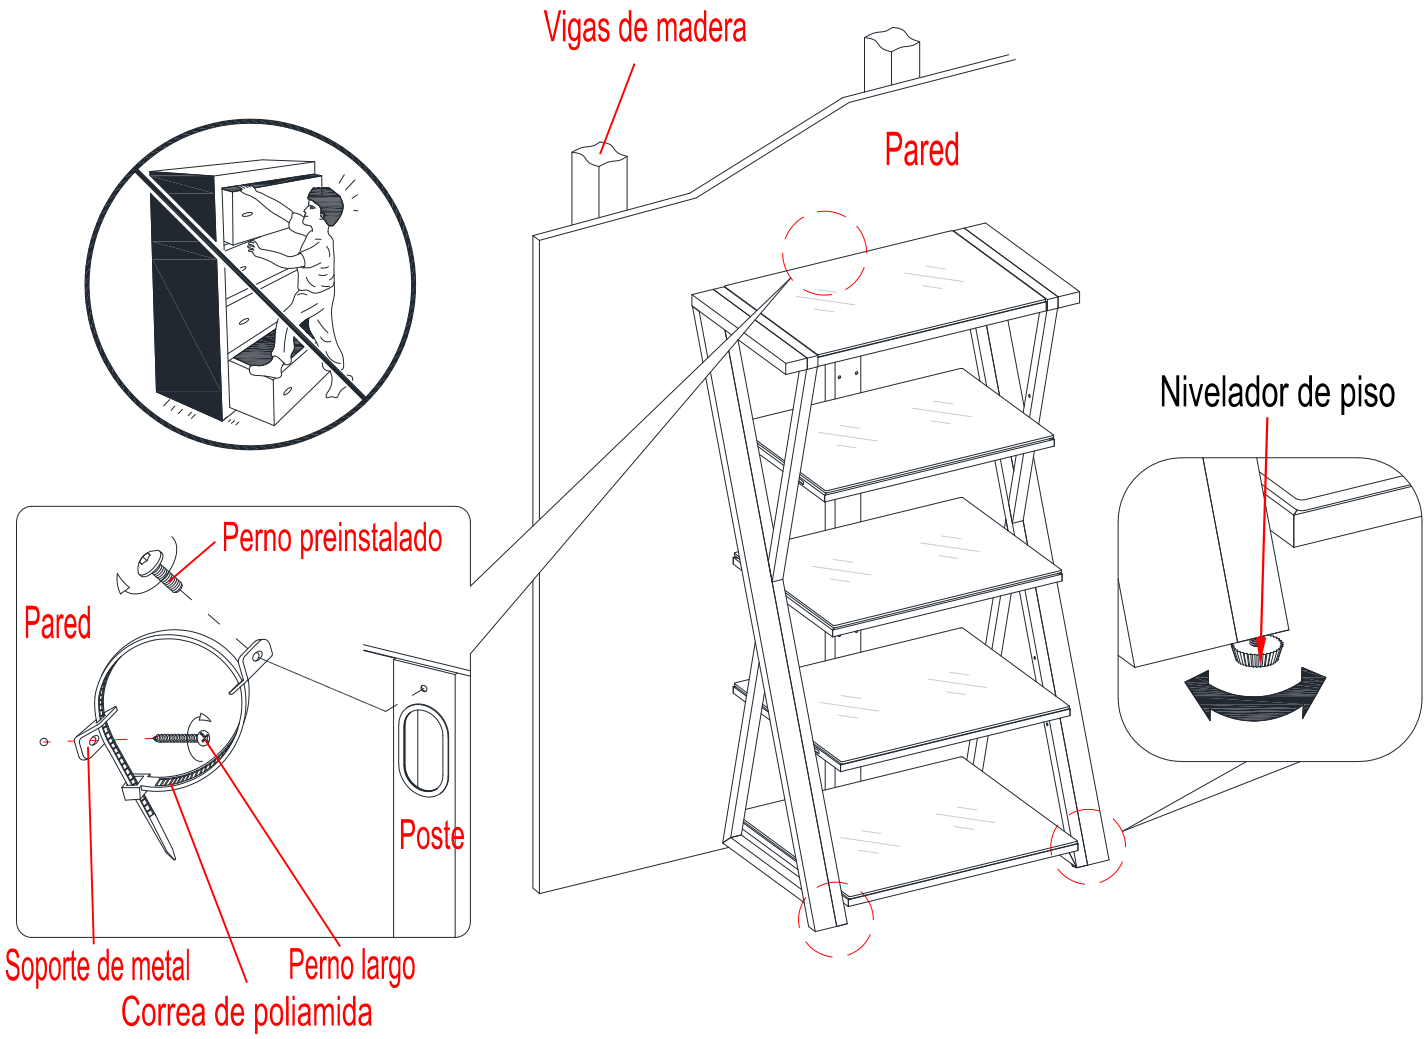

Herramientas requeridas (no incluidas): Desarmador estrella, localizador de barrotes, cinta métrica, lápiz, taladro y broca de 1/8".

11. Coloque la torre montada en la ubicación deseada contra una pared. Si es necesario, ajuste los niveladores de piso preinstalados en la parte inferior de las patas (A y B) para nivelar la unidad.

12. A continuación, siga las instrucciones impresas en la bolsa de plástico que contiene el herraje para restricción de movimiento para fijar al poste (H) y la pared.

NOTA: El juego de restricción de movimiento incluido es para una pared de tacos de madera. Necesita ser adjuntado a un taco de madera. Dependiendo de la para, diferentes anclas pueden ser requeridas. Por favor contacte su tienda de ferretería local para asistencia. Niños pequeños pueden resultar lastimados por muebles inclinados. Debe instalar el juego de restricción de movimiento con la unidad en función, para prevenir la inclinación de la unidad, causando cualquier accidente o daño. El tope de movimiento es solo un impedimento, no hay substituto para la supervisión adulta. El tope de movimiento no es contra terremoto. Si deseara añadir la seguridad extra contra terremotos, deben ser comprados e instalados separadamente.

Mantenimiento y Cuidados

- Para una limpieza diaria, las superficies de cromo, bronce, aluminio y de metal pintado se mantienen mejor limpiándolas con un trapo de algodón suave, levemente humedecido, un sacudidor o con el cepillo de la aspiradora.
- Si hay manchas límpielas con una esponja o un trapo limpio húmedo (exprimido). Seque completamente con un trapo a una toalla de papel para evitar manchas de agua.
- No utilice productos abrasivos o químicos fuertes para limpiar las superficies de metal. Se puede dañar el revestimiento protector.
- El metal se oxida si se raya el acabado o se exponen los muebles a humedad excesiva, en particular, en locaciones de zonas humedas o de la zona costera.
- La mayoría de los muebles de metal vienen con un revestimiento protector para evita el óxido, sin embargo, puede aparecer oxido cuando el acabado se estropea o se desgasta por el tiempo.
- En el caso de que se manchen los muebles o se dañen por el uso, recomendamos que llame a un profesional para que los repare.
- Checar Pernos periodicamente y apretar en caso necesario.

Consejos adicionales para el cuidado de muebles de metal

Mantenga los muebles en un ambiente a temperatura controlada. La exposición continua a ambientes húmedos o goteras puede causar corrosión. Se aconseja mantener los muebles alejados de la luz solar directa ya que puede dañar el acabado. Los muebles diseñados para interiores no se deben usar en exteriores.

Cuidados adecuados y limpieza pueden extender la vida útil de su unidad. Siga estás recomendaciones y mantendra su mueble en buenas condiciones de uso por muchos años.

Esperamos que disfrute su mueble por muchos años.
¡Gracias por su compra!

GARANTIA DE CALIDAD

Nosotros estamos seguros que usted se encontrará feliz con la compra de esté producto de Whalen Furniture.

Si esté producto tiene algun defecto de ensamble o material, o si tiene alguna falla en uso normal, nosotros lo repararemos o lo re-emplazaremos hasta por un año a partir de la fecha de compra. Todo producto de Whalen Furniture es diseñado para alcanzar sus espectativas más altas. Nosotros le garantizamos que inmediatamente podrá ver el valor de nuestra mercancia de la más alta calidad.

Está garantia le proporciona derechos legales especificos y talvez tenga otros derechos que varian de estado a estado**.**

Whalen Furniture Manufacturing
1578 Air Wing Road
San Diego CA, 92154, USA
Servicio al cliente: 866-942-5362
Hora estándar del Pacífico: 8:30 a.m. - 4:30 p.m., de Lunes a Viernes
www.whalenstyle.com