W WHALEN*

VANITY ASSEMBLY INSTRUCTIONS

THANK YOU FOR YOUR PURCHASE!

FOR PARTS REPLACEMENT REQUEST, PLEASE CONTACT US AT 1-866 9425362

OR EMAIL: PARTS@WHALENFURNITURE.COM

READ ALL THE INSTRUCTIONS AND IDENTIFY ALL COMPONENTS AND CHOOSE YOUR CONFIGURATION AND BE SURE YOU HAVE ALL PARTS
TWO PEOPLE ARE NEEDED TO ASSEMBLE

ECBAR60-VW 60" VANITY BARCELONA 6 DRW



ECBAR36-VW36" VANITY BARCELONA 4 DWR



TIPS: SEE ILLUSTRATION BELOW



ECBAR48-VW48" VANITY BARCELONA 9 DRW



ECBAR30-VW 30" VANITY BARCELONA 1 DRW



BARCELONA 30"(1 DRAWERS)

ECBAR30-VW 1 DRS VANITY WHITE ECVAL30-VG 1 DRS VANITY GRAY

BARCELONA 36" (4 DRAWERS)

ECBAR36-VW 4 DRW VANITY WHITE ECVAL36-VG 4 DRW VANITY GRAY

BARCELONA 48" (9 DRAWER)

ECBAR48-VW 9 DRW VANITY WHITE ECVAL48-VG 9 DRW VANITY GRAY

BARCELONA 60" (6 DRAWER)

ECBAR60-VW 6 DRW VANITY WHITE ECVAL60-VG 6 DRW VANITY GRAY


LIST OF CONTENTS **NOT INCLUDED** VANITY A.- VANITY (1) B.-SINK (1) GLUE C.-BACK SPLASH (1) D.-PANEL (4) (C) BACK SPLASH (D) PANEL(4 PCS) (E) GLUE (A) VANITY (1 PCS) (B) SINK (1 PCS)

glue previously placed.

Before beginning:


- 1.- Unpack all parts and hardware to ensure you have all needed components for assembly.
- 2.- Read this guide cover before beginning assembly.
- 3.- Have 2 adults on hand for assembly.
- 4.- Save all packaking until finished.

E.- GLUE (1)

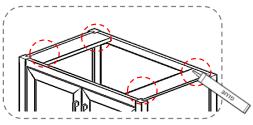

STEP #1

Prepare the glue (E) and place it on the corners of both boards of the vanity (A) as shown in the picture.




STEP #4


-Finally, place glue centered on both sides on top of the sink (B) and flush with the back and immediately place the back splash (C) on top of the glue previously placed. .

(1 PCS)

STEP #2

-Immediately take four panels (D) and place them on top of the

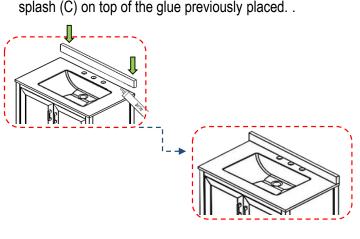

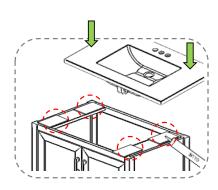

STEP #3

- -Place the glue (E) on top of the four panels.
- -Carefully, place the sink (B) on top of the vanity (A).

(1PCS)